


OWNER'S MANUAL

BAYTECH M SERIES DAC BASE UNIT, V71 HOST MODULE, AND V50/V73/V74/V75/V76/V86/V87 4-PORT SERIAL MODULES

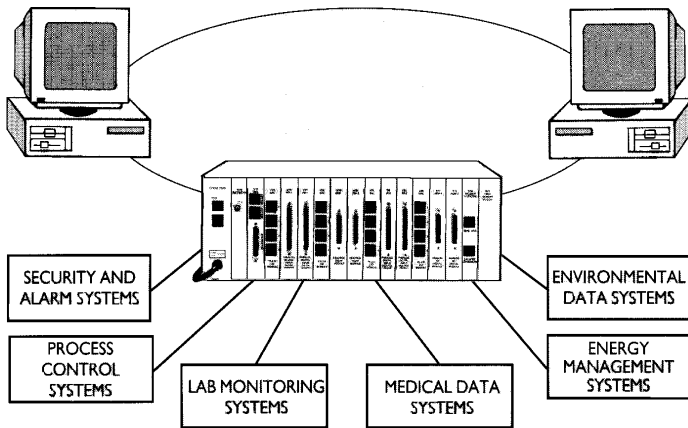

BayTech Manual Publication #U140E111-02

Thank you for selecting an M Series Data Acquisition and Control (DAC) unit.

The information provided in this Owner's Manual explains the various ways you can operate your M-Series DAC and configure it to your own computer system. We suggest that you read this manual carefully before attempting to install the M-Series DAC and that you place special emphasis on correct cabling and configuration. If you have any problems with your installation, please contact a BayTech applications engineer for assistance.

BayTech manufactures other data communications products including: port sharing and expansion, port contention, printer sharing, network print servers, data switches, remote power switches and statistical multiplexers. If you would like information on any of these models, please contact BayTech customer service.

We welcome any comments you may have about our products. And we hope that you will continue to look to BayTech for your data communications needs.

NOTE: The information contained in this document is subject to change without notice.

Copyright 1997 by Bay Technical Associates, Inc.

Telplex, LaserShare, Print Master and TRAN-X are registered trademarks of Bay Technical Associates, Inc.

IBM, IBM PC, IBM PC/AT, IBM PC/XT are products and registered trademarks of International Business Machines Corporation.

Hewlett-Packard LaserJet is a product and registered trademark of the Hewlett-Packard Company.

All products or company names are trademarks of their respective holders.

Your M Series DAC unit can be equipped with an optional internal diagnostic modem (service modem). Please check the packing list to determine whether or not the unit is equipped with a service modem.

The M Series service modem is designed to be used on standard device telephone lines. It connects to the telephone line by means of a standard jack (USOC RJ-11C or USOC RJ45S). Connection to telephone company provided coin service (central office implemented systems) is prohibited. Connection to party lines service is subject to state tariffs.

The goal of the telephone company is to provide you with the best service it can. In order to do this, it may occasionally be necessary for them to make changes in their equipment, operations or procedures. If these changes might affect your service or the operation of your equipment, the telephone company will give you notice, in writing, to allow you to make any changes necessary to maintain uninterrupted service.

If you have any questions about your telephone line, such as how many pieces of equipment you can connect to it, the telephone company will provide this information upon request. In certain circumstances, it may be necessary for the telephone company to request information from you concerning the equipment which you have connected to your telephone line. Upon request of the telephone company, provide the FCC registration number (B46USA-65156-FA-E) and the ringer equivalence number (REN: 0.2A) of the service modem. The sum of all the RENs on your telephone lines should be less than five in order to assure proper service from the telephone company. In some cases, a sum of five may not be usable on a given line.

If any of your telephone equipment is not operating properly, you should immediately remove it from your telephone line, as it may cause harm to the telephone network. If the telephone company notes a problem, they may temporarily discontinue service. When practical, they will notify you in advance of this disconnection. If advance notice is not feasible, you will be notified as soon as possible. When you are notified, you will be given the opportunity to correct the problem and informed of your right to file a complaint with the FCC.

In the event repairs are needed on the service modem, they should be performed by BayTech or an authorized representative of BayTech. For information, contact:

Bay Technical Associates, Inc.
200 N. 2nd St., P.O. Box 387
Bay St. Louis, MS 39520
Ph. (800)523-2702 or (228)467-8231
WebSite: www.baytechdcd.com

TABLE OF CONTENTS

1	QUICK REFERENCE	1
1.1	GENERAL INFORMATION	1
1.2	CABLING	2
1.2.1	SERVICE PORT	2
1.2.2	V71 HOST COMMUNICATIONS MODULE	3
1.2.3	V74 FOUR PORT EIA-232 SERIAL I/O MODULE	3
1.2.4	V77 ADM-1 ANALOG-TO-DIGITAL CONVERTER MODULE	3
1.2.5	V78 CRM-1 8-CHANNEL CONTROL RELAY MODULE	4
1.2.6	V79 PDI-1 SWITCH INPUT AND V80 PDI-2 OPTICALLY ISOLATED MODULES	5
1.3	CONFIGURATION	5
1.3.1	HOST MODULE CONFIGURATION PROCEDURE	6
1.3.2	SERVICE PORT CONFIGURATION PROCEDURE	6
1.3.3	MAIN UNIT CONFIGURATION	7
1.3.4	HOST MODULE CONFIGURATION	7
1.3.5	V77 ADM-1 CONFIGURATION	8
1.3.6	V78 CRM-1 CONFIGURATION	10
1.3.7	V79 PDI-1 & V80 PDI-2 CONFIGURATION	11
1.3.8	V74 4-PORT EIA-232 SERIAL MODULE CONFIGURATION	12
1.4	OPERATION	13
1.4.1	HOST CONNECTION TO MODULES	13
1.4.2	V77 ADM-1 DATA COMMANDS AND DATA PRESENTATION	14
1.4.3	V78 CRM-1 COMMANDS AND DATA PRESENTATION	15
1.4.4	V79 PDI-1 AND V80 PDI-2 COMMANDS AND DATA PRESENTATION	17
1.4.5	V74 EIA-232 SERIAL MODULE OPERATION	20
2	BASE UNIT GENERAL INFORMATION	22
3	BASE UNIT SPECIFICATIONS	23
4	BASE UNIT INSTALLATION	26
4.1	UNPACKING	26
4.2	SOFTWARE UTILITY DISKETTE	26
4.3	POWER	27
4.4	SERVICE PORT/SERVICE MODEM CABLING	27
4.5	MODULE INSTALLATION	30
5	BASE UNIT OPERATION	32
5.1	BASE UNIT USER-PROGRAMMABLE FEATURES	32
5.2	BASE UNIT BASIC OPERATION	32
5.3	BASE UNIT DATA COMMANDS	33
5.3.1	BASE UNIT READ TIME (RT) COMMAND	34
5.3.2	BASE UNIT RESET COMMAND	34
5.3.3	ECHO MODE	34
5.4	BASE UNIT LED DESCRIPTION	35
6	BASE UNIT CONFIGURATION	36
6.1	BASE UNIT FRONT PANEL CONFIGURATION	37
6.2	HOST MODULE, SERVICE PORT, AND SERVICE MODEM CONFIGURATION	39
6.3	BASE UNIT DYNAMIC CONFIGURATION COMMANDS	42
7	V71 GENERAL INFORMATION	43
8	V71 SPECIFICATIONS	44
9	V71 CABLING	45

9.1	V71 EIA-232 LINE INTERFACE.....	46
9.1.1	V71 DB-25 CABLING FOR EIA-232.....	46
9.1.2	V71 RJ-45 CABLING FOR EIA-232.....	48
9.2	V71 EIA-422 LINE INTERFACE.....	51
9.2.1	V71 RJ-45 CABLING FOR EIA-422.....	51
9.2.2	V71 DB-25 CABLING FOR EIA-422.....	52
9.3	V71 CURRENT LOOP LINE INTERFACE.....	53
10	V71 OPERATION.....	56
10.1	V71 USER-PROGRAMMABLE FEATURES.....	56
10.1.1	V71 PORT SELECT CODE.....	56
10.1.2	V71 SERIAL PORT CONFIGURATION.....	56
10.1.3	V71 RESET COMMAND.....	
10.1.4	V71 TEST COMMAND.....	57
10.2	V71 BASIC OPERATION.....	57
11	V71 CONFIGURATION.....	58
11.1	V71 MAIN CONFIGURATION MENU.....	60
11.2	V71 STATUS.....	60
11.3	V71 PORT SELECT CODE.....	61
11.4	V71 SERIAL PORT CONFIGURATION.....	62
11.5	V71 EXIT CONFIGURATION.....	64
11.6	V71 CONTROL PANEL CONFIGURATION.....	65
12	V50/V73/V74/V75/V76/V86/V87 GENERAL INFORMATION.....	66
13	V50/V73/V74/V75/V76/V86/V87 SPECIFICATIONS.....	67
14	V50/V73/V74/V75/V76/V86/V87 CABLING.....	69
14.1	V74 & V75 CABLING INFORMATION.....	70
14.1.1	V74 & V75 DCD STATUS SELECTION.....	71
14.1.2	DCD STATUS SELECTION CHART.....	72
14.1.3	V75 SERIAL INTERFACE SELECTION.....	75
14.1.4	V74 & V75 CABLE/ADAPTER INFO.....	75
14.1.5	V75 EIA-422 CABLING.....	79
14.2	V76 CABLING.....	80
14.3	V87 CABLING INFORMATION.....	82
14.3.1	V87 SERIAL INTERFACE SELECTION.....	83
14.3.2	V87 EIA-485 CABLING.....	85
15	V50/V73/V74/V75/V76/V86/V87 OPERATION.....	85
15.1	V50/V73/V74/V75/V76/V86/V87 USER PROGRAMMABLE FEATURES.....	85
15.1.1	V50/V73/V74/V75/V76/V86/V87 SERIAL PORT CONFIGURATION.....	86
15.1.2	V50/V73/V74/V75/V76/V86/V87 PORT DEVICE NAME.....	86
15.1.3	V50/V73/V74/V75/V76/V86/V87 HOST MODULE LOCATION.....	86
15.1.4	V50/V73/V74/V75/V76/V86/V87 PORT ID.....	86
15.1.5	V50/V73/V74/V75/V76/V86/V87 THE MESSAGE TERMINATING CHARACTER.....	87
15.1.6	V50/V73/V74/V75/V76/V86/V87 MODES OF OPERATION.....	87
15.1.6.1	FULL DUPLEX MODE.....	87
15.1.6.2	IMMEDIATE MESSAGE MODE.....	88
15.1.6.3	IMMEDIATE DATA MODE.....	88
15.1.6.4	COMMAND MODE.....	88

15.1.7	V50/V73/V74/V75/V76/V86/V87 TIME TAG.....	88
15.2	V50/V73/V74/V75/V76/V86/V87 OPERATING IN THE DIFFERENT MODES	89
15.2.1	OPERATING IN FULL DUPLEX MODE.....	92
15.2.2	OPERATING IN IMMEDIATE MESSAGE MODE	92
15.2.3	OPERATING IN IMMEDIATE DATA MODE	
15.2.4	OPERATING IN COMMAND MODE	94
	15.2.4.1 CLEAR BUFFER (CB) COMMAND.....	95
	15.2.4.2 REPORT ALL BUFFERED MESSAGES (RA) COMMAND.....	95
	15.2.4.3 REPORT ALL BUFFERED DATA (RB) COMMAND.....	96
	15.2.4.4 REPORT SINGLE MESSAGE (RS) COMMAND	96
	15.2.4.5 STOP REPORT (SR) COMMAND	96
	15.2.4.6 PORT ID STATUS (ID) COMMAND.....	97
15.2.5	BROADCAST MODE	97
15.2.6	DATA/MESSAGE PRESENTATION.....	98
16	V50/V73/V74/V75/V76/V86/V87 CONFIGURATION	99
16.1	V50/V73/V74/V75/V76/V86/V87 MAIN CONFIGURATION MENU.....	100
16.2	V50/V73/V74/V75/V76/V86/V87 STATUS	101
16.3	V50/V73/V74/V75/V76/V86/V87 SET SERIAL PORT CONFIGURATION.....	102
16.4	V50/V73/V74/V75/V76/V86/V87 CHANGE PORT DEVICE NAME.....	104
16.5	V50/V73/V74/V75/V76/V86/V87 PORT ID.....	105
16.6	V50/V73/V74/V75/V76/V86/V87 DESIGNATE HOST MODULE LOCATION	106
16.7	V50/V73/V74/V75/V76/V86/V87 CHANGE MESSAGE TERMINATE CHARACTER	107
16.8	V50/V73/V74/V75/V76/V86/V87 CHANGE MODE OF OPERATION.....	108
16.9	V50/V73/V74/V75/V76/V86/V87 TIME TAG MODE.....	108
16.10	V50/V73/V74/V75/V76/V86/V87 CONNECT PORT ID ECHO	
16.12	V50/V73/V74/V75/V76/V86/V87 EXIT.....	110
16.13	CONTROL PANEL CONFIGURATION.....	110
17	MAINTENANCE	112
17.1	RETURNS TO THE FACTORY	112
17.2	REPACKING FOR SHIPPING	113
18	TECHNICAL SUPPORT	113
19	FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFACE STATEMENT*.....	114
APPENDIX A COMMAND SUMMARY.....		115
APPENDIX B EPROM UPGRADES AND MEMORY EXPANSION		116
B.1	V71 EPROM UPGRADE.....	116
B.2	V50/V73/V74/V75/V76/V86/V87 EPROM UPGRADE	117
B.3	M03 MEMORY MODULE EPROM UPGRADE	118
B.4	M03 MEMORY MODULE BUFFER EXPANSION SIMM INSTALLATION	119
APPENDIX C V71 LINE INTERFACE JUMPER SETTING INSTRUCTIONS		120
APPENDIX D MECHANICAL LAYOUTS		122
D.1	V71 MECHANICAL LAYOUT.....	122
D.2	V50/V73/V74/V75/V76/V86/V87 MECH. LAYOUT	123
D.3	M03 MEMORY MODULE	124
APPENDIX E INDEX.....		125

1 QUICK REFERENCE

1.1 GENERAL INFORMATION

This section is intended to provide quick and easy reference to the cabling requirements, configuration, operation and supported commands of the BayTech M Series Data Acquisition and Control (DAC) models. This section describes operation from a V71 host communications module.

The BayTech M Series Data Acquisition and Control (DAC) models are versatile multifunction units used in data collection and process control. Typical applications include security alarm monitoring, HVAC systems, medical data systems control, manufacturing, and environmental data control. An M Series system consists of a base unit, host communication module(s), and various I/O modules.

The base unit is comprised of 3, 4, 6, 8, 9, or 16 card slots, activity LEDs, service port, time-of-day clock, power supply, and an internal high speed data bus. The service port and optional service modem allow menu-driven configuration of the main unit and installed modules from a local or remote terminal.

The host communication module is the primary user interface to the M-Series DAC system. This module allows the user to connect to the main unit or I/O modules and change configuration, send and receive data, and issue data commands. The I/O modules are used to interface directly to various peripheral devices such as security/alarm systems, process control systems, medical data systems, and environmental control systems. The I/O module types include a 16 or 8 channel 12 bit A/D converter, 8 channel control relay, 16 channel switch or optically isolated inputs, 4 EIA-232 serial I/O ports, 4 EIA-232/422 I/O ports, 4 EIA-485/422 I/O ports, 4 current loop ports, 16 MB memory module and a programmable control module.

1.2 CABLING

1.2.1 SERVICE PORT

The service port has an RJ-45 modular connector. An adapter is required to connect an IBM PC to the service port. *Figure 1* shows the required adapter for a PC with a DB-25 connector and *Figure 2* shows the required adapter for a PC with a DE-9 connector. Use a crossed RJ-45 cable to connect these adapters to the service port.

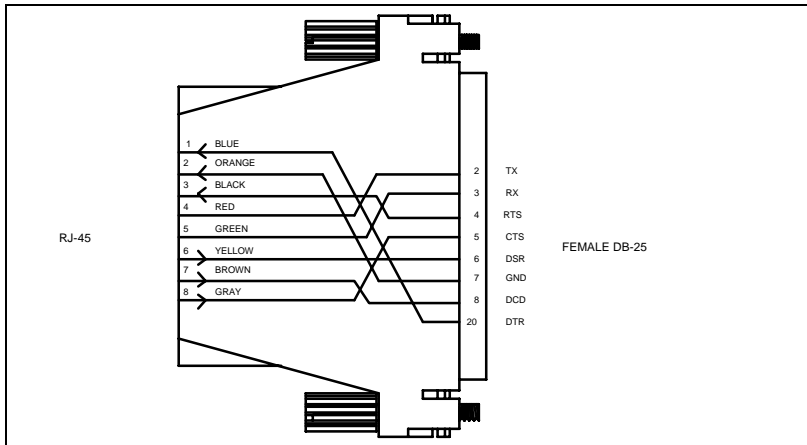


Figure 1 : PC, PS/2 Computer/Terminal Adapter
BayTech Part No. 25FRJ45PC-3

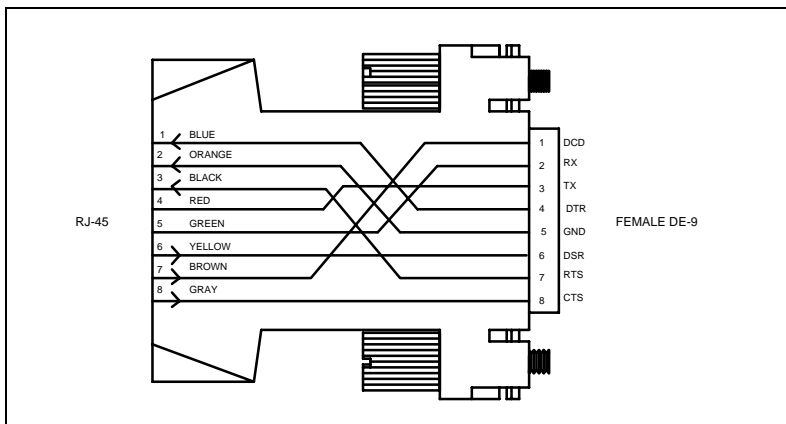


Figure 2: AT Computer Adapter
BayTech Part No. 9FRJ45PC-3

1.2.2 V71 HOST COMMUNICATIONS MODULE

The V71 has a DB-25 male DTE connector and an RJ-45 connector for interface to the host device. The default setting provides EIA-232 communication on the DB-25 port and the *EIA-232* RJ-45 port. In order to connect a DTE device such as a terminal to the V71 DB-25 port, use a crossed or null modem cable as shown in *Figure 3* below. See *Section 9* for more V71 cabling information.

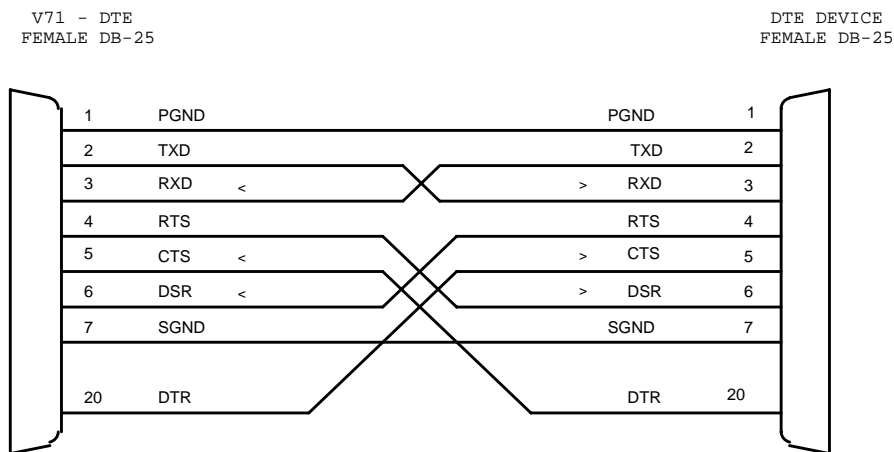


Figure 3 - V71 (DTE) to DTE Device

1.2.3 V74 FOUR PORT EIA-232 SERIAL I/O MODULE

Ports on the V74 I/O module have RJ-45 connectors. Most computers, printers, plotters, and modems do not have modular connectors. Therefore, adapters are required to convert DB-25 or DE-9 connectors to modular connectors. Please refer to *Section 14* for the required adapter(s).

1.2.4 V77 ADM-1 ANALOG-TO-DIGITAL CONVERTER MODULE

The V77 ADM-1 has a DB-25 female connector and allows for 16 single-ended inputs or 8 differential inputs. *Figure 4* and *Figure 5* show the single-ended and differential input connections respectively.

Input	Pin #		Input
Ground	1	14	Ground
Ground	2	15	Channel 16
Channel 8	3	16	Channel 15
Channel 7	4	17	Channel 14
Channel 6	5	18	Channel 13
Channel 5	6	19	Channel 12
Channel 4	7	20	Channel 11
Channel 3	8	21	Channel 10
Channel 2	9	22	Channel 9
Channel 1	10	23	Ground
Ground	11	24	Ground
Ground	12	25	Ground
Ground	13		

DI Channel #	Pin #
1	10 & 22
2	9 & 21
3	8 & 20
4	7 & 19
5	6 & 18
6	5 & 17
7	4 & 16
8	3 & 15
	+ -
	Polarity

Figure 4: Single-ended Input Connections

Figure 5: Differential Input Connections

1.2.5 V78 CRM-1 8-CHANNEL CONTROL RELAY MODULE

The V78 CRM-1 has a DB-25 female connector and controls eight electromechanical form-C single-pole-double-throw (SPDT) relays. Each relay consists of three contacts: a "wiper" (common) contact, a normally open (NO) contact, and a normally closed (NC) contact.

Figure 6 below shows the contact connections.

Circuit Connection	Pin #	Circuit Connection
Relay #1 Wiper	•1	14• Relay #5 Wiper
Relay #1 NC	•2	15• Relay #5 NC
Relay #1 NO	•3	16• Relay #5 NO
Relay #2 Wiper	•4	17• Relay #6 Wiper
Relay #2 NC	•5	18• Relay #6 NC
Relay #2 NO	•6	19• Relay #6 NO
Relay #3 Wiper	•7	20• Relay #7 Wiper
Relay #3 NC	•8	21• Relay #7 NO
Relay #3 NO	•9	22• Relay #7 NC
Relay #4 Wiper	•10	23• Relay #8 Wiper
Relay #4 NC	•11	24• Relay #8 NC
Relay #4 NO	•12	25• Relay #8 NO
No Connect	•13	•
	••••••••	

Figure 6: Relay Contact Connections

1.2.6 V79 PDI-1 SWITCH INPUT AND V80 PDI-2 OPTICALLY ISOLATED MODULES

The V79 PDI-1 and V80 PDI-2 modules each have a DC-37F connector. Equipment connections for each module is similar. Each input of the V79 module has a ground connection and each input of the V80 module has a return connection. *Figure 7* and *Figure 8* below show the V79 and V80 connections respectively.

Circuit Connection	Pin #	Circuit Connection
Input #1	•1	20• Ground #10
Ground #1	•2	21• Input #11
Input #2	•3	22• Ground #11
Ground #2	•4	23• Input #12
Input #3	•5	24• Ground #12
Ground #3	•6	25• Input #13
Input #4	•7	26• Ground #13
Ground #4	•8	27• Input #14
Input #5	•9	28• Ground #14
Ground #5	•10	29• Input #15
Input #6	•11	30• Ground #15
Ground #6	•12	31• Input #16
Input #7	•13	32• Ground #16
Ground #7	•14	33• N.C.
Input #8	•15	34• N.C.
Ground #8	•16	35• N.C.
Input #9	•17	36• N.C.
Ground #9	•18	37• N.C.
Input #10	•19	•
.....

FIGURE 7: V79 Input Connections

Circuit Connection	Pin #	Circuit Connection
Input #1	•1	20• Return #10
Return #1	•2	21• Input #11
Input #2	•3	22• Return #11
Return #2	•4	23• Input #12
Input #3	•5	24• Return #12
Return #3	•6	25• Input #13
Input #4	•7	26• Return #13
Return #4	•8	27• Input #14
Input #5	•9	28• Return #14
Return #5	•10	29• Input #15
Input #6	•11	30• Return #15
Return #6	•12	31• Input #16
Input #7	•13	32• Return #16
Return #7	•14	33• N.C.
Input #8	•15	34• N.C.
Return #8	•16	35• N.C.
Input #9	•17	36• N.C.
Return #9	•18	37• N.C.
Input #10	•19	•
.....

FIGURE 8: V80 Input Connections

1.3 CONFIGURATION

M-Series DAC Systems are configured in a number of ways. You can program the main unit, the host module(s), and the I/O modules. The main unit and host module can be programmed from the service port, or a host module. The I/O modules are typically programmed from a host module using a menu-driven procedure as described in this section or by downloading specific configuration commands. I/O modules can be programmed using menus from the service port.

1.3.1 HOST MODULE CONFIGURATION PROCEDURE

To access configuration mode of the M Series System from the V71 host module, use the following procedure:

1. Connect a terminal to the host module and configure the terminal's serial parameters to match those of the V71 host module. From the factory, the V71 host module is set at 9600 baud rate, 8 word size, 1 stop bit, and no parity.
2. Connect to the desired module or the main unit by sending the port select code (\$BT - default), desired module number (1 to 16 or 0 for the main unit), and *Carriage Return* or *Line Feed*.
3. Access configuration mode by sending **\$CONFIG<cr>** where <cr> is *Carriage Return*. For example, if the desired module is installed as Module 1 and the default port select code (\$BT) is used, send **\$BT1<cr>\$CONFIG<cr>** to enter into configuration mode. No characters should be typed between \$BT1<cr> and \$CONFIG<cr>.

1.3.2 SERVICE PORT CONFIGURATION PROCEDURE

To access the configuration mode of the M Series System from the service port, use the following procedure:

1. Connect a terminal to the *EIA-232* service port and configure the terminal's serial parameters to 9600 baud rate, 8 word size, 1 stop bit, and no parity.
2. Connect to the desired module or the main unit by sending **\$BTn**, (\$BAYTECHn on M4 and M8) the desired module number (1 to 16 or 0 for the main unit), and *Carriage Return* or *Line Feed*.

3. Access configuration mode by sending **\$CONFIG<cr>**.
Following the example on the previous page, you would send **\$BT1<cr>\$CONFIG<cr>** to configure Module 1. Use **\$BAYTECH1<cr>\$CONFIG<cr>** on M4 and M8 units.

1.3.3 MAIN UNIT CONFIGURATION

You can program the date, time, and unit number on the main unit. The date and time are used for event recording and initiation. When you access configuration mode for the main unit from a host module or the service port, you will receive the following menu:

```
Control Board System Menu
Bay Technical Associates
Copyright 199X
Unit Number 001

Set Date.....1
Set Time.....2
Set Unit Number.....3
Exit System Menu.....X
```

Enter Request :

1.3.4 HOST MODULE CONFIGURATION

You can program the port select code and the serial port configuration (i.e., baud rate, word size, line interface, etc.) of the V71 host module. If you access configuration mode for the host module, you will receive the following menu:

```
Copyright (c) Bay Technical Associates, 199X
DAC V71 Rev. X.XX
This Module is 1

1) Status
2) Port Select Code
3) Serial Port Configuration
X) Exit Configuration
```

Enter Request :

13.5 V77 ADM-1 CONFIGURATION

You can program the sampling setup, reporting setup, channel input setup, and enable dynamic configuration for the V77 ADM-1 analog-to-digital module. If you access configuration mode for the V77 ADM-1, you will receive the following menu:

```
Copyright (c) Bay Technical Associates, 199X
DAC V77 ADM-1 Rev. 1.00
This Module is X
```

```
Module Status.....1
Sampling Setup.....2
Reporting Setup.....3
Channel Input Setup.....4
Dynamic Configuration.....5
Exit.....X
```

Enter Selection:

SAMPLING SETUP

By entering a "2" (Sampling Setup), the following menu will be displayed:

```
Sampling Method.....1
Sample Start Time.....2
Sample Interval.....3
Sample Rate.....4
No. of Samples to Average.....5
Exit.....X
```

Enter Selection:

The three **Sampling Methods** are Command (upon request only), Immediate (upon exiting configuration), and Schedule (where sampling begins at the **Sample Start Time**). **Sample Interval** is the interval between the start of sampling periods. Continuous sampling is selected if 00:00:00 is entered. **Sample Rate** can be programmed from 1 to 4000 samples per second. The sample rate for an individual channel is the programmed rate divided by the number of active channels. **Number of Samples to Average** is the number of samples averaged per data message.

REPORTING SETUP

By entering "3" (Reporting Setup) from the ADM-1 main menu shown on the previous page, the following menu will be displayed:

```
Reporting Method.....1
Report Start Time.....2
Report Interval.....3
Set Host Address.....4
Data Format.....5
Time Tag.....6
Terminating Character(s).....7
Exit.....X
```

Enter Selection:

The three **Reporting Methods** are Command (upon request only), Immediate (upon exiting configuration mode), or Schedule (where reporting begins at the **Report Start Time**). **Report Interval** is the interval between the start of reporting periods. **Host Address** is the designated host module where data messages are sent when using Immediate or Schedule Reporting Method. **Data Format** (ADM-1 only) is the format of the data messages sent to the designated host module which can be in Hexadecimal or Decimal. When **Time Tag** is enabled, a time tag is appended immediately after the data. **Terminating Character(s)** is added at the end of a complete data message and consists of one or two hexadecimal characters.

CHANNEL INPUT SETUP

By entering "4" (Channel Input Setup) from the ADM-1 main menu shown on the previous page, the following menu will be displayed:

```
Range.....1
Unipolar / Bipolar.....2
Single Ended / Differential.....3
Active Channels.....4
Exit.....X
```

Enter Selection:

Range and **Unipolar/Bipolar** are used to choose one of eight different voltage ranges. These are 0 to +10 volts, -5 to +5 volts, 0 to +5 volts, -2.5 to +2.5 volts, 0 to +2.5, -1.25 to +1.25 volts, or 0 to +1.25 volts, -0.625 to +0.625 volts. You can select a ninth voltage range which is -10 to +10 volts by installing JP1. **Single Ended/Differential** setting is used to select up to 16 single-ended channels or up to 8 differential channels. **Active Channels** enables or disables individual channels for data acquisition.

DYNAMIC CONFIGURATION

By entering "5" (Dynamic Configuration) from the ADM-1 main menu shown on Page 8, the following menu will be displayed:

```
Dynamic Configuration Commands are..Enabled
```

```
Enable.....1  
Disable.....2  
Exit.....X
```

```
Enter Selection:
```

You can enable or disable the dynamic configuration mode from this menu. Dynamic configuration mode allows non-verbose or "on-the-fly" configuration commands to be issued to the module which are described in the manual for each respective module.

1.3.6 V78 CRM-1 CONFIGURATION

You can program the Schedule, Reporting Setup, and Dynamic Configuration for the V78 CRM-1 control relay module. If you access configuration mode for the V78 CRM-1, you will receive the following menu:

```
Copyright (c) Bay Technical Associates, 199X  
DAC V78 CRM-1 Rev. 1.XX  
This Module is X
```

```
Module Status.....1  
Relay Operating Setup.....2  
Reporting Setup.....3  
Dynamic Configuration.....4  
Exit.....X
```

```
Enter Selection:
```

NOTE: Reporting Setup is the same as described for the ADM-1 on Page 9. **Dynamic Configuration** is enabled or disabled the same as described for the ADM-1 on the previous page.

RELAY OPERATING SETUP

By entering "2" (Relay Operating Setup), the following menu will be displayed:

```
List Current Schedule.....1
Create/Modify Schedule.....2
Enable/Disable Events.....3
Delete Schedule.....4
Exit.....X
```

Enter Selection:

List Current Schedule displays the current relay schedule.

Create/Modify Schedule allows you to program up to 12 events where each event will energize or de-energize certain relays at specified days and times. You can program the *Start Time*, *Interval*, and *Duration* for each *Event Number* (1 to 12). *Start Time* is the time when the initial occurrence of the selected event is to transpire. *Interval* is the interval of time between the recurrence of the selected event. *Duration* is the length of time a specified relay is energized for the selected event. **Enable/Disable Events** allows you to enable or disable individual or all events. **Delete Schedule** allows you to delete individual or all events.

1.3.7 V79 PDI-1 & V80 PDI-2 CONFIGURATION

You can program the Sampling Setup, Reporting Setup, and Dynamic Configuration for the V79 PDI-1 and V80 PDI-2 switch closure and isolated input I/O modules. If you access configuration mode for a PDI-1 or PDI-2, you will receive the following menu:

```
Copyright (c) Bay Technical Associates, 199X
DAC V79 PDI-1 Rev. 1.XX
This Module is X
```

```
Module Status.....1
Sampling Setup.....2
Reporting Setup.....3
Dynamic Configuration.....4
Exit.....X
```

Enter Selection:

NOTE: Reporting Setup is the same as described for the ADM-1 on Page 9. **Dynamic Configuration** is enabled or disabled the same as described for the ADM-1 on the previous page.

SAMPLING SETUP

By entering "2" (Sampling Setup), the following menu will be displayed:

```
Debounce Delay.....1
Latch Polarity.....2
Exit.....X
Enter Selection:
```

Debounce Delay is a variable time-delay (0 to 65535 milliseconds) in recording events intended to prevent inadvertent noise spikes, relay bounces, etc. as events. **Latch Polarity** instructs the PDI-1 or PDI-2 to latch individual inputs based on a positive going (LO to HI) or negative going (HI to LO) input.

13.8 V74 4-PORT EIA-232 SERIAL MODULE CONFIGURATION

You can program the Serial Port Configuration, Port Logical Names, Designated Host Module Location, Message Terminating Character, Mode of Operation, and Time Tag for the V74 4-port EIA-232 serial module. If you access configuration mode, you will receive the following menu:

```
(C)Copyright Bay Technical Associates 199X
Model V50/V73/74/V75/76/86/V87 High Speed Serial 4C-232
Revision F.X.XX
Unit: 1, Module: 2

Status.....1
Serial Port Configuration.....2
Port Device Name.....3
Port I.D.....4
Designate Host Module Location.....5
Message Terminate Character.....6
Mode of Operation.....7
Time Tag Mode.....8
Connect Port ID Echo.....9
Port EIA Driver.....A
Exit.....X
Enter Request:
```

Serial Port Configuration allows you to program the baud rate, word size, stop bits, parity and XON/XOFF handshaking for each individual port of the V74 module. **Port Device Name** allows individual logical names to be assigned to each port for reference while is in configuration mode. **Port I.D.** formats the port identification code that precedes messages. **Designate Host Module Location** is used to assign which host module will receive messages while the V74 is operating in immediate reporting mode. **Message Terminate Character** is used to program the single character that indicates a complete message has been received while the V74 is operating in immediate and command reporting modes. **Mode of Operation** allows you change from one of four reporting modes. These include full duplex communication, immediate message mode, command mode and immediate data mode on request. If **Time Tag Mode** is enabled, the date and time a message was received by the V74 module is sent to the host computer in addition to the port ID. **Connect Port ID Echo** can be either enabled or disabled(default). If Connect Port ID Echo is enabled, the programmed Port ID will be sent to the host computer whenever a serial I/O port is selected. **Port EIA Driver** is used select between EIA-485 and EIA-422 on the V86 module.

1.4 OPERATION

This section describes the procedure to issue data commands, data presentation examples, and a brief description of the supported data commands for each I/O module.

1.4.1 HOST CONNECTION TO MODULES

An I/O module is selected when the user sends a *select sequence* to the host module. The select sequence consists of the port select code (default = \$BT), the desired module number (1 to 16), and a terminating character of *Carriage Return* (0D Hex) or *Line Feed* (0A Hex). Once an I/O module is selected, you can send commands which are summarized in the following sections.

IMPORTANT: If a module is selected, the user must disconnect by sending the Port Select Code and *Carriage Return* or *Line Feed*

before any module using Immediate or Schedule Reporting Method will resume sending messages to the designated host module.

1.4.2 V77 ADM-1 DATA COMMANDS AND DATA PRESENTATION

The V77 ADM-1 channel digitizes analog voltages from 1 to 16 input channels and formats the data into a message which is sent to the designated host module automatically or upon request. Each message can be presented in ASCII hexadecimal, decimal, or voltage format and is preceded by the unit:module,channel number from which the message came. The message can be optionally appended with a *Time Tag* showing the date and time the message was recorded.

The table below summarizes the commands supported by the ADM-1. Please see the V77 ADM-1 operator's manual for a more detailed operational description of the supported commands.

V77 ADM-1 COMMAND SUMMARY	
Command	Description
CA <i>n</i> <cr> (<i>n</i> =0 or 1 to 3)	Calibrate. 0=all, 1=25%, 2=50%, and 3=75% of Full Scale (FS). Initiates auto-calibration. ADM-1 tests for offsets and makes necessary corrections. Corrections are continually applied to all reported messages until another Calibrate command is issued.
CB <i>c</i> <cr> (<i>c</i> =Ch# 1 to 16, 0=all*)	Clear Buffer. Clears all old data from the buffer when a new data set is started.
RA <i>c</i> <cr> (<i>c</i> =Ch# 1 to 16, 0=all*)	Report All Buffered Samples.
RS <i>c</i> <cr> (<i>c</i> =Ch# 1 to 16, 0=all*)	Report Single Sample if Available
SA <i>c</i> <cr> (<i>c</i> =Ch# 1 to 16, 0=all*)	Sample and report a sample at the programmed Sampling Setup.
* Multiple channels are selected using 4 formats. Examples: SA1,2,3,4,5,6,7,8<cr> , SA1-8<cr> , SA0<cr> , SA1,2,4-8<cr>	

For example, suppose the ADM-1 is installed in Unit 1 Module 15 using a hexadecimal data format with time tagging enabled. When

you select the ADM-1 and issue the **RS1,2<cr>** command, the module responds with a single message from Channel 1 and Channel 2 similar to the following:

```
1:15,1 7FE 11/18/93 09:12:22<cr><lf>  
1:15,2 7FA 11/18/93 09:12:22<cr><lf>
```

where **1:15,1** represents Unit 1/Module 15/Channel 1, **1:15,2** represents Unit 1/Module 15/Channel 2, **7FE** and **7FA** are the hexadecimal representations of the sampled data from Channel 1 and Channel 2 respectively, **11/18/93 09:12:22** is the time tag which is the same for both channels in this example, and **<cr><lf>** is the *Carriage Return* and *Line Feed* terminating characters.

1.4.3 V78 CRM-1 COMMANDS AND DATA PRESENTATION

The V78 CRM-1 has eight programmable, electromechanical, form-C, single-pole-double-throw (SPDT) relays. Each relay has a set of normally open (NO) and a set of normally closed (NC) contacts capable of switching AC and DC loads up to 3 amps. All relays on the V78 CRM-1 are programmable to change state on demand by sending commands or via time schedule. The status of individual relays is presented as a "1" if the relay is energized or "0" if the relay is de-energized. The relay status can consist of buffered data representing the history of changes in the state of a specific relay or the current state of a specific relay. Each "1" or "0" in the relay status is preceded by the appropriate unit:module,relay number. The "1" or "0" can be optionally appended with a "real time" *Time Tag* showing the date and time the status was recorded.

The table below summarizes the commands supported by the CRM-1. Please see the V78 CRM-1 operator's manual for a more detailed operational description of the supported commands.

V78 CRM-1 COMMAND SUMMARY	
Command	Description
CB <i>r</i> <cr> (<i>r</i> =Relay# 1 to 8, 0=all*)	Clear Buffer. Clears all buffered relay status history (change of state).
DR <i>r</i> <cr> (<i>r</i> =Relay# 1 to 8, 0=all*)	De-energize Relay(s)
ER <i>r</i> <cr> (<i>r</i> =Relay# 1 to 8, 0=all*)	Energize Relay(s)
RA <i>r</i> <cr> (<i>r</i> =Relay# 1 to 8, 0=all*)	Report All Buffered Relay Status History
RS <i>r</i> <cr> (<i>r</i> =Relay# 1 to 8, 0=all*)	Report Single Relay Status History Sample if Available
SA <i>r</i> <cr> (<i>r</i> =Relay# 1 to 8, 0=all*)	Sample. Read and report the current status of the selected relay(s).
* Multiple relays are selected using 4 formats. Examples: SA1,2,3,4,5,6,7,8<cr> , SA1-8<cr> , SA0<cr> , SA1,2,4-8<cr>	

For example, suppose the CRM-1 is installed in Unit 1 Module 15 with time tagging enabled. Once you select the CRM-1 and issue the **RS1,2<cr>** command, the module responds with a single message from Relay #1 and Relay #2 similar to the following:

```
1:15,1 1 11/18/93 09:12:22<cr><lf>
1:15,2 1 11/18/93 09:12:22<cr><lf>
```

where **1:15,1** represents Unit 1/Module 15/Channel 1, **1:15,2** represents Unit 1/Module 15/Channel 2, **1** indicates that Relay #1 and Relay #2 are energized, **11/18/93 09:12:22** is the time tag which is the same for both relays in this example, and **<cr><lf>** is the *Carriage Return* and *Line Feed* terminating characters.

1.4.4 V79 PDI-1 AND V80 PDI-2 COMMANDS AND DATA PRESENTATION

The PDI-1 and PDI-2 have sixteen input channels capable of sensing, recording, and reporting information from dry contact closures (PDI-1) or optically isolated inputs (PDI-2). A module can observe, record, and report when an event happened, how long the event lasted, and how many events occurred. An event is defined as a change-in-state of an input from LO to HI (or vice versa) and return to the original state. A debounce delay can be selected to reduce the effects of short term transitions such as noise or contact bounce.

Latch polarity, which is user selectable, determines which transition (LO to HI, HI to LO, or both) constitutes the start of an event. The state and start time of an event are buffered for transmission to the user. The event start also starts the duration counter, increments the event counter and sets an event latch bit. The duration counter measures event duration time in milliseconds with a maximum time of 65,535 stored. The event counter reflects the total number of events that have occurred since the last time a CCc (Clear Event Counter) or ROc (Report Event Counter and Reset) command was sent. The initial occurrence of an event sets the event latch and store the associated time.

There are three methods of reporting data: Command, Schedule, and Immediate. Command reporting allows the user to send commands to report the event counter, event duration, event latch, the current state, the most recent event, or buffered event samples. The command table on Page 19 summarizes the commands supported by the PDI-1 and PDI-2.

The immediate and schedule reporting methods provide auto-reporting of events. When the immediate method is selected, a message is reported at the start of an event. If Schedule Reporting Method is selected, events are buffered and reported at specific user-selected times or intervals.

The following example shows messages received using immediate or schedule reporting where the PDI-1 or PDI-2 is installed in Unit 1 Module 15 with Time Tagging enabled:

```
1:15,1 1 11/18/97 09:12:22<cr><lf>  
1:15,2 1 11/18/97 09:12:22<cr><lf>
```

where **1:15,1** represents Unit 1/Module 15/Channel 1, **1:15,2** represents Unit 1/Module 15/Channel 2, **1** indicates that Channel #1 and Channel #2 are closed, **11/18/97 09:12:22** is the time tag which is the same for both channels in this example, and **<cr><lf>** is the *Carriage Return* and *Line Feed* terminating characters.

The following examples show the messages received using command reporting where the PDI-1 or PDI-2 is installed in Unit 1 Module 15 with time tagging enabled. If you select the module and issue the **RD1<cr>** command (Report Event Duration), the module responds with a single message showing the Event Duration for Channel 1 similar to the following:

```
1:15,1 1320 11/18/97 09:12:22
```

where **1:15,1** represents Unit 1/Module 15/Channel 1, **1320** indicates the event duration is 1320 milliseconds, and **11/18/97 09:12:22** is the time tag.

If you issue the **RC1<cr>** command (Report Event Counter), the module responds with a message showing the Event Counter similar to the following:

```
1:15,1 823 11/18/97 09:12:22
```

where **1:15,1** represents Unit 1/Module 15/Channel 1, **823** indicates the number of recorded events is 823 times, and **11/18/97 09:12:22** is the time tag.

If you issue the **RS1<cr>** command (Report Single Buffered Event), the module responds with a message showing the input status for Channel 1 similar to the following:

1:15,1 1 11/18/97 09:12:22

where **1:15,1** represents Unit 1/Module 15/Channel 1, **1** indicates the first buffered sample for Channel 1 is closed, and **11/18/97 09:12:22** is the time tag.

The table below summarizes the commands supported by the PDI-1 and PDI-2. Please see the V79 PDI-1 and V80 PDI-2 operator's manual for a more detailed operational description of the supported commands.

V79 PDI-1 & V80 PDI-2 COMMAND SUMMARY	
Command	Description
CB<cr> (c=Ch# 1 to 16, 0=all)	Clear Event Buffer. Clear all buffered event samples.
CC<cr> (c=Ch# 1 to 16, 0=all)	Clear Event Counter(s)
CR<cr> (c=Ch# 1 to 16, 0=all)	Clear Event Latch Buffer
RA<cr> (c=Ch# 1 to 16, 0=all)	Report All Buffered Events
RC<cr> (c=Ch# 1 to 16, 0=all)	Report Event Counter(s)
RD<cr> (c=Ch# 1 to 16, 0=all)	Report Event Duration(s)
RL<cr> (c=Ch# 1 to 16, 0=all)	Report Event Latch Data
RO<cr> (c=Ch# 1 to 16, 0=all)	Report Event Counter and Reset
RR<cr> (c=Ch# 1 to 16, 0=all)	Report Event Latch Data and Reset
RS<cr> (c=Ch# 1 to 16, 0=all)	Report Single Buffered Event (first in, first out)
SA<cr> (c=Ch# 1 to 16, 0=all)	Read and report the current state of the selected input(s).
SL<cr> (c=Ch# 1 to 16, 0=all)	Report Latest Event
* Multiple channels are selected using 4 formats. Examples: SA1,2,3,4,5,6,7,8<cr> , SA1-8<cr> , SA0<cr> , SA1,2,4-8<cr>	

1.4.5 V74 EIA-232 SERIAL MODULE OPERATION

The V74 4-port EIA-232 serial module will simultaneously multiplex incoming data from connected peripheral devices (e.g., bar code readers, digital laboratory instruments, etc.). The V74 allows the host computer to individually select any peripheral device and send data to the selected device. The V74 has four modes of operation.

Full duplex reporting mode provides full duplex communication between the host computer and a selected peripheral device. Data received by a non-selected V74 port is buffered until selected by the host computer.

Immediate message mode provides automatic message multiplexing. A message begins when a port on the V74 module receives a character from the device connected to it. A message is completed when a user programmable terminating character is received or 2048 characters have been received without a terminating character. Each message sent to the host controller can be preceded by a port identification code consisting of the Unit#:Module#,Port# or the device name of the port that received the message. Immediate reporting mode sends messages to the user automatically as they come in to the V74 module.

Immediate data mode is similar to immediate message mode. The primary difference is that immediate data mode does not wait for a message terminating character to send data to the designated host module. Data is sent to the designated host module automatically as soon as it is received by any port on the peripheral communication module.

Command reporting mode allows the host computer to send commands requesting messages or any buffered data from the V74 ports. These commands are summarized in the table on the following page. See *Section 1.4.1* for the procedure to send commands.

As an example, suppose the V74 is installed in Unit 1 Module 15 and is using Command Reporting Method. Once you select the V74 and

issue the **RS1<cr>** command, the module responds with a single message from Port 1 similar to the following:

1:15,1 TEST MESSAGE where **1:15,1** represents Unit 1/Module 15/Port 1 and **TEST MESSAGE** is the actual message. If the **RBn<cr>** command is issued, any data stored in the buffer up to the time this command is sent is sent to the host controller with each data block preceded by the Unit#:Module#,Port#. The host computer can connect and send data to any V74 port regardless of the operating mode by sending the port select code (default=\$BT), the desired module number (2 to 16), a comma, and the desired port number (1 to 4) followed by *Carriage Return* or *Line Feed*. For example, to select Module 2 Port 1, the host computer sends **\$BT2,1<cr>** if using the default port select code.

The table below summarizes commands supported by the V74 module. Please see *section 15* of this manual for more detailed operational description of the supported commands.

V74 DAC COMMAND SUMMARY	
Command	Description
\$BTBm<cr> (m=desired module(s))	Broadcast mode. When this command is issued, all data received by the host module is broadcasted simultaneously out to all ports of the selected module(s).
CBn<cr> (n=1 to 4, 0=all)	Clear Buffer. This command clears all buffered messages from the specified ports.
RAn<cr> (n=1 to 4, 0=all)	Report All Buffered Messages. This command reports all messages in the buffer at the time the command was sent. If there are no messages, <lf> is sent to the host controller.
RBn<cr> (n=1 to 4, 0=all)	Report All Buffered Data. This command reports all data in the buffer at the time which the command was received with no regard for messages. If there is no data, <lf> is sent to the host controller.
RSn<cr> (n=1 to 4, 0=all)	Report Single Message. This command reports a single buffered message. If there is no message, <lf> is sent to the host controller.
SRn<cr> (n=1 to 4, 0=all)	Stop Report. This command stops data flow from an RBn or RAn command.
* Multiple ports are selected using 2 formats. Examples: RA1,2,3,4<cr> and RA0<cr>	

2 BASE UNIT GENERAL INFORMATION

The base unit is comprised of card slots for installation of the host communication and I/O modules. The M3, M4, M6, M8, M9, and M16 have three, four, six, eight, nine, and sixteen expansion slots respectively. All units have a service port, optional service modem, time-of-day clock, power supply, and internal high speed data bus. The M8 and M16 units have an optional liquid crystal display (LCD) and front panel control keys that allow a user to view the current configuration and program certain features of the system. A memory module expandable up to 16 MB can be installed. The service port and service modem allow menu-driven configuration of the system from a local or remote terminal.

The host communication modules are the primary user interface to the M-Series DAC system. BayTech offers a variety of host modules including EIA-232/422/485 and current loop, V.35 synchronous, DDS (CSU/DSU), modem V.32bis/V.42bis 14.4K bps and IEEE 802.3 Ethernet 10BASE2 or 10BASE-T. Multiple host modules can be installed in a single base unit.

The I/O modules are used to interface directly to various peripheral devices such as security/alarm systems, process control systems, medical data systems, and environmental control systems. The I/O module types include a 16 or 8 channel 12 bit A/D converter, 8 channel control relay, 16 channel switch or optically isolated inputs, 4 EIA-232/422 serial I/O ports, and 4 EIA-485/422 serial I/O ports.

NOTE: This section describes the functionality of the base unit only. Please refer to the appropriate sections of this manual or separate documents for information on the host communication module and the I/O modules.

3

BASE UNIT SPECIFICATIONS

I/O MODULES: A maximum of sixteen modules can be installed in the M16, nine in the M9, eight in the M8, six in the M6, four in the M4, and three in the M3.

POWER REQUIREMENT:

M16: 115 VAC, 60 Hz, .5A; or
230 VAC, 50 Hz, .25A

M9: 115 VAC, 60 Hz, .3A; or
230 VAC, 50 Hz, .2A

M8: 115 VAC, 60 Hz, 0.3A; or
230 VAC, 50 Hz, 0.175A

M6, M4, and M3: AC Adapter Input: 115 VAC,
60 Hz, 15 watts maximum;
Output: 14-16 VAC, .8A

POWER SUPPLY: +5VDC, 0.3A; +12VDC, 0.2A;
-12VDC, 0.2A.

SINGLE CHANNEL BUS SPEED: 1.5M bps.

NON-VOLATILE STORAGE: 8KB holds power-up default information.

EXPANSION SLOTS: M16 - 16 slots, M9 - 9 slots,
M8 - 8 slots, M6 - 6 slots, M4 - 4 slots, M3 - 3 slots

EDGE CONNECTERS: 20 pin; 3, 4, 6, 8, 9, or 16 total,
one for each external expansion slot.

ENVIRONMENT: 0° to 55°C temperature; 5% to 95%
humidity.

DIMENSIONS: M16 - 16³/₄"w x 10"d x 5¹/₄"h.

M9 - 16³/₄"w x 10"d x 3¹/₂"h.

M8 - 9¹/₄"w x 10"d x 5¹/₄"h.

M6 - 16³/₄"w x 10"d x 2_"h.

M4 - 7⁵/₁₆"w x 8³/₈"d x 4¹/₁₆"h

M3 - 16³/₄"w x 10"d x 1³/₄"h

WEIGHT: M16 - 16 lbs with 16 modules installed.

11 lbs with no modules installed.

M9 - 14 lbs with 9 modules installed.

8 lbs with no modules installed.

M8 - 11 lbs with 8 modules installed.

7 lbs with no modules installed.

M6 - 8 lbs with 6 modules installed.

6 lbs with no modules installed.

M4 - 7 lbs with 4 modules installed.

M3 - 7 lbs with 3 modules installed

LED DISPLAY: (LEDs Standard) 4 port activity LEDs for each module.

LCD DISPLAY (M8 AND M16): (LCD Optional) 4-line X 20-character LCD with SELECT, ▲, and ▼ keys used to display current channel/port information and to configure individual modules.

SERVICE PORT: 8-pin modular connector, Asynchronous EIA-232, -12v mark, +12v space. Full duplex. Fixed configuration of 9600 bps, 8 data bits, 1 stop bit and no parity. Optional 2400 bps internal modem available for remote supervisor access (4-pin modular connector).

MOUNTING: Desk-top; rack-mount optional.

WARRANTY: One year on parts and labor.

FACTORY POWER-UP DEFAULT CONFIGURATIONS

Time-of-Day Clock

Day of the week: 1 (Sunday)

Year: 93 (1993)

Month: 10 (October)

Day: 6

Minutes: 09

Seconds: 00

Unit Number: 1

USER-PROGRAMMABLE CONFIGURATIONS

Easy to configure using on-screen menus from the service port, service modem, host module, or control panel. Choices are saved in non-volatile memory to become the new power-up default configuration.

Time-of-Day Clock

Day of the week: 1 to 7 (Sunday through Saturday)

Year: 00 to 99

Month: 1 to 12 (January through December)

Day: 1 to 31

Minutes: 00 to 59

Seconds: 00 to 59

Unit Number: 1 to 30

4 BASE UNIT INSTALLATION

4.1 UNPACKING

After opening the box, check the packing list that comes with the M Series to ensure that you have received all components. At a minimum you should have received the unit, this manual with any applicable addendums and separate manuals for the I/O modules, and a software utility diskette. The M3, M4, M6 and M9 are provided with an external AC power adapter. Check the unit to make certain that it did not incur damage during shipping. If items are missing or damage did occur, please contact BayTech technical support at 800-523-2702.

4.2 SOFTWARE UTILITY DISKETTE

IMPORTANT: Copy the BayTech original diskette onto a blank diskette and store the original in a safe place.

BayTech provides utility software for DOS compatible PCs to assist you in configuring your M Series unit. This diskette contains the following programs: REMCONFIG.COD, SMODE.EXE, TERM.EXE and README.RDM. The M Series does not utilize the REMCONFIG.COD file. TERM.EXE is a terminal emulation program for DOS compatible PCs used to configure the various features of the unit. SMODE.EXE is a program used to configure COM ports of DOS compatible machines to operate at speeds faster than 9600 bps.

Please review the README.RDM file to obtain instructions for TERM.EXE and SMODE.EXE. To view the README.RDM file on your screen, first insert the diskette into your PC's disk drive and then enter the command **TYPE README.RDM** from your disk drive prompt. To print this file, enter the command **COPY README LPT1:** from your disk drive prompt.

43 **POWER**

The M16 DAC and M8 DAC require 115 VAC, 60 Hz power and come with a three-prong power cord. Do not attempt to operate the unit with a two-prong socket or adapter. 230 VAC, 50 Hz is optional. Plug the AC connector into an AC outlet. The M9, M6, M4, and M3 require external AC power. Plug the AC jack of the external power supply into the receptacle on the back of the unit. Plug the AC connector into an AC outlet.

IMPORTANT: The AC outlet must be located near the equipment and must be easily accessible.

All models power up when you press the power switch to "ON". A green LED on the front panel illuminates when power is applied.

CAUTION: Do not attempt to make any internal changes. Any upgrades to the main board EPROM must be performed by an authorized service technician or by BayTech. Please contact BayTech at 1-800-523-2702 for more information.

44 **SERVICE PORT/SERVICE MODEM CABLING**

If you have a unit equipped with a service modem, the cable required to connect the telephone interface to the *DIAL LINE* modem port is a standard 4-pin modular straight-through cable.

CAUTION: Use caution when installing or modifying telephone lines. Never install telephone wiring during a lightning storm. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.

The service port has an RJ-45 modular connector. Most serial computers and terminals do not have modular connectors. Therefore, adapters are required to convert from DB-25 or DE-9 connectors to modular connectors. The service port uses the following communication signals:

SERVICE PORT 8-PIN MODULAR EIA-232 PIN/SIGNAL DEFINITION			
PIN	SIGNAL	DIRECTION	DESCRIPTION
1	DTR	Output	Data Terminal Ready. Enable/disable receiving characters
2	DCD	Output	Data Carrier Detect. +12 Volts when unit is powered on.
3	RTS	Output	Request To Send. +12 Volts when unit is powered on.
4	TX	Output	Transmit Data
5	RX	Input	Receive Data
6	DSR	Input	Data Set Ready. Not used as a handshake line.
7	GND	----	Signal Ground
8	CTS	Input	Clear To Send. Enable/disable transmitting characters

An adapter is required to connect an IBM PC to the service port. *Figure 9* shows the required adapter for a terminal having a DB-25 serial connector. *Figure 10* on the following page shows the required adapter for a PC with a DE-9 connector.

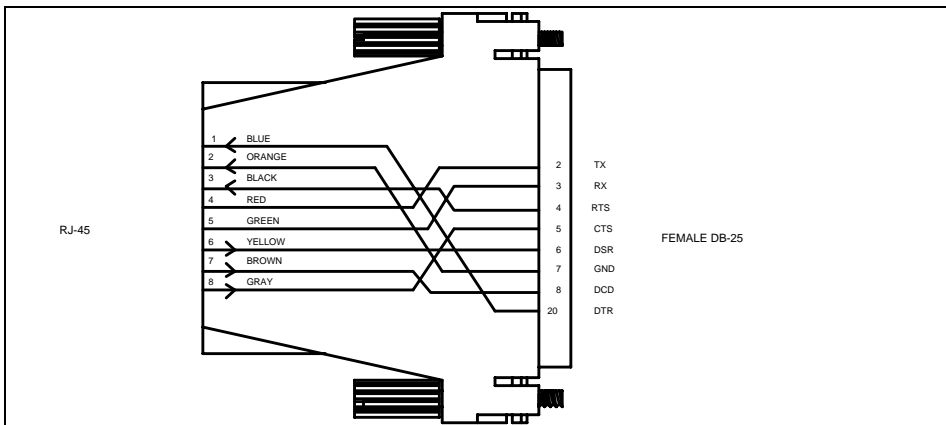


Figure 9: PC, PS/2 Computer/Terminal Adapter
 BayTech Part No. 25FRJ45PC-3

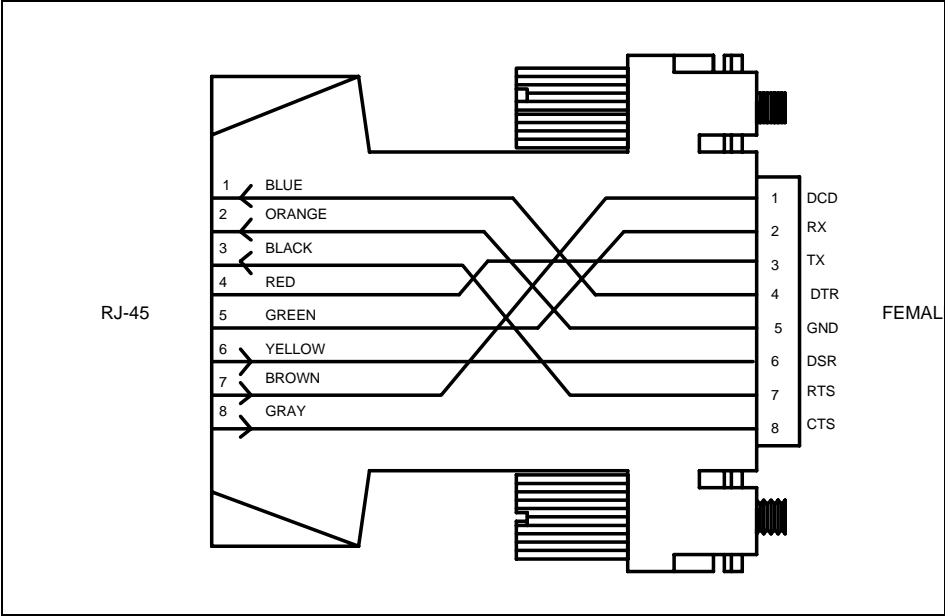


Figure 10: AT Computer Adapter
 BayTech Part No. 9FRJ45PC-3

Figure 11 shows the required cable to connect the adapters to the service port.

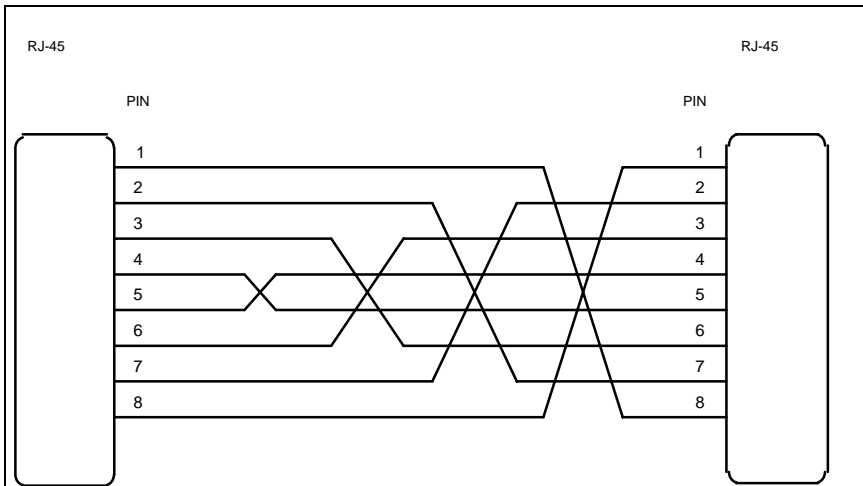


Figure 11: Crossed RJ-45 Cable
 BayTech Part No. RJ08X010 (10 feet)

4.5 MODULE INSTALLATION

Some of the modules that can be installed in the M Series include the following:

Part No.	Description	Connector Type
V50	I/O module: 4 EIA-232 serial ports, isolated interface	RJ-45
V71	Host module: EIA-232/EIA-422/current loop interface	DB-25 & RJ-45
V72 & V72TP	Host module: Ethernet (IEEE 802.3), 10BASE2 & 10 BASE-T	BNC & RJ-45
V73	I/O module: 4 EIA-232 serial ports, TTL levels	RJ-45
V74	I/O module: 4 EIA-232 serial ports	RJ-45
V75	I/O module: 4 EIA-422/232 serial ports	RJ-45
V76	I/O module: 4 current loop serial ports	RJ-45
V86	I/O module: 4 EIA-485/422 serial ports, isolated	RJ-45
V87	I/O module: 4 EIA-485/422 serial ports	RJ-45
V77 ADM-1	I/O module: 8 or 16 analog-to-digital channels	DB-25
V78 CRM-1	I/O module: 8 control relay channels	DB-25
V79 PDI-1	I/O module: 16 switch closure channels	DC-37
V80 PDI-2	I/O module: 16 optically isolated channels	DC-37
V81 DAM-1	I/O module: 8 digital-to-analog channels	DB-25
V82 PCM-1	Programmable Control Module	N/A
V83 ECM-1	I/O module: 12 event counter channels	DC-37
V84 ADR-1	I/O module: 6 analog-to-digital channels, 6 switch closure channels, and 4 relay channels	HDL-44 DA-15
V93	Host module: V.32bis modem	RJ-11
M03*	Memory module: Expandable up to 16MB	N/A
* - The M03 memory module occupies one module slot thereby reducing the maximum number of host or I/O modules the can be installed by one		

VERY IMPORTANT!!!: The first module slot (Module 1) of a M8 or M16 with a LCD display must be occupied by a host module.

You will need a straight-slot screwdriver to perform the installation.

1. **IMPORTANT:** Remove power from the unit by depressing the power switch on the front of the unit to OFF and also remove the power cord from the socket.
2. Determine which module slot the module will install into. Modules are typically installed in sequence from left to right (facing rear of unit). The module slots are labeled on the top panel as "1", "2", ..., "16". If you need to upgrade the memory on the M03 memory module, please refer to *Appendix B.4* before installing the module into the base unit.
3. Remove the flat aluminum plate covering the slot into which the new module will be installed by loosening the 2 straight slot screws and then removing the plate from the rear panel. Save the aluminum plate in the event you have to remove the module in the future.
4. Install the new module by sliding the horizontal card edges along the grooves inside the module slot. Each module has a card-edge connector that fits into a receptacle inside the base unit. Apply a moderate amount of pressure to the connector board of the module until you feel the card edge connector slip into the receptacle inside. You will not be able to mount the back plate of the module to the chassis if the module is not installed all the way.
5. Mount the back plate of the module to the M Series chassis by tightening the 2 straight slot screws on the back plate.
6. Apply power to the unit by plugging in the power cord and depressing the power switch on the front of the unit to ON.

5 BASE UNIT OPERATION

5.1 BASE UNIT USER-PROGRAMMABLE FEATURES

You can program the year, month, day, hours, minute, and second for the main unit. All modules derive their time from the base unit's time-of-day clock. You can also program the Unit Number from 1 to 30.

5.2 BASE UNIT BASIC OPERATION

The M Series base unit acts as a switch between the host control module(s) and the I/O modules. The base unit also allows configuration for the entire M Series system from the service port or service modem and limited configuration from the front panel.

The base unit contains the system power supply (M8 & M16 only), an optional LCD display with front panel controls (optional on M8 & M16), or LEDs (available on all units), a service port, an optional service modem, a main unit PC board with system control firmware and time-of-day clock(optional on M3 & M4), multiple expansion slots for host control modules and I/O modules, a *POWER* LED, and a power ON/OFF switch.

When the unit is powered up, the *POWER* LED illuminates. Units equipped with LEDs go through a self test before the LEDs turn off. Units equipped with LCD and front panel controls scroll through several menus as shown below and on the following page for the M16.

Modules	Installed
01 02 03 04 05 06	
07 08 09 10 11 12	
13 14 15 16	

Bay Technical
Associates
Data Acquisition
Controller

Bay Technical Assoc.

Select Module
00

NOTE: Only modules actually installed appear in the first screen on the previous page. If a module slot is empty, a blank is shown. This example shows sixteen modules installed.

Once all module LEDs are out or the "Bay Technical Assoc." menu is displayed on the LCD, the unit is in operations mode and ready to accept commands and/or data. The commands consist of data commands, dynamic configuration commands, and menu-driven configuration commands. Data and dynamic configuration commands are issued by a host control module. Menu-driven configuration commands are issued by a host control module, the service port, or the service modem.

5.3 BASE UNIT DATA COMMANDS

This section addresses the data commands supported by the base unit itself. Refer to the appropriate sections for the host control module and the various I/O modules for a description of data commands supported by those M Series components. The various configuration commands supported by the base unit are described in *Section 6* (Base Unit Configuration).

The base unit supports data commands: Read Time, Reset and Echo Mode.

5.3.1 BASE UNIT READ TIME (RT) COMMAND

The Read Time (RT) command is used to obtain the current time and date from the base unit's time-of-day clock. A user connected to a V71 host module or a user connected to the service port or service modem can issue the Read Time command. The user must select the base unit prior to sending the Read Time command. A user connected to a V71 host module selects the base unit by sending the port select code, "0", and *Carriage Return* or *Line Feed*. For example, if using the default port select code, the user would send **\$BT0<cr>**, where <cr> is *Carriage Return*. A user connected to the service port or service modem selects the base unit by sending **\$BT0<cr>** (use **\$BAYTECH0<cr>** with M4 and M8 DAC).

The Read Time command has the following format: **RT<cr>**. When the **RT<cr>** command is issued, the base unit responds with the current time and date as follows: **HH:MM:SS,MM/DD/YY**, where HH is the hour, the first MM is the minute, SS is the second, the second MM is the month, DD is the day, and YY is the year.

5.3.2 BASE UNIT RESET COMMAND

The Reset command is used to instruct the entire M Series system to do a software reset. The front panel LCD or LEDs go through the same sequence as described in *Section 5.2*. Only a user connected to the service port or service modem can issue the Reset command. The Reset command has the following format: **\$BTRESET<cr>** (**\$BAYTECHRESET<cr>** on M4 and M8 DAC). This command does not affect any saved configuration parameters that have been changed from the default values.

5.3.3 ECHO MODE

The service modem can be set to an "echo" mode by sending seven semicolons(;) in succession from the host terminal. While in echo mode, the service modem will echo back all characters received by the connected terminal. Echo mode is terminated by selecting a

specific M-Series module (\$BTm<cr> m= 1-16) or a specific peripheral communications port (\$BTm,p<cr> M = 1 to 16 and p = 1 to 4).

54 **BASE UNIT LED DESCRIPTION**

All units can be equipped with LEDs on the front panel. The green *POWER* LED indicates that power is applied to the unit. The red module LEDs are used to show connection status. These LEDs are grouped into module numbers (*Module 1, Module 2, ..., to Module 16*) with each module number having four LEDs (*1 to 4*). The functionality of the LEDs for a particular module location depends on the type of module installed in that location.

When a specific port on a V50, V73, V74, V75, V76, V86 or V87 module is selected by a V71 host module, the LED for the selected port and Port 1 of the V71 module will illuminate. When a V71 host module places an I/O module into command mode, the LED for Port 1 of the V71 will illuminate. When a V50/V73/V74/V75/V76/V86/V87 I/O module is placed into configuration mode by a V71 host module, the service port, or the service modem, all LEDs for the I/O module will illuminate. For example, if a V71 host module selects Port 1 of a V74 module, the LED for Port 1 of the V71 module and Port 1 of the V74 module will illuminate. If a V71 host module places a V74 module into configuration mode, all LEDs for the V74 module and Port 1 of the V71 host module will illuminate.

Units equipped with LEDs have two LEDs for the service modem and a single LED for the *EIA-232* service port. When the *CX* LED is illuminated for the service modem or service port, this indicates the connected device has selected the main board or an installed module. When a connection is established between a remote modem and the service modem, the *CD* LED for the service modem will illuminate.

6 **BASE UNIT CONFIGURATION**

The base unit can be configured from the front panel for units equipped with LCD and control panel, the service port, the service modem, or a host control module. *Section 6.1* discusses front panel configuration and *Section 6.2* discusses configuration from the service port, service modem, and host communications module.

NOTE: Once the date has been programmed, the base unit will automatically adjust for months having 28, 29, 30, or 31 days for all years up to 1999. The base unit also tracks the correct day of the week automatically.

6.1 BASE UNIT FRONT PANEL CONFIGURATION

NOTE: This section does not apply to units equipped with LEDs.

The base unit is configured from the front panel by pressing the *SELECT* key when the LCD displays "Module00 ". The base unit main menu will appear as follows:

```
MAIN MENU
Set Time
Set Date
Set Unit
```

You can select the current time and date as well as the Unit Number from this menu. Highlight the desired selection with the blinking cursor by pressing the ▲ and ▼ keys on the front panel and then press *SELECT*. You can exit from the base unit main unit by selecting "Exit" which is not shown in the initial main menu. Use the ▲ and ▼ keys to display the "Exit" selection. If you select "Set Time", the following menu will appear:

```
SET TIME
HH:MM:SS
Up and Dwn to change
Select to accept
```

The "SET TIME" menu is used to program the base unit's time-of-day clock. The first highlighted entry is seconds (SS). Choose the desired seconds using the ▲ and ▼ keys and press *SELECT*. The next highlighted entry is minutes (MM). Likewise, use the ▲ and ▼ keys to select the desired minutes and press *SELECT*. The last highlighted entry is hours (HH). Once the desired time has been selected, the display will return to the "MAIN MENU".

NOTE: While in configuration mode, the time-of-day clock is not updated until the "SET TIME" menu is exited. The time reported by individual modules may not be updated immediately. Modules are operating properly if they update their reporting times within a minute from the time the "SET TIME" menu is exited.

If you select "Set Date" from the "MAIN MENU", the following menu will appear:

```
SET DATE
MM/DD/YY
Up and Dwn to change
Select to accept
```

The "SET DATE" menu is used to program the base unit's date. The first highlighted entry is year (YY). Choose the desired year using the \blacktriangle and \blacktriangledown keys and press *SELECT*. The next highlighted entry is day (DD). Likewise, use the \blacktriangle and \blacktriangledown keys to select the desired minutes and press *SELECT*. The last highlighted entry is month (MM). Once the desired date has been selected, the display will return to the "MAIN MENU".

NOTE: While in configuration mode, the date is not updated until the "SET DATE" menu is exited. The date reported by individual modules may not be updated immediately. Modules are operating properly if they update their reporting dates within a minute from the time the "SET DATE" menu is exited.

If you select "Set Unit" from the "MAIN MENU", the following menu will appear:

```
SET UNIT
XX
Up and Dwn to change
Select to accept
```

The "SET UNIT" menu is used to assign individual M Series units a Unit Number. The Unit Number is required to identify an individual unit when it is installed as a node in a network. The Unit Number is used by individual I/O modules as part of the designated host module address where data messages are sent to in auto reporting mode.

6.2 HOST MODULE, SERVICE PORT, AND SERVICE MODEM CONFIGURATION

To access configuration mode of the base unit from the V71 host module, use the following procedure. The M-Series service port and the V71 host module will not respond to commands for approximately 15 seconds after the unit is powered up or reset.

1. Connect a terminal to the V71 host module and configure the terminal's serial parameters to match those of the host module. From the factory, the V71 host module is set at 9600 baud rate, 8 word size, 1 stop bit, and no parity.
2. Connect to the base unit by sending the port select code (**\$BT - default**), **0**, and **Carriage Return or Line Feed**.
3. Access configuration mode by sending **\$CONFIG<cr>** where <cr> is *Carriage Return*. For example, if using the default port select code, send **\$BT0<cr>\$CONFIG<cr>** to enter into configuration mode for the base unit. No characters should be typed between **\$BT0<cr>** and **\$CONFIG<cr>**.

To access the configuration mode of the base unit from the service port or service modem, use the following procedure:

1. If configuring from the service port, connect a terminal to the *EIA-232* service port and configure the terminal's serial parameters to 9600 baud rate, 8 word size, 1 stop bit, and no parity. If configuring from the service modem, establish a connection between the remote terminal and service modem by dialing into the service modem. Once the unit is powered on, the following message will be sent out of the service port:

```
Bay Technical Associates  
Service Port  
Firmware Revision 4.XX
```

This same message will be sent to the remote modem once a connection is established with the service modem.

The service modem has priority over the *EIA-232* service port. When a connection is established between a remote modem and the service modem, the following message will be sent out of the *EIA-232* service port:

```
Incoming call
Service port access locked out
```

A terminal connected to the *EIA-232* service port is not allowed access to the M Series unit while the service modem has a connection with a remote modem. If a user connected to the *EIA-232* service port is currently communicating with the M Series unit and a remote user attempts to access configuration mode through the service modem, the remote user is not allowed access to the M Series unit.

2. Place the base unit or desired module into command mode by sending **\$BT0n<cr>** or **\$BT0<lf>** where n is 0 for the base unit or the desired module number (1-16), <cr> is *Carriage Return* and <lf> is *Line Feed*. (Use **\$BAYTECHn<cr>** or **\$BAYTECHn<lf>** with M4 and M8 DAC units).
3. Access configuration mode by sending **\$CONFIG<cr>**. No characters should be typed between **\$BT0<cr>** and **\$CONFIG<cr>**. Use **\$BAYTECH0<cr>** on M4 and M8 DAC.

Once you access configuration mode from a host communications module, the service port, or the service modem, the following menu will appear on the terminal screen:

```
Control Board System Menu
Bay Technical Associates
Copyright 199X
Unit Number 001

Set Date.....1
Set Time.....2
Set Unit Number.....3
Exit System Menu.....X

Enter Request:
```

Enter the desired selection. The "X" selection (Exit System Menu) will return you to operations mode. Once you exit configuration mode, you should disconnect by sending **\$BT<cr>** if configuring from the V71 host module or **\$BT<cr>** if configuring from the service port or service modem. (Use **\$BAYTECH<cr>** when using M4 and M8 DAC).

SET DATE

If you type "1" from the menu above (Set Date), you will receive the following menu:

Enter date <MM/DD/YY>:

Type the desired date. For example, to enter December 31, 1999, you would type **12/31/99**.

SET TIME

If you type "2" from the menu above (Set Time), you will receive the following menu:

Enter time <HH:MM:SS>:

Type the desired time. For example, to enter 11:59:59, you would type **11:59:59**.

SET UNIT NUMBER

If you type "3" from the menu above (Set Unit Number), you will receive the following menu:

Enter unit (1-30):

Type the desired Unit Number.

6.3 BASE UNIT DYNAMIC CONFIGURATION COMMANDS

You can configure the date and time for the base unit from a host communications module by sending the "ST" (Set Time) dynamic configuration command. The host communications module must first select base unit prior to sending the "ST" command. This is done by sending the port select code, "0", and *Carriage Return* or *Line Feed*. The format of the "ST" command is as follows:

ST HH:MM:SS,MM/DD/YY<cr>

HH is the desired hour, the first MM is the desired minute, SS is the desired second, the second MM is the desired month, DD is the desired day, YY is the desired year, and <cr> is *Carriage Return*.

For example, if using the default port select code (\$BT) and you wish to program the time and date to 11:59:59 on December 31, 1999, you would send the following from the host device:

\$BT0<cr>ST 11:59:59,12/31/99<cr>

7 V71 GENERAL INFORMATION

The V71 Host Communication Module is the primary user interface to the BayTech M Series Data Acquisition and Control (DAC) units. This module allows a connected host terminal to issue specific configuration or data commands to the various I/O modules or the M Series unit main board. Multiple V71 modules can be installed in an M Series chassis allowing certain I/O module types to send data to specific V71 modules.

IMPORTANT: The first module slot of any unit equipped with LCD and front panel controls must be occupied by a V71 module.

The V71 module allows for multiple line interface types including EIA-232, EIA-422, and current loop and supports serial speeds up to 115.2K bps. Other programmable features in addition to the serial interface and baud rate include word size, stop bits, parity, XON/XOFF handshaking, and the port select code. In addition, the V71 module allows for RJ-45 or DB-25 cabling.

Please see *Section 2* for more information on the available types of I/O modules.

8

V71 SPECIFICATIONS

INTERFACE: Asynchronous; EIA-232, -12v mark, +12v space; EIA-422 0 to +5 volt differential (TX+, TX-, RX+, RX-); current loop.

CONNECTORS: DB-25 or RJ-45.

HANDSHAKING: CTS/DTR or selectable XON/XOFF.

DIMENSIONS: 6"h x 4.5"w.

FACTORY POWER-UP DEFAULT CONFIGURATIONS:

Baud rate: 9600.

Word size: 8 bits.

Parity: None.

Stop bits: 1.

XON/XOFF: Disabled.

Port Select Code: \$BT

Line Interface: EIA-232

USER-PROGRAMMABLE CONFIGURATIONS:

Easy to configure using on-screen menu or front panel. Choices are saved in non-volatile memory to become the new power-up default configuration.

Baud rate: 50, 75, 110, 135, 150, 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 76800, and 115200 bps.

Word size: 7 or 8 bits.

Parity: Even, odd or none.

Stop bits: 1 or 2.

XON/XOFF: Enabled or disabled for transmit/receive.

Line Interface: EIA-232, EIA-422, or current loop.

Port Select Code: Any ASCII character string up to 8 characters.

9 V71 CABLING

The V71 has a DB-25 and two RJ-45 connectors for interface to the host terminal. The V71 supports three line interfaces: EIA-232, EIA-422, and current loop. The factory default setting provides EIA-232 line interface on the DB-25 port and the *EIA-232* RJ-45 port. The line interface is programmed by entering into the V71 configuration mode (see *Section 11*).

If you change the line interface to EIA-422 in configuration mode, the default hardware settings provide EIA-422 line interface on the *EIA-422/485* RJ-45 port. You can change a hardware jumper setting on the module that provides EIA-422 line interface on the DB-25 port. Please see *Appendix C* for instructions on changing the line interface jumper settings.

Current loop line interface is provided on the DB-25 port only.

IMPORTANT: Before you proceed with cabling your equipment to the V71, you should determine the required line interface for your application and verify the connector type and pin/signal definitions for your equipment.

Please see *Section 9.1* for cabling instructions using EIA-232 line interface, *Section 9.2* if using EIA-422 line interface, or *Section 9.3* if using current loop line interface.

9.1 V71 EIA-232 LINE INTERFACE

See *Section 9.1.1* if using DB-25 cabling (default) or *Section 9.1.2* if using RJ-45 cabling.

9.1.1 V71 DB-25 CABLING FOR EIA-232

The DB-25 port on the V71 has a male DTE type connector and uses the following pins and signals for communication:

D13-25 PIN/SIGNAL DEFINITION FOR EIA-232 LINE INFORMATION			
Pin#	EIA-232 Signal	Direction	Description
1	PGND	----	Protective Ground
2	TX	Output	Transmit Data (data out)
3	RX	Input	Receive Data (data in)
4	RTS	Output	+ 12 volts when the M16/M8 DAC is powered up.
5	CTS	Input	Handshake In, enable/disable the transmission of characters
7	SGND	----	Signal Ground
20	DTR	Output	Handshake Out, enable/disable the receiving of characters

If you are interfacing a DCE device such as a modem to the V71 DB-25 port, you must use a straight cable as shown in *Figure 12* on the following page. If you are interfacing a DTE device such as a terminal to the V71 DB-25 port, you must use a crossed or null modem cable as shown in *Figure 13* on the following page.

V71 - DTE
FEMALE DB-25

DCE DEVICE
MALE DB-25

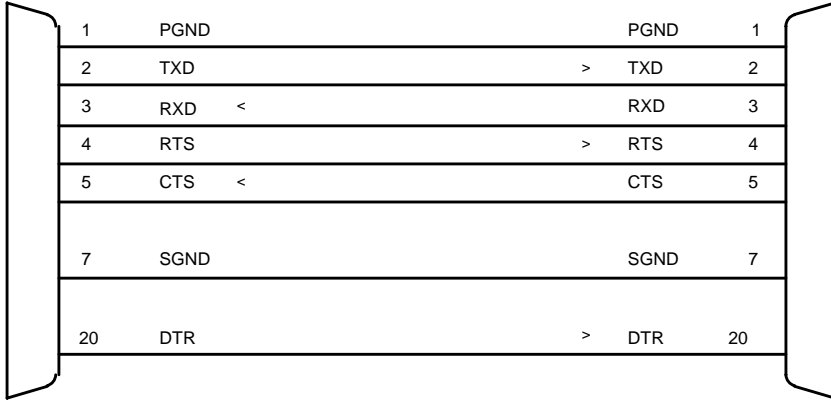


Figure 12 - V71 (DTE) to DCE Device

V71 - DTE
FEMALE DB-25

DTE DEVICE
FEMALE DB-25

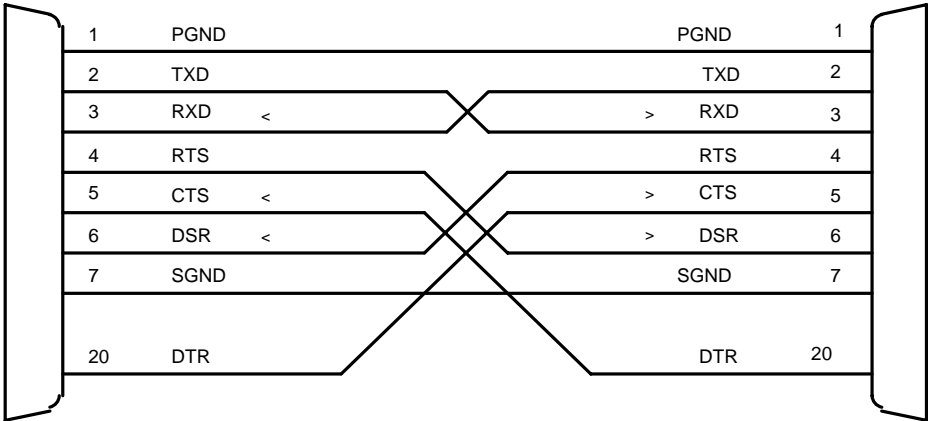


Figure 13 - V71 (DTE) to DTE Device

9.1.2 V71 RJ-45 CABLING FOR EIA-232

The V71 provides EIA-232 line interface on the *EIA-232* RJ-45 modular port. Most serial computers, modems, and printers do not have RJ-45 modular connectors. Adapters are required to convert from DB-25 or DE-9 connectors to modular connectors. BayTech has a complete line of RJ-45 adapters and cables that make your installation quick and trouble free. *Figure 14* and *Figure 15* are drawings of a RJ-45 receptacle and plug. The pin number assignments are given.

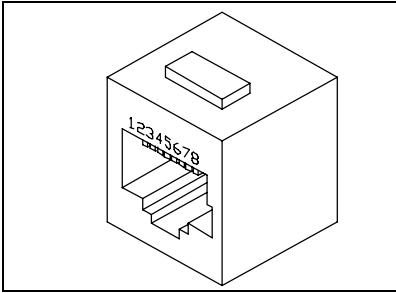


Figure 14: RJ-45 Receptacle

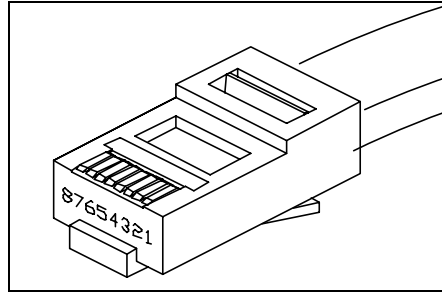


Figure 15: RJ-45 Plug

The V71 *EIA-232* modular port uses the following signals:

<i>EIA-232</i> RJ-45 PIN/SIGNAL DEFINITION			
Pin	<i>EIA-232</i> Signal	Direction	Description
1	DTR	Output	Handshake Out, enable/disable the receiving of characters
2	GND	----	Signal Ground
3	RTS	Output	+12V when powered is applied, not used as a handshake line
4	TX	Output	Transmit Data (data out)
5	RX	Input	Receive Data (data in)
6	N/A	----	Not Used
7	GND	----	Signal Ground
8	CTS	Input	Handshake In, enable/disable the transmission of characters

COMPUTER INTERFACE

To interface a computer or terminal to the V71, refer to the RJ-45 adapter drawings below. Refer to *Figure 16* below if host computer or terminal has a DB-25 male connector (most IBM XT and PS/2 type computers). Refer to *Figure 17* if the host computer has a DE-9 male connector (IBM AT type computers).

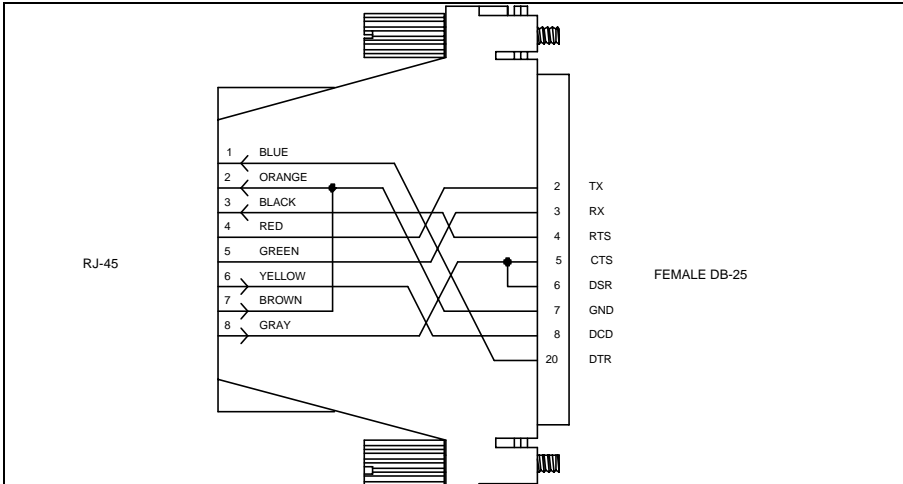


Figure 16: PC, PS/2 Computer/Terminal Adapter
BayTech Part No. 25FRJ45PC-1

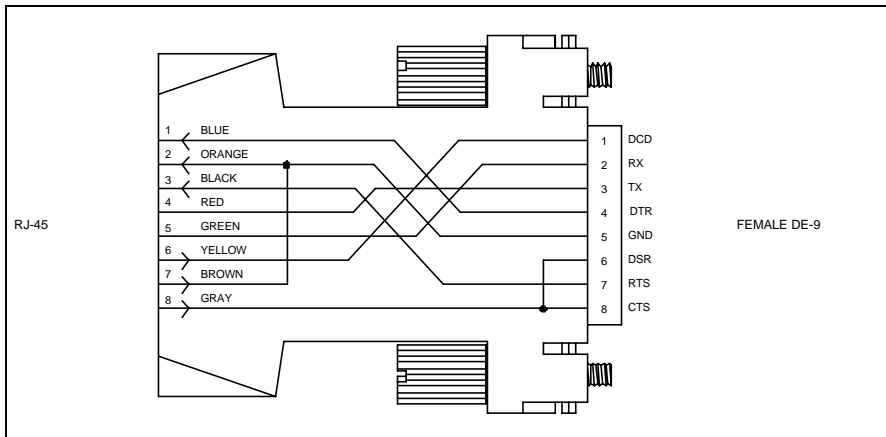


Figure 17: AT Computer Adapter
BayTech Part No. 9FRJ45PC-1

MODEM INTERFACE

To interface your asynchronous modem to the V71 refer to *Figure 18*.

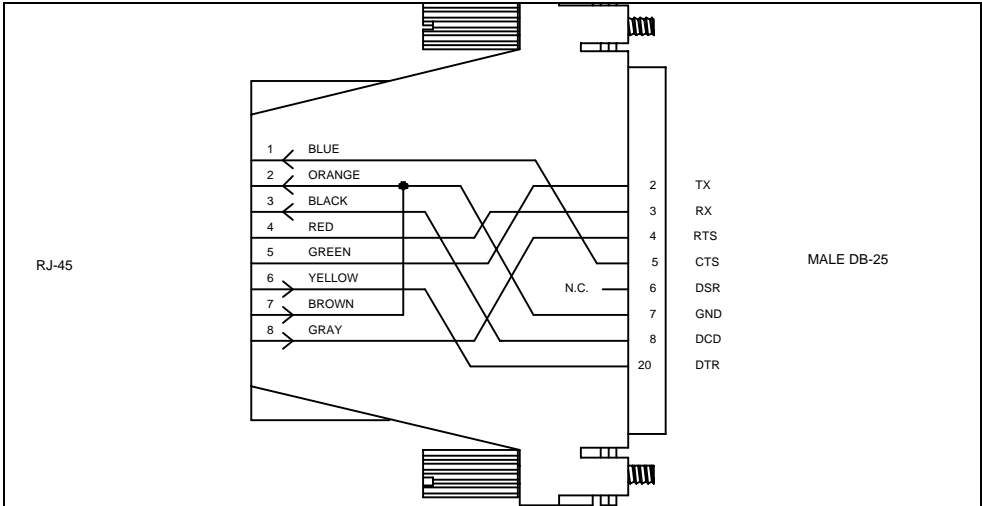


Figure 18: Modem Adapter
BayTech Part No. 25MRJ45MD-1

IMPORTANT: When modular connectors are used as shown in *Figures 16 - 18* above, crossed RJ-45 cables are required. See the cable diagram below.

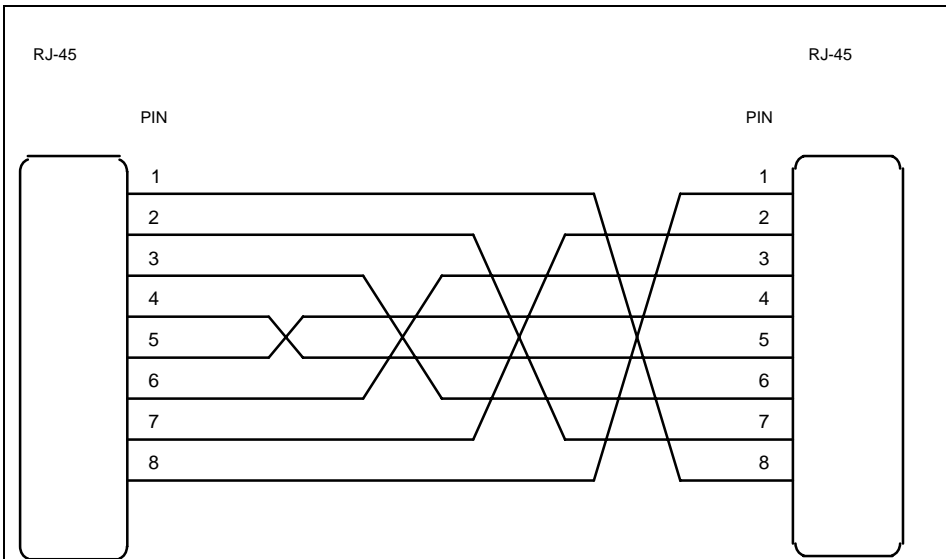


Figure 19: Crossed RJ-45 Cable
BayTech Part No. RJ08X010 (10 feet)

9.2 V71 EIA-422 LINE INTERFACE

See *Section 9.2.1* if using RJ-45 cabling (default) or *Section 9.2.2* if using DB-25 cabling.

NOTE: When using EIA-422 line interface, you must access configuration mode and reconfigure the line interface to EIA-422 as described in *Section 11.4*.

9.2.1 V71 RJ-45 CABLING FOR EIA-422

The V71 RJ-45 port uses the following signals for EIA-422 communication:

RJ-45 PIN/SIGNAL DEFINITION FOR EIA-422 LINE INTERFACE			
Pin	EIA-422 Signal	Direction	Description
1	HSO	Output	Handshake Out, enable/disable the receiving of characters
2	GND	----	Signal Ground
3	TX+	Output	Transmit Data (+)
4	TX-	Output	Transmit Data (-)
5	RX-	Input	Receive Data (-)
6	RX+	Input	Receive Data (+)
7	GND	----	Signal Ground
8	HSI	Input	Handshake In, enable/disable the transmission of characters

You can use either RJ-45 (8-wire) or RJ-11 (4-wire) cabling when connecting the host computer or terminal to the V71 using EIA-422 line interface. The required cable should have TX+ connected to RX+ (and vice versa), TX- connected to RX- (and vice versa), HSO connected to HSI (and vice versa), and have the signal grounds connected. Please see *Figure 20* on the following page.

V71 (EIA-422, 8-wire) RJ-45		Equipment Connections
1	HSO	HSI
2	GND	GND
3	TX+	RX+
4	TX-	RX-
5	RX-	TX-
6	RX+	TX+
7	GND	GND
8	HSI	HSD

Figure 20: V71 RJ-45 (8-wire) Connection for EIA-422 Line Interface

NOTE: If you wish to use RJ-11 (4-wire) cabling, connect pins 3 through 6 on the RJ-45 connector as shown in *Figure 20*. In addition, you should enable XON/XOFF handshaking as described *Section 11.4*.

9.2.2 V71 DB-25 CABLING FOR EIA-422

IMPORTANT: If you intend to use EIA-422 line interface utilizing the DB-25 connector on the V71, you must change the jumper setting on the V71 board as described in *Appendix C* and reconfigure the line interface to EIA-422 as described in *Section 11.4*.

The V71 DB-25 port uses the following signals when configured for EIA-422 communication:

DB-25 PIN/SIGNAL DEFINITION FOR EIA-422 LINE INTERFACE			
Pin#	EIA-422 Signal	Direction	Description
1	PGND	----	Protective Ground
2	TX-	Output	Transmit Data (-)
3	RX-	Input	Receive Data (-)
5	HSI	Input	Handshake In, enable/disable the transmission of characters
7	SGND	----	Signal Ground
14	TX+	Output	Transmit Data (+)
16	RX+	Input	Receive Data (+)
20	HSO	Output	Handshake Out, enable/disable the receiving of characters

The required cable should have TX+ connected to RX+ (and vice versa), TX- connected to RX- (and vice versa), HSO connected to HSI (and vice versa), and have the signal grounds connected. Please see *Figure 21* below.

V71 (EIA-422) DB-25		Equipment Connections
1	GND	GND
2	TX-	RX-
3	RX-	TX-
5	HSI	HSO
7	GND	GND
14	TX+	RX+
16	RX+	TX+
20	HSO	HSI

Figure 21: V71 DB-25 Connection for EIA-422 Line Interface

NOTE: If you wish to use 4-wire cabling, connect pins 2, 3, 14, and 16 on the DB-25 connector as shown in *Figure 21*. In addition, you should enable XON/XOFF handshaking as described *Section 11.4*.

9.3 V71 CURRENT LOOP LINE INTERFACE

IMPORTANT: If you intend to use current loop line interface, you must use the DB-25 connector on the V71 and reconfigure the line interface to current loop as described in *Section 11.4*.

Current loop line interface provides active transmit and active or passive receive signals. The V71 RJ-45 port uses the following signals for current loop line interface with active transmit and passive receive:

DB-25 PIN/SIGNAL DEFINITION FOR CURRENT LOOP (ACTIVE TX PASSIVE RX)			
Pin#	Current Loop Signal	Direction	Description
9	TX+	Output	Transmit Data (+)
11	TX-	Output	Transmit Data (-)
18	RX+	Input	Receive Data (+)
25	RX-	Input	Receive Data (-)

The V71 RJ-45 port uses the following signals for current loop line interface with active transmit and active receive:

DB-25 PIN/SIGNAL DEFINITION FOR CURRENT LOOP (ACTIVE TX ACTIVE RX)			
Pin#	Current Loop Signal	Direction	Description
7	GND	----	Ground
9	TX+	Output	Transmit Data (+)
11	TX-	Output	Transmit Data (-)
18	RX-	Input	Receive Data (-)
19	RX+	Input	Receive Data (+)
25	GND	----	Ground

Figure 22 below shows the basic active transmit circuit, Figure 23 shows the basic passive receive circuit, and Figure 24 on the following page shows the basic active receive circuit.

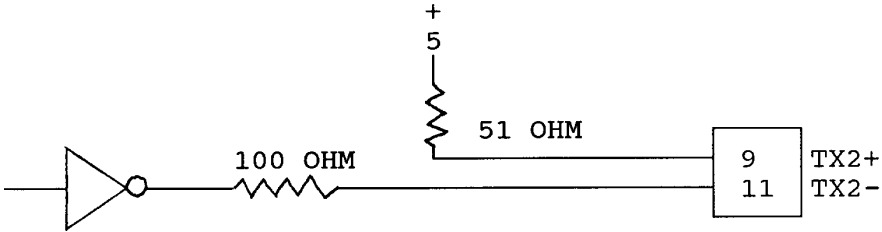


Figure 22: Basic Active Transmit Circuit

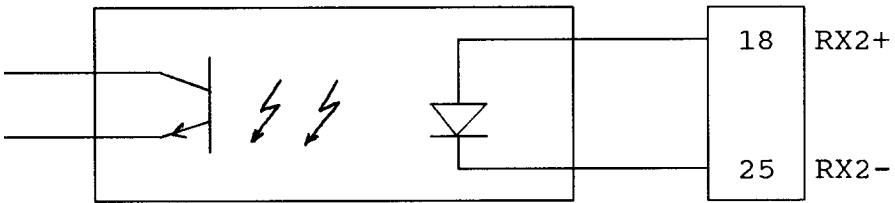


Figure 23: Passive Receive Circuit

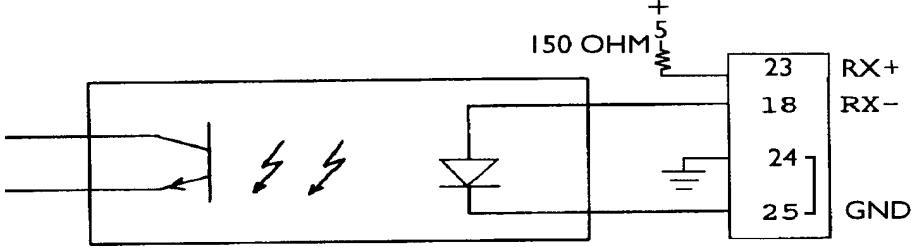


Figure 24: Active Receive Circuit

Figure 25 below shows the recommended cable to connect the host computer to the V71 with active transmit and passive receive.

V71 (Current Loop) DB-25	Equipment Connections
9 TX+	RX+
11 TX-	RX-
18 RX+	TX+
25 RX-	TX-

Figure 25: Recommended Cabling Using Current Loop Line Interface (Active Transmit Passive Receive)

Figure 26 below shows the recommended cable to connect the host computer to the V71 with active transmit and active receive.

V71 (Current Loop) DB-25	Equipment Connections
9 TX+	RX+
11 TX-	RX-
18 RX-	TX-
19 RX+	TX+
7 GND	
25 GND	

Figure 26: Recommended Cabling Using Current Loop Line Interface (Active Transmit Active Receive)

NOTE: Figure 25 and Figure 26 show the transmit and receive connections in pairs. Each pair should be connected with twisted-pair cabling.

10 V71 OPERATION

Section 10.1 discusses user-programmable operations and *Section 10.2* discusses basic V71 operation.

10.1 V71 USER-PROGRAMMABLE FEATURES

User-programmable features for the V71 include the port select code and serial port configuration. These features are programmed by accessing the menu-driven configuration mode from the V71 or service port (see *Section 11*). The serial port configuration can also be programmed from the front panel of units equipped with LCD and control panel (see *Section 11.6*).

10.1.1 V71 PORT SELECT CODE

The port select code is sent as part of a select sequence by the host terminal to a V71 in order to select specific I/O modules or the main board of the M Series model to issue configuration or data commands. The port select code is a programmable ASCII character string that can range from 1 to 8 characters. *Section 10.2* describes how the port select code is used to select specific I/O modules or the main board of an M Series model.

The default port select code is \$BT.

10.1.2 V71 SERIAL PORT CONFIGURATION

The V71 translates data for devices using different serial configurations. You can set the baud rate, word size, stop bits, parity and XON/XOFF handshaking for each individual port. In addition, you can select the line interface for the V71. *Section 8* (V71 Specifications) lists the possible values for these features.

The factory default serial port configuration is 9600 baud rate, 8 bit word size, 1 stop bit, no parity, XON/XOFF handshaking disabled, and EIA-232 line interface.

10.1.3 V71 RESET COMMAND

The entire M-Series unit can be reset by issuing a reset command to the V71. The reset command consists of the port select code (\$BT - default) followed by "RESET" and a terminating character of *Carriage Return or Line Feed*. For example, if using the default port select code, send \$BTRESET <cr> to the V71 to reset the unit, where <cr> is *Carriage Return*.

10.1.4 V71 TEST COMMAND

A host computer can verify communication with the V71 by sending the port select code (\$BT - default), followed by capital "T" and Carriage Return or Line Feed. The V71 will respond with an "ACK" character (06 Hex). For example, if using the default port select code, send \$BTT<cr> and the V71 will respond with "ACK" if there is communications between the host terminal and the V71.

10.2 V71 BASIC OPERATION

Once the host computer has been cabled to the V71 and the V71 configured for the desired parameters, the host computer is ready to perform data acquisition and control functions with the various I/O modules. Among the functions you can perform are configuration and data commands. Configuration commands are used to program the features of the various I/O modules and the data commands are typically used to request stored data received from an I/O module. Data commands are also used to instruct certain I/O modules to perform a specific task (e.g., energize or de-energize a relay).

Configuration is done via verbose (menu-driven) mode or non-verbose mode where a character string is sent to configure the desired I/O module. You can also configure the system clock of the M Series unit from the V71 in the verbose mode. The supported configuration and data commands for a specific I/O module are described in the documentation for that module. All I/O modules can be programmed

to communicate in immediate reporting mode where data is sent to the host computer as it is received.

An I/O module must be in *command mode* before the V71 can access the verbose (menu-driven) configuration mode for that I/O module, issue non-verbose configuration commands, or issue data commands. The main board must be in command mode to configure the system clock. An I/O module or the main board is placed into command mode by sending a *select sequence* to the V71 from the host computer. The select sequence consists of the port select code, the desired module number (0 to 16), and a terminating character of *Carriage Return* (0D Hex) or *Line Feed* (0A Hex). The module number is "0" to place the M Series main board into command mode. For example, to place the fourth I/O module into command mode, send **\$BT4<cr>** from the host computer, where <cr> is *Carriage Return* and \$BT is the default port select code.

After you have configured and/or issued any necessary data commands to the desired I/O module or main board, you would typically disconnect from the I/O module/main board by sending the port select code followed by *Carriage Return*.

NOTE: If you attempt to place an I/O module or the main board into command mode and the I/O module/main board is currently selected by another host module or the service port, you will receive a **Busy!** message. You will have to wait until the other host module or service port disconnects from the desired I/O module or main board. If you attempt to connect to a module from the service port and the module is currently in command mode, you will receive the following message: **Requested Module is Busy!**

11 V71 CONFIGURATION

Configuration changes for the V71 module are made from the host terminal, the service port, or the front panel of a M8 or M16 with LCD.

To access the configuration mode of the V71 from the host terminal, use the following procedure:

1. Configure the host terminal's serial parameters to match those of the V71. From the factory, the V71 is set at 9600 baud rate, 8 word size, 1 stop bit, not parity, and XON/XOFF handshaking disabled. If you do not have a dumb terminal or a terminal emulation program, BayTech supplies a utility diskette which includes software to put an IBM PC or compatible into a terminal mode (TERM.EXE). See *Section 4.2* for more information on the utility software.
2. Connect to the V71 by sending the port select code, the appropriate module number (1 to 16), and *Carriage Return* or *Line Feed*.
3. Access configuration mode by sending **\$CONFIG<cr>**.

For example, if the V71 is installed in Unit 1 as Module 1, the default port select code (\$BT) is used, send **\$BT1<cr>\$CONFIG<cr>** to enter into configuration mode.

IMPORTANT: No characters should be typed between **\$BT1<cr>** and **\$CONFIG<cr>**. If this happens, the entire configuration sequence is discarded and you will have to send the configuration sequence again.

NOTE: The procedure to access configuration mode for the V71 from the service port is the same as described above except you connect your terminal to the service port which has a fixed serial configuration of 9600 bps, 8 bit word size, 1 stop bit, and no parity. In addition, you must send **\$BTX<cr>** (\$BAYTECHX<cr> on M4 and M8 DAC) to select the V71 as described in Step 2 where X = 1 to 16, then proceed to Step 3.

11.1 V71 MAIN CONFIGURATION MENU

The V71 responds to the receiving of \$CONFIG<cr> with an identification block and a menu of the available configuration options similar to the following:

```
Copyright (c) Bay Technical Associates, 199X
DAC V71 Rev. X.XX
This Module is 1
1) Status
2) Port Select Code
3) Serial Port Configuration
X) Exit Configuration
Enter Request :
```

NOTE: This menu shows the V71 installed as Module 1. A line showing the amount of memory is displayed as the third line in the header if an M03 memory module is installed.

NOTE: Menu selections are case sensitive. It is recommended your keyboard be in the CAPS LOCK position.

11.2 V71 STATUS

By responding to the *Enter Request:* message at the end of the main configuration menu (see *Section 11.1*) with "1" (Status), you can review the current configuration of the V71. The V71 will respond with:

Port	Baud Rate	Word Size	Stop Bits	Parity	Xon / Xmit	Xoff / Recv	Line Interface
1	9600	8	1	None	Off	Off	EIA-232

Port Select Code is:\$BT

Unit Number is : 1

Strike any key to continue

```
Copyright (c) Bay Technical Associates, 199X
DAC V71 Rev. X.XX
This Module is 1
```

- 1) Status
- 2) Port Select Code
- 3) Serial Port Configuration

X) Exit Configuration

Enter Request :

You can now make whatever changes are necessary by responding to the above menu. The "X" (Exit Configuration) will return you to the operations mode.

11.3 **V71 PORT SELECT CODE**

By responding to the *Enter Request:* message at the end of the main configuration menu (see *Section 11.1*) with "2" (Port Select Code), you can change the port select code to any ASCII character string from 1 to 8 characters. The V71 will respond with:

```
Port Select Code is:$BT
```

```
Enter Port Select Code (Max. 8 Characters)  
and ENTER when done:
```

Type the desired port select code followed by <ENTER>. For example, if you type #PORT followed by <ENTER>, the V71 will respond with:

```
Port Select Code is:#PORT
```

```
Enter Port Select Code (Max. 8 Characters)  
and ENTER when done:
```

If no additional change is desired, type <ENTER>. The V71 saves the new port select code permanently in the non-volatile memory and return to the main configuration menu (see *Section 11.1*).

NOTE: You cannot program the port select code to be \$BAYTECH from the service port. If you wish to use \$BAYTECH as the port select code, you must program the port select code from the V71 host module.

11.4 V71 SERIAL PORT CONFIGURATION

By responding to the *Enter Request:* message at the end of the main configuration menu (see *Section 11.1*) with "3" (Set Serial Port Configuration), you can change the serial configuration for V71 (i.e., baud rate, word size, stop bits, parity, and XON/XOFF handshaking, and line interface). V71 will respond with:

```
-----  
| Port | Baud | Word | Stop | Parity | Xon / Xoff | Line |  
| 1 | Rate | Size | Bits | | Xmit | Recv | Interface |  
-----  
| 1 | 9600 | 8 | 1 | None | Off | Off | EIA-232 |  
-----  
Exit/Save.....1 Set Stop Bits..4 Set Line Interface..7  
Set Baud Rate..2 Set Parity.....5  
Set Word Size..3 Set XON/XOFF...6
```

Enter Request :

You can now reconfigure the V71 by selecting the appropriate option from the menu (1 to 7). For example, to change the baud rate to 115.2K baud, send "2" (Set baud rate). The V71 will respond with this menu:

```
1 for 50  
2 for 75  
3 for 110  
4 for 135  
5 for 150  
6 for 300  
7 for 600  
8 for 1200  
9 for 2400  
A for 4800  
B for 9600  
C for 19200  
D for 38400  
E for 57600  
F for 76800  
G for 115.2K
```

Enter Request :

Send "G" for 115.2K baud rate, and the V71 will respond with the reconfigured status of the port, the option menu, and the prompt:

Port	Baud Rate	Word Size	Stop Bits	Parity	Xon / Xmit	Xoff / Recv	Line Interface
1	115200	8	1	None	Off	Off	EIA-232

```
Exit/Save.....1 Set Stop Bits..4 Set Line Interface..7
Set Baud Rate..2 Set Parity.....5
Set Word Size..3 Set XON/XOFF...6
```

Enter Request :

You can now select other options from the menu. For example, to change the line interface to EIA-422, type "7" (Set Line Interface) and the V71 will respond with:

```
1 for EIA-232
2 for EIA-422
3 for 20mA Current Loop
```

Enter Request :

Type "2" for EIA-422 line interface and the V71 will respond with the reconfigured status of the port, the option menu, and the prompt:

Port	Baud Rate	Word Size	Stop Bits	Parity	Xon / Xmit	Xoff / Recv	Line Interface
1	115200	8	1	None	Off	Off	EIA-422

```
Exit/Save.....1 Set Stop Bits..4 Set Line Interface..7
Set Baud Rate..2 Set Parity.....5
Set Word Size..3 Set XON/XOFF...6
```

Enter Request :

If there are no other changes, send "1" (Exit/Save) and the V71 will return to the main configuration menu (see *Section 11.1*).

NOTE: The new serial port configuration changes do not take effect until after you exit configuration mode for the V71.

11.5 V71 EXIT CONFIGURATION

By responding to the *Enter Request:* message at the end of the main configuration menu (see *Section 11.1*) with "X" (Exit Configuration), the V71 exits configuration mode and return to operations mode. If you happen to make any changes to the serial port configuration, the V71 will respond with:

`Change your devices to match new configuration`

This reminds you to change the host computer to match any serial port configuration changes. You should change the appropriate host computer parameters to match the new serial port configuration of the V71 at this point.

CAUTION: Failure to change the host computer serial parameters to match the new serial parameters of the V71 after exiting configuration mode locks you out of all V71 functions. If this happens and you forget what changes were made, you can review the V71 configuration status and make any changes from the front panel or service port of the M Series model.

VERY IMPORTANT!!! After exiting the V71 configuration mode and making any necessary changes to the host computer, you must send the port select code immediately followed by *Carriage Return* (e.g., \$BT<cr>) to resume normal communications between the V71 and the relevant I/O modules. Failure to do so prevents the V71 from receiving any data from the I/O modules.

11.6 V71 CONTROL PANEL CONFIGURATION

You can review the current status and program the serial port configuration for the V71 from the control panel of an M4 with LCD, M8, or M16. To access configuration mode for the V71 from the control panel, highlight the appropriate module number using the arrow keys and then press the *SELECT* key. The following menu will appear on the LCD display:

```
-----  
| V71 HOST  MODULE 01 |  
| Display Config      |  
| Serial Port Config  |  
| Exit to Main Menu   |  
-----
```

Use the arrow keys (▲ and ▼) to highlight the desired feature and then press the *SELECT* key. The "Display Config" selection displays the current V71 configuration.

For example, if you select "Serial Port Config", the LCD display will respond with:

```
-----  
| Baud Rate    9600   |  
| Press SELECT to Save |  
| Press Arrow Keys to |  
| Change Value        |  
-----
```

Use the arrow keys to make any desired changes in the baud rate and press *SELECT*. If the displayed value is acceptable, press *SELECT*. The display will follow with similar menus for parity, data bits, stop bits, XON/XOFF handshaking in the receive direction, XON/XOFF handshaking in the transmit direction, and line interface. After you have made any desired changes, highlight "Exit To Main Menu" and the front panel display will return to the main operations menu.

12 V50/V73/V74/V75/V76/V86/V87 GENERAL INFORMATION

The V50, V73, V74, V75, V76, V86 and V87 I/O modules are used in conjunction with a host module. The V74 has four EIA-232 serial ports, the V75 has four selectable EIA-232/EIA-422 serial ports, the V76 has four current loop ports, and the V86 and V87 have four selectable EIA-422/EIA-485 serial ports. The V50 has 4 isolated EIA-232 ports and the V73 has 4 EIA-232 ports where the voltage signals are TTL levels.

These modules allow a host computer system connected to the V71 host module to individually select up to four peripheral devices (e.g., bar code readers, security systems, digital instruments, etc.) and send data to the selected device. The V50/V73/V74/V75/V76/V86/V87 modules simultaneously multiplex incoming data from the peripheral devices to be transmitted to the host system. The method of data transmission from the peripheral devices to the host system is dependent upon the mode of operation. Each 4-port serial module features four user-selectable modes of operation. The modes of operation are:

Full Duplex Mode - Allows the V71 host module to switch between four peripheral devices and provides bidirectional data transfer between the host module and the selected peripheral device. Data received from non-selected peripheral devices is stored in a buffer until the port is selected by the host system.

Immediate Message Mode - Provides automatic message multiplexing from all peripheral devices. Data is buffered until a terminating character is received or 2048 characters are received. Messages are then sent to the host computer preceded by a port identification code and optional time tag.

Immediate Data Mode - Immediate data mode is similar to immediate message mode. The primary difference is that immediate data mode does not wait for a message terminating character to send data to the designated host module. Data is sent to the designated host module

automatically as soon as it is received by any port on the peripheral communications module.

Command Mode - Reports a single message, all messages, or all buffered data from specific peripheral devices upon request from the host computer. Each message or block of data is preceded by a port identification code and optional time tag.

The V50/V73/V74/V75/V76/V86/V87 can be placed into "broadcast" mode where any data received by a V71 host module is sent out all four ports of the selected module(s) simultaneously.

In addition to the modes of operation, you can select from the parameters given below. These parameters are programmed by entering configuration mode from the host module or service port. You can program all parameters except the device names from the control panel. Changes are saved permanently in non-volatile memory.

13 V50/V73/V74/V75/V76/V86/V87 SPECIFICATIONS

FACTORY POWER-UP DEFAULT CONFIGURATIONS:

Baud rate: 9600.

Word size: 8 bits.

Parity: None.

Stop bits: 1.

XON/XOFF: Disabled.

Device Name: Device A for Port 1 to Device D for Port 4.

Port ID: UU:MM,PP - enabled; UU = Unit Number,
MM = Module Number, and PP = Port Number.

Designate Host Module Location: Unit 1, Module 1, Port 1

Message Terminating Character: Carriage Return (0D Hex).

Mode of operation: Full duplex mode.

Time Tag: Disabled.

Connect Port ID Echo: Disabled

Port EIA Driver: Current EIA line driver is : RS485

USER-PROGRAMMABLE CONFIGURATIONS:

Baud rate*: 300, 600, 1200, 2400, 4800, 9600, 19.2k, 38.4k, 76.8k, and 115.2k bps. Other rates optional.

Word size*: 5, 6, 7, or 8 bits.

Parity*: Even, odd or none.

Stop bits*: 1, 1.5, or 2.

XON/XOFF*: Enabled or disabled for transmit and receive.

Port device name*: Any character string up 16 ASCII characters.

Port ID*: UU:MM,PP or device name; UU = Unit Number, MM = Module Number, and PP = Port Number.

Designate host module location: Unit 1 to 30, Module 0 to 16, Port 1 to 4.

Message terminate character: Any character from 00 Hex to 7F Hex.

Mode of operation: Full duplex mode, immediate message mode, command mode or immediate data mode.

Time tag mode: Enabled or disabled.

Connect port ID echo: Enabled or Disabled.

Port EIA line Driver: RS-485 or RS-422.

* Option is configurable per port.

INTERFACE: Asynchronous EIA-232, -12v mark, +12v space (V74 and V75); EIA-422 0 to +5 volt differential TX+, TX-, RX+, RX- (V75, V86 & V87); 20 mA current loop (V76), and EIA-485 (V87 & V86).

CONNECTORS: 8-pin modular.

HANDSHAKING: EIA-232 - CTS/DTR; selectable XON/XOFF (V76 supports XON/XOFF only).

BUFFER: 1k character input/output.

DIMENSIONS: 6"h x 4.5"w.

14 V50/V73/V74/V75/V76/V86/V87 CABLING

IMPORTANT: Before you proceed with cabling your equipment to this module, you should verify the connector type and the pin/signal definitions for your equipment.

Ports on the V50, V73, V74, V75, V76, V86 and V87 modules have 8-pin modular connectors. Most serial computers, modems, and printers do not have modular connectors. Therefore, adapters are required to convert from either DB-25 or DE-9 connectors to modular connectors. BayTech has a complete line of modular adapters and cables that makes your installation quick and trouble free. *Figure 27* and *Figure 28* show drawings of a modular receptacle and plug.

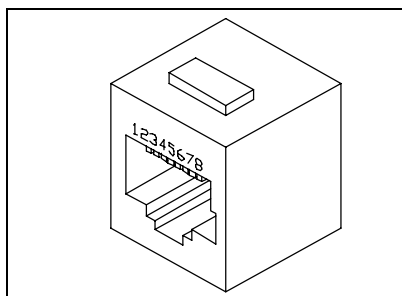


Figure 27: RJ-45 Receptacle

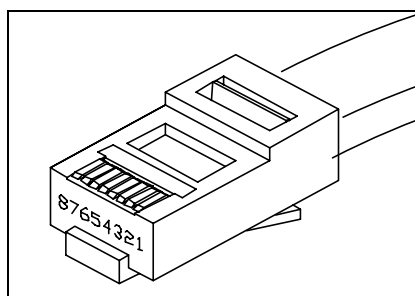


Figure 28: RJ-45 Plug

Please see *Section 14.1* for V74 cabling information, *Section 14.2* for V75 cabling information and serial interface selection, *Section 14.3* for V76 cabling information, or *Section 14.4* for V87 cabling information and serial interface selection.

WARNING: Do not use 4-wire modular cabling with the V74 & V 75 modules.

14.1 V74 & V75 CABLING

CABLING

Ports on the V74 & V75 modules use the following pins and signals for communication:

V74 & V75 PINOUT INFORMATION					
PIN	SERIAL INTERFACE		DIRECTION	DESCRIPTION	
	RS-232 V74/75	RS-422 V75			
1	DTR	HSO or +12V	Output	232 - Data Terminal Ready 422 - Handshake Out or +12V	Used to enable or disable the receiving of characters
2	GND/DCD-OUT	GND	---/ Output	Signal Ground(Default) or User selectable DCD "OUT"	
3	RTS	TX+	Output	232 - +12V Out 422 - Transmit Data (+)	
4	TX	TX-	Output	232 - Transmit Data 422 - Transmit Data (-)	
5	RX	RX-	Input	232 - Receive Data 422 - Receive Data (-)	
6	DSR	RX+	---/ Input	232 - Handshake In 422 - Receive Data (+)	
7	GND/DCD-IN	GND	----	Signal Ground(Default) or User selectable DCD "IN"	
8	CTS	HSI	Input	232 - Clear To Send 422 - Handshake In	Used to enable or disable the transmitting of characters

14.1.1 V74 & V75 DCD STATUS SELECTION

Each EIA-232 port can be configured so DCD can be an input or output signal by positioning jumpers on the main board of the module for each individual port. See V74 & V75 Jumper selection layout (Figures 29 & 30 or V75 Mechanical Layout Section D.2).

A. **GROUND**---Pins 2 & 7 of each port are signal ground in the default setting. This default setting is used in most data acquisition and control applications. Locate the eight jumper locations for DCD status selection. Jumpers (JP5, JP7, JP9, & JP11) are used to configure DCD as an output for pin 2 for each port of the module. Jumpers (JP6, JP8, JP10, & JP12) are used to configure DCD as an input for pin 7 for each port of the module. Each port is configured from the factory with pins 2 and 7 as ground.

1. **V75** (See Figure 29)--- Each port's jumper position for "ground" connects the center pin and the pin located closest to the RJ-45 connector.

2. **V74** (See Figure 30)--- Each port's jumper position for "ground" connects the center pin and the pin located on the right with the RJ-45 connectors facing you. In both V74 and V75 applications use BayTech adapter, part number 25FRJ45PC-1 or 9FRJ45PC-1.

B. **DCD "IN"**---The DCD "IN" jumper selection is selected in applications where the individual port of the V74 or V75 will be communicating with a modem. To change the EIA-232 pin/signal definition for a V74 or V75 port to have pin 7 configured for DCD "IN" you must change the location JP6 for port 4, JP8 for port 3, JP10 for port 2, or JP12 for port 1.

1. **V75** (See Figure 29)---Install the two position jumper so that it connects the center pin and the pin farthest away from the RJ-45 port. Do not move the other jumpers.

2. **V74** (See Figure 30)---Install the two position jumper so that it connects the center pin and the pin located on the left of the common pin with the RJ-45 port facing you. Do not move the other jumpers. In these two applications use BayTech adapter, part number 25FRJ45MD-4.

C. **DCD "OUT"**---The DCD "OUT" jumper selection is used in applications where an individual port of the V75 will look like a modem connection if a computer or terminal is connected to the port. Some terminals and popular communications software packages require that DCD is "high" for a connection to be completed. To change the EIA-232 pin/signal definition for a V74 or V75 port to have pin 2 configured for DCD "OUT" you must change the location of JP5 for port 4, JP7 for port 3, JP9 for port 2, or JP11 for port 1.

1. **V75** (See Figure 29)---Install the two position jumper so that it connects the center pin and the pin farthest away from the RJ-45 port. Do not move the other jumpers.

2. **V74** (See Figure 30)---Install the two position jumper so that it connects the center pin and the center pin and the pin located on the left of the common pin with the RJ-45 connectors facing you. Do not move the other jumpers. In this application use BayTech adapter, part number 25FRJ45PC-3 or 9FRJ45PC-3.

IMPORTANT: If the module is installed in the base unit chassis, remove power from the unit by positioning the On/Off switch to "0" (off) and unplugging the power cord from the AC outlet. Remove the module by unscrewing the two screws securing it to the back panel and pulling the module out.

14.1.2 DCD STATUS SELECTION CHART--EIA-232 MODE ONLY:
(see the charts below for jumper settings)

A. DCD "GROUND" is the default setting where DCD is not used by either end of the connection(modems are not used). See figures 29 & 30 for jumper locations.

PORT #	JP POSITIONS
PORT #1	11 GROUND 12 GROUND
PORT #2	9 GROUND 10 GROUND
PORT #3	7 GROUND 8 GROUND
PORT #4	5 GROUND 6 GROUND

USE ADAPTER: 25FRJ45PC-1 OR 9FRJ45PC-1

B. DCD "OUT" or high for computers or terminals connected to the V74 or V75 that will to be communicating with a modem. See figures 29 & 30 for jumper locations.

PORT #	JP POSITIONS
PORT #1	11 OUT 12 GROUND
PORT #2	9 OUT 10 GROUND
PORT #3	7 OUT 8 GROUND
PORT #4	5 OUT 6 GROUND

USE ADAPTER: 25FRJ45PC-3 OR 9FRJ45PC-3

C. DCD "IN" or low which is necessary when a V74 or V75 port is connected to a modem. See figures 29 & 30 for jumper location.

PORT #	JP POSITIONS
PORT #1	11 GROUND 12 IN
PORT #2	9 GROUND 10 IN
PORT #3	7 GROUND 8 IN
PORT #4	5 GROUND 6 IN

USE ADAPTER: 25FRJ45MD-4

Refer to the line drawings below for DCD "IN", DCD "OUT" or "GROUND" selections and also for EIA-422 or EIA-232 selection.

V75 JUMPERS are given on the drawing below. The RJ-45 connectors face toward the bottom of the page.

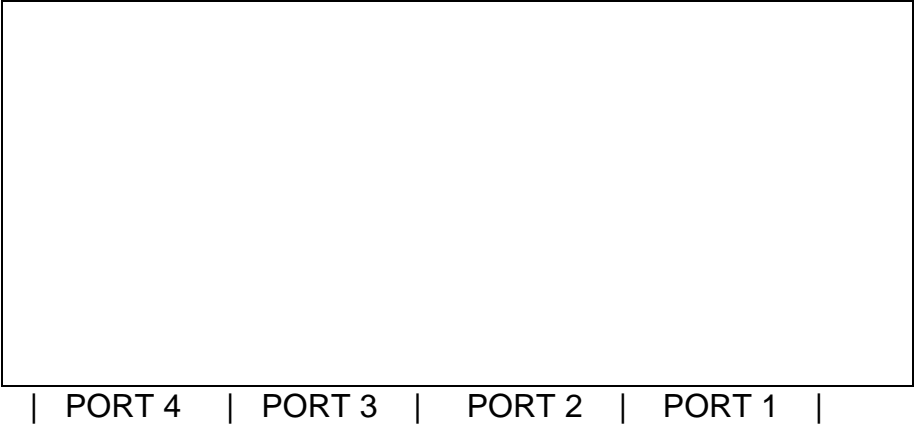


Figure 29

V74 JUMPERS are given on the drawing below. The RJ-45 connectors face toward the bottom of the page.

14.1.3 V75 SERIAL INTERFACE SELECTION

The desired V75 serial interface is selected by positioning jumpers on the main board of the module for each individual port. The factory default serial interface is EIA-422.

Refer to Figure 29 on previous page and locate the eight jumper locations for serial interface selection. These jumper locations are marked on the mechanical layout as JP13 and JP14 for Port 1, JP15 and JP16 for port 2, JP17 and JP18 for Port 3 and JP19 and JP20 for Port 4.

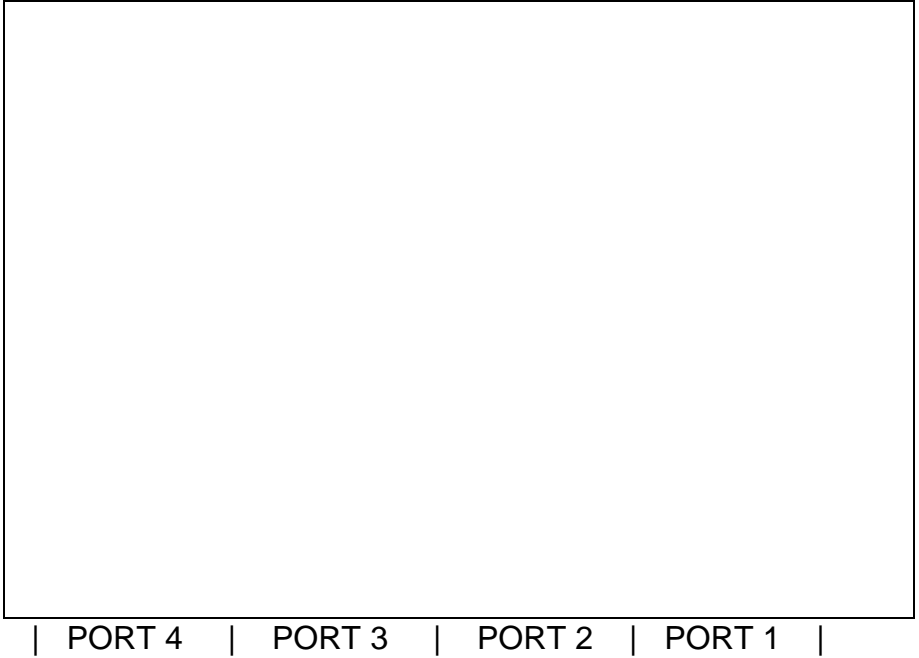


Figure 30

Each port is configurable for EIA-422 or EIA-232 serial interface by installing two, 4 position jumpers to either the 422 or 232 position as marked on the board. The center row of pins for each port will be occupied by four of the jumper positions and the row of pins for either 422 or 232 will be occupied by the other four positions of these two jumpers.

IMPORTANT: If the V75 module is installed in the base unit chassis, remove power from the unit by positioning the On/Off switch to "O" (off) and unplug the power cord from the AC outlet. Remove the module by unscrewing the two screws securing it to the back panel and pull the module out.

14.1.4 V74 AND V75 CABLE/ADAPTER INFORMATION

Refer to the following modular adapter drawings to interface your computers or terminals to the V74 and the V75 module using EIA-232 serial interface. Use the "...PC-1" adapters in most data acquisition and control applications where the V74 or V75 will not have modem connections. Refer to Figure 31 if your computers/terminals have DB-25 male connectors or to *Figure 32* if your computers/terminals have DE-9 connectors.

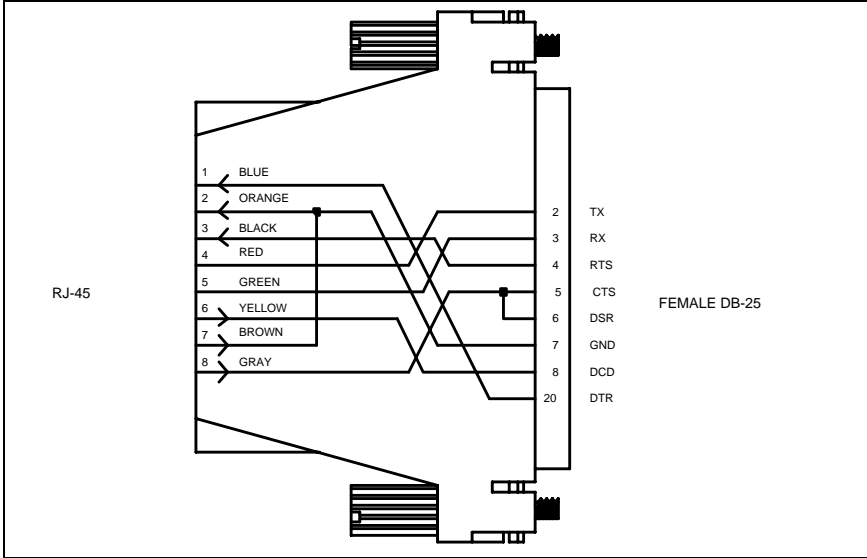


Figure 31: PC, PS/2 Computer/Terminal Adapter
 BayTech Part No. 25FRJ45PC-1 Crossed 8-wire modular cable is required

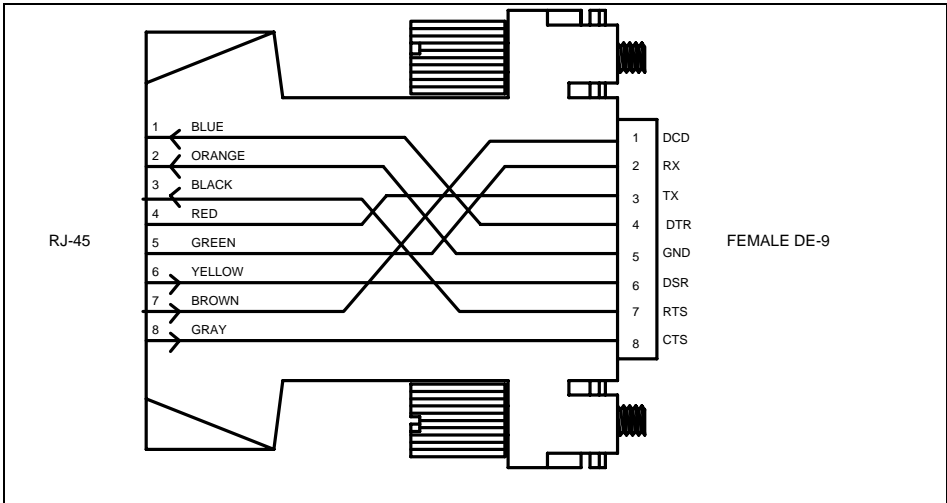


Figure 32: AT Computer Adapter
 BayTech Part No. 9FRJ45PC-1 Crossed 8-wire modular cable is required

Refer to the following modular adapter drawings to interface your computers or terminals to the V74 or V75 module using EIA-232 serial interface. Use the "...PC-3" adapters in applications where a port of the V75 will look like a modem connection when a computer or terminal is connected to the port. Some terminals and popular communications software packages require that DCD is "high" for a connection to be completed. Refer to *Figure 33* if your computers/terminals have DB-25 male connectors or to *Figure 34* if your computers/terminals have DE-9 connectors.

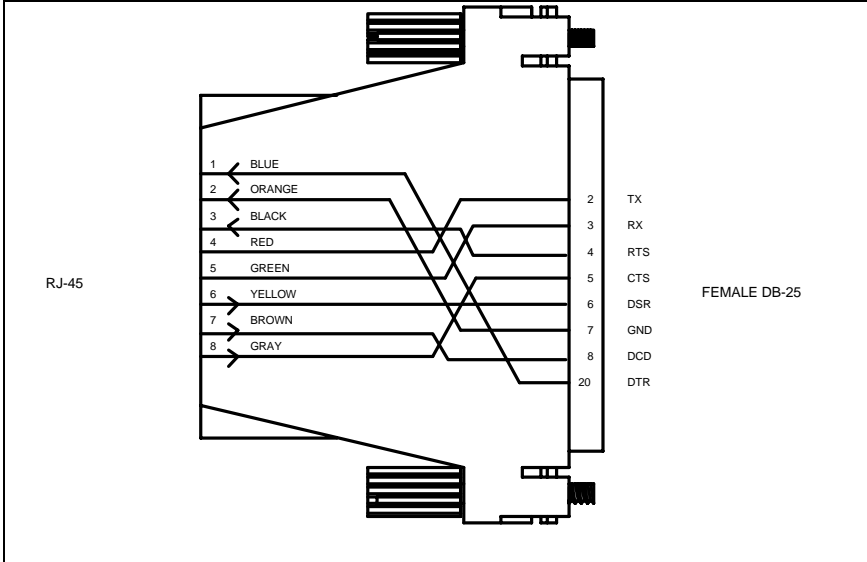


Figure 33: PC, PS/2 Computer/Terminal Adapter
 BayTech Part No. 25FRJ45PC-3 Crossed 8-wire modular cable is required

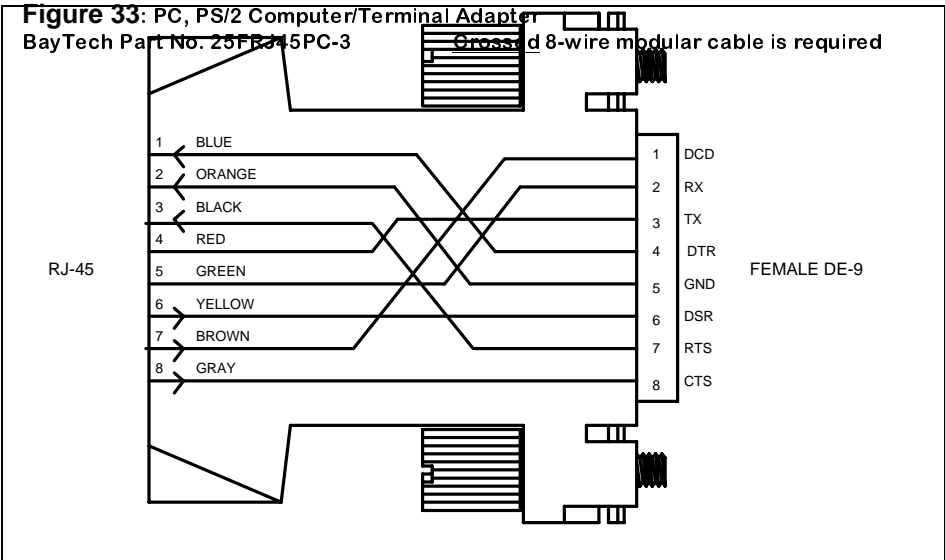


Figure 34: AT Computer Adapter
 BayTech Part No. 9FRJ45PC-3 Crossed 8-wire modular cable is required

Refer to the following modular adapter drawing (*Figure 35*) to interface modems to the V74 or V75 module.

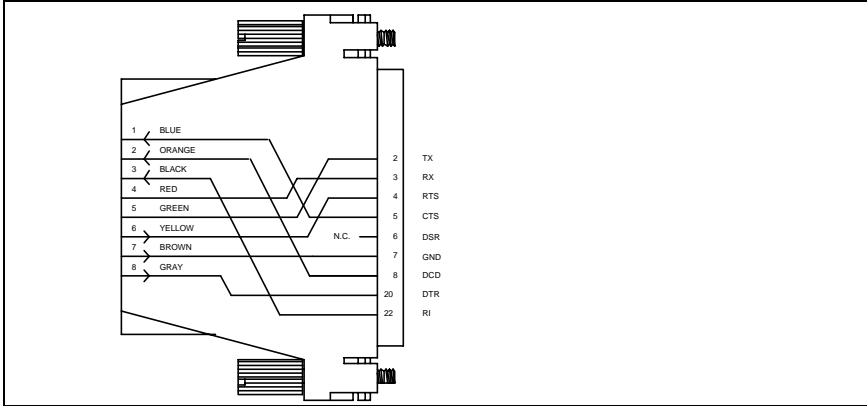


Figure 35: Modem Adapter

BayTech Part No. 25MRJ45MD-4

Crossed 8-wire modular cable is required

Refer to the modular adapter drawing (*Figure 36*) below to connect an EIA-232 serial printer to the V74 or V75 module.

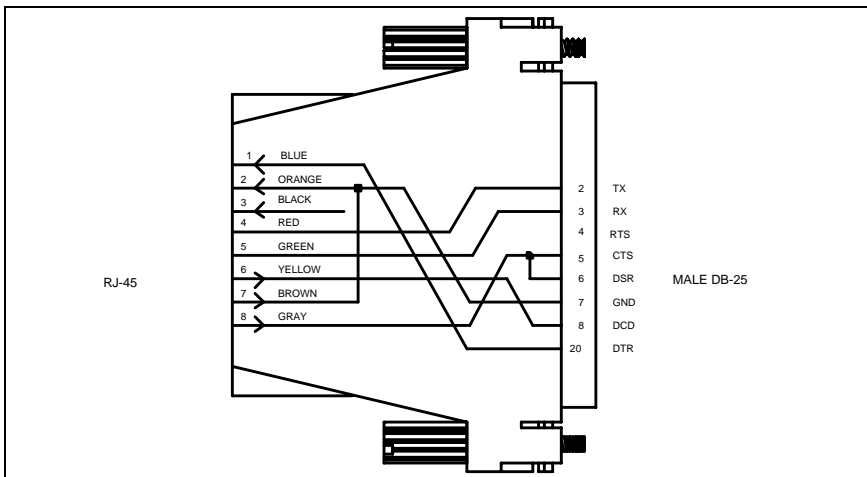


Figure 36: Printer/Plotter Adapter

BayTech Part No. 25MRJ45PR-2

Crossed 8-wire modular cable is required

IMPORTANT: When BayTech modular adapters are used as given in *Figures 31-36*, a crossed 8-wire modular cable is required. Do not use 4-wire modular cabling.

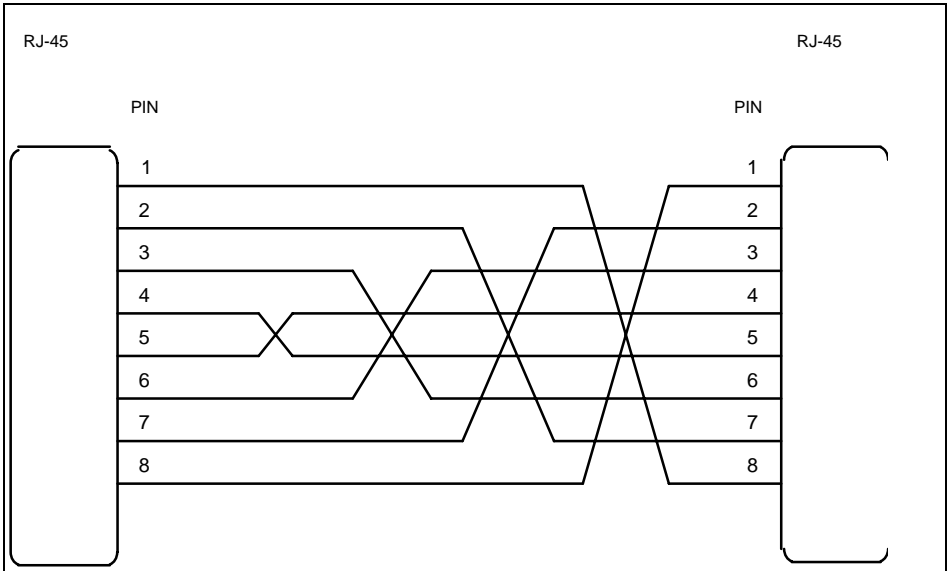


Figure 36: Crossed RJ-45 Cable
 BayTech Part No. RJ08X010 (10 feet)

14.1.5 V75 EIA-422 CABLING

The cable required to connect an EIA-422 device to the V75 module using EIA-422 serial interface must have TX+ wired to RX+ (and vice versa), TX- wired to RX- (and vice versa), HSO wired to HSI (and vice versa), and the grounds connected. Please see *Figure 37*.

V75 (EIA-422) RJ-45	Equipment Connections
1 HSO	HSI
2 GND	GND
3 TX+	RX+
4 TX-	RX-
5 RX-	TX-
6 RX+	TX+
7 GND	GND
8 HSI	HSO

Figure 37: V75 EIA-422 Connection

NOTE: The *HSO*, *HSI*, and *GND* signals do not need to be connected if you are not using hardware handshake lines.

14.2 V76 CABLING

The V76 current loop module contains four fixed current loop ports. The transmit circuit for all ports is always active transmit. The receive circuit is jumper selectable for passive receive (default) or active receive. Current loop ports use 8-pin modular connectors with the following pins for communication:

Pin 3 is positive output (TX+)

Pin 4 is negative output (TX-)

Pin 6 is positive input (RX+)

Pin 5 is negative input (RX-)

seq

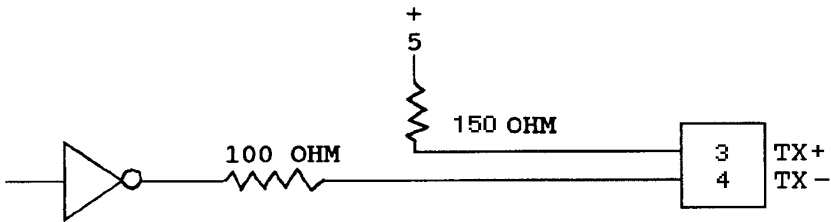


Figure 13: The active transmit circuit

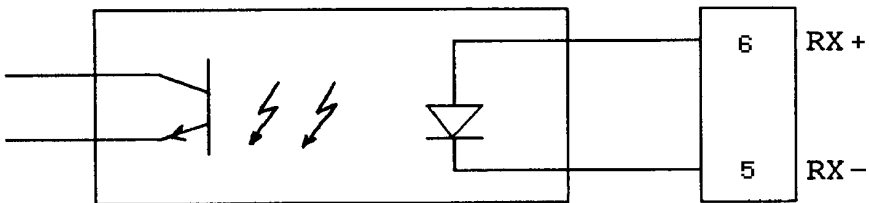


Figure 14: The passive receive circuit

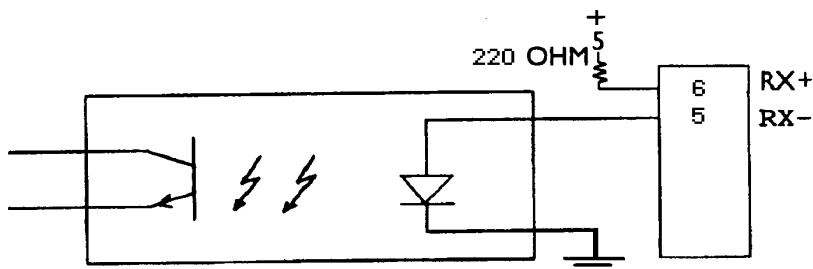


Figure 15: The active receive circuit

There are a total of eight jumper locations on the main board, two for each port. One of the individual port jumper locations is labeled *LONG* and the other is labeled *RX PASSIVE*. The *LONG* jumper location has six pins with a four-position block jumper and the *RX PASSIVE* jumper has nine pins with a six-position block jumper. You can change the receive circuit for individual ports to active receive by using the following procedure:

1. Remove power from the base unit. Remove the V76 module from the base unit chassis by loosening the two straight-slot screws securing the module to the chassis and pulling the module out.
2. Locate the *RX PASSIVE* jumper location for the desired port(s). Move the six-position jumper so that it connects the six pins furthest away from the *RX PASSIVE* marking on the board.

NOTE: If you wish to change from active receive to passive receive, the six-position jumper would connect the six pins closest to the *RX PASSIVE* marking.

3. Re-install the V76 module in the base unit chassis as described in *Section 4.5*. The upgrade is now complete.

The *LONG* jumper setting is used for cable distances in excess of 1000 feet. The default jumper position is for cable distances less than 1000 feet. If you are using cables longer than 1000 feet, follow steps 1 and 2 on the previous page. Next, locate the *LONG* jumper location for the desired port(s) and move the four-position jumper so that it connects the four pins closest to the *LONG* marking on the board. Finally, re-install the V76 module in the base unit chassis.

14.3 V87 CABLING INFORMATION

The V87 module has four ports that are user selectable as EIA-422 or EIA-485 serial interface. Ports on the V87 module use the following pins and signals for communication:


V87 PINOUT INFORMATION				
PIN	SERIAL INTERFACE		DIRECTION	DESCRIPTION
	EIA-422	EIA-485		
1	HSO	HSO	Output	Handshake Out. Used to enable or disable the receiving of characters
2	GND	GND	----	Signal Ground
3	TX+	TX+/RX+	Output Output/Input	422 - Transmit Data (+) 485 - Transmit/Receive Data (+)
4	TX-	TX-/RX-	Output Output/Input	422 - Transmit Data (-) 485 - Transmit/Receive Data (-)
5	RX-	NU	Input/----	232 - Receive Data (-) 485 - Not Used
6	RX+	NU	Input/----	422 - Receive Data (+) 485 - Not Used
7	GND		----	Signal Ground
8	HSI	HSI	Input	Handshake In. Used to enable or disable the transmitting of characters

14.3.1 V87 SERIAL INTERFACE SELECTION

The desired serial interface is selected by positioning jumpers on the main board of the module for each individual port. Please refer to *Section 14.2.3 (V75 EIA-422 Cabling)* for cabling information if using EIA-422 serial interface (default). If you wish to change one or more of the ports to operate using a different serial interface, please use the following procedure:

- a. **IMPORTANT:** If the V87 module is installed in the base unit chassis, remove power from the unit by positioning the On/Off switch to "0" (off) and unplugging the power cord from the AC outlet. Remove the module by unscrewing the two straight slot screws securing it to the back panel and pulling the module out.
- b. Refer to *Figure 39* on the following page and locate the four six-position jumper locations for serial interface selection. The jumper locations are marked on the assembly drawing for serial interface selection as *JP5* for Port 1, *JP8* for Port 2, *JP11* for Port 3, and *JP14* for Port 4.
- c. Each port is configurable for EIA-422 or EIA-485 serial interface by installing a four-position jumper to either the *422* or *485* position as marked on the board. The center row of pins for each port are occupied by two of the jumper positions and the row of pins for either *422* or *485* are occupied by the other two positions of this jumper.

NOTE: A termination resistor is installed by default. You can remove the termination resistor for each individual port by moving *JP4*, *JP7*, *JP1*, or *JP13* away from the *R/T* position for Ports 1, 2, 3, or 4 respectively.
- d. Install the V87 module into the base unit chassis (see *Section 4.5*).

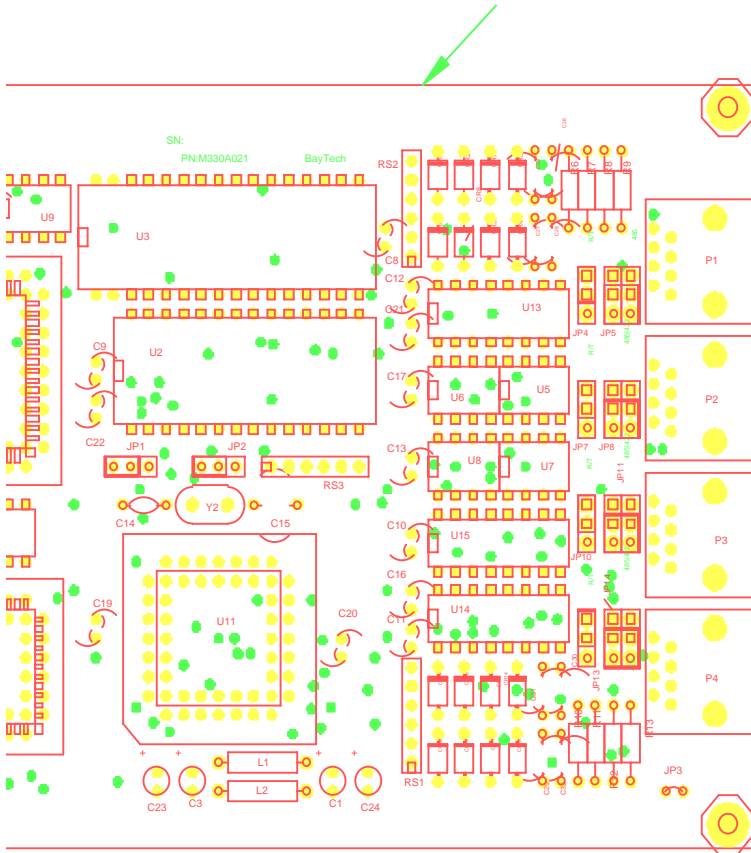

OWN BELOW:

256K EPROM

512K EPROM

SYM	ZONE
SIGNATURES	
DESIGN	DATE
CHECKED	
ENGINEER	
DESIGN	
DATE	

: V87 Main Board Mechanical Layout

14.3.2 V87 EIA-485 CABLING

The cable required to connect an EIA-485 device to the V87 module using EIA-485 serial interface must have TX+/RX+ wired to the TX+/RX+ line of your equipment, TX-/RX- wired to TX-/RX-, HSO wired to HSI (and vice versa), and the grounds connected. Please see *Figure 40*.

V87 (EIA-485) RJ-45	Equipment Connections
1 HSO	HSI
2 GND	GND
3 TX+/RX+	TX+/RX+
4 TX-/RX-	TX-/RX-
7 GND	GND
8 HSI	HSO

Figure 40: V87 EIA-422 Connection

NOTE: The *HSO*, *HSI*, and *GND* signals do not need to be connected if you are not using hardware handshake lines.

15 V50/V73/V74/V75/V76/V86/V87 OPERATION

15.1 V50/V73/V74/V75/V76/V86/V87 USER-PROGRAMMABLE FEATURES

The V50/V73/V74/V75/V76/V86/V87 can be programmed to operate in one of three reporting modes. Other programmable features include the serial port configuration and device name for each individual port, the host module location, the message terminating character, and time tag. These features are programmed by accessing the menu-driven configuration mode from the host module or service port. All features can be programmed from the front panel of units equipped with LCD and control panel (see *Section 16.11*).

15.1.1 V50/V73/V74/V75/V76/V86/V87 SERIAL PORT CONFIGURATION

The V50/V73/V74/V75/V76/V86/V87 module translates data for devices using different serial configurations. You can set the baud rate, word size, stop bits, parity and XON/XOFF handshaking for each port. **Factory default configuration on serial ports is 9600 baud rate, 8 bit word size, 1 stop bit, no parity and XON/XOFF disabled.**

15.1.2 V50/V73/V74/V75/V76/V86/V87 PORT DEVICE NAME

You can assign individual names to each port for reference while the unit is in configuration mode or port message/data identification. **Factory default is Device A for Port 1, Device B for Port 2, Device C for Port 3, and Device 4 for Port 4.**

15.1.3 V50/V73/V74/V75/V76/V86/V87 HOST MODULE LOCATION

An M Series unit can have multiple host modules installed on a single unit or multiple units. You can program the V50/V73/V74/V75/V76/V86/V87 module to send messages to any individual host module on a single unit. The host module location consists of the M Series unit number, module number, and port number. Messages are sent only to the designated host module in immediate reporting mode. **The factory default host module location is Unit 1, Module 1, Port 1.**

15.1.4 V50/V73/V74/V75/V76/V86/V87 PORT ID

The Port ID feature allows a user to enable or disable the Port ID for individual I/O ports. When Port ID is enabled, a port identification code precedes data sent to the host computer when using Immediate and Command Reporting modes. The Port ID can consist of the Unit Number:Module Number,Port Number corresponding to the I/O port that received the data. The Port ID can also consist of the Device Name assigned to the I/O port in the configuration mode.

The factory default Port ID is enabled and has the UU:MM,PP format.

15.15 V50/V73/V74/V75/V76/V86/V87 THE MESSAGE TERMINATING CHARACTER

The message terminating character is a single character that indicates a complete message has been received in immediate and command reporting modes. Data is held in the buffer of the M Series unit until the terminating character is received from the connected peripheral device which defines a complete message. The complete message is eventually sent to the host device depending on the mode of operation. The message terminating character can be programmed to be any two-digit hexadecimal character from 00 Hex to 7F Hex.

The factory default message terminating character is 0D Hex (*Carriage Return*).

15.16 V50/V73/V74/V75/V76/V86/V87 MODES OF OPERATION

This section briefly describes the three programmable modes of operation. *Section 15.2* provides more detail for operating in the various modes.

The default mode of operation is full duplex mode.

15.16.1 FULL DUPLEX MODE

Full duplex mode increases input/output by interfacing the host module to four peripheral devices for each module. The host system selects a specific port by sending a *port select sequence*. The host system remains connected to the selected port until another port is selected. Data received by non-selected ports are stored in a buffer until the port is selected or a clear buffer command is sent.

15.1.6.2 IMMEDIATE MESSAGE MODE

Immediate message mode provides multiplexing of all messages from all ports to the designated host module automatically. Data is buffered until an end of message terminating character is received or 256 bytes are received. The messages are sent to the host device and can be preceded by a port identification code corresponding to the unit, module, and port number or the device name of the peripheral port that sent the message.

15.1.6.3 IMMEDIATE DATA MODE

Immediate data mode is similar to immediate message mode described above. The primary difference is that immediate data mode does not wait for a message terminating character to send data to the designated host module. Data is sent to the designated host module automatically, as soon as it is received by any port on the peripheral communications module.

15.1.6.4 COMMAND MODE

Command mode provides multiplexing of single messages, all messages, or all buffered data from specified ports on request from a host computer. When a host computer sends a *data command*, the V50/V73/V74/V75/V76/V86/V87 sends a single message, all messages, or all buffered data from the requested port(s) through the host module. This information can be preceded by a port identification code corresponding to the unit, module, and port or the device name of the peripheral port that sent the message. Complete messages and/or buffered data are sent to the designated host device in a round-robin fashion.

15.1.7 V50/V73/V74/V75/V76/V86/V87 TIME TAG

The module can be programmed to provide a time tag in immediate or command operation mode. A time tag provides the month, day, year, hour, minute, and second the message or block of data was recorded

according to the M Series main unit's time-of-day clock. The time tag is inserted after the port identification code if enabled.

The time tag can appear in one of four formats: 1) HH:MM:SS, 2) HH:MM:SS:mmm, 3) MM/DD/YY HH:MM:SS, or 4) MM/DD/YY/HH:MM:SS mmm where HH: is the hour, MM: is the minute, SS is the second, mmm is the millisecond, MM/ is the month, DD/ is the day, and YY is the year of the M-Series time-of-day clock.

If you type "8" from the main configuration menu of the peripheral communications module (Time Tag Mode), the module will respond with:

Current Time Tag Mode is.....Disabled

Disabled1
Time: HH:MM:SS.....2
Time: HH:MM:SS mmm.....3
Date/Time: MM/DD/YY HH:MM:SS.....4
Date/Time: MM/DD/YY HH:MM:SS mmm.....5
Exit.....x

Enter Selection

Type the selection corresponding to your desired choice.

15.2 V50/V73/V74/V75/V76/V86/87 OPERATING IN THE DIFFERENT MODES

A typical application using a V50/V73/V74/V75/V76/V86/V87 module would have a host computer such as an IBM PC connected to the host module and various devices such as cash registers, digital laboratory instruments, bar code readers, numerical machines, printers, modems, terminals, etc. connected to the serial ports.

Regardless of the mode of operation, any terminal connected to a V71 host module can connect and send data to a specific port by sending the appropriate port select sequence followed by the data. A port select sequence consists of the port select code (default is \$BT),

the desired Unit Number followed by a colon (1: to 30: - only if using cascaded units), the desired module number (2 to 16), a comma, the desired port number (1 to 4), and a terminating character (0A Hex - *Carriage Return* or 0D Hex - *Line Feed*). The port select sequence is not passed through to the selected port.

NOTE: When the host computer/controller selects an EIA-485 port on a V87 module, all characters sent to the peripheral device are echoed back to the host device.

Full duplex reporting mode provides bidirectional communication between the host computer and the selected peripheral device. Data received by non-selected peripheral ports is buffered until selected by the host computer.

Immediate message mode provides automatic message multiplexing and is discussed in *Section 15.2.2*. A message begins when a port on the module receives a character from the device connected to it. A message is completed when the message terminating character is received or 2048 characters have been received without a terminating character.

Immediate data mode is similar to immediate message mode as discussed in *Section 15.2.3*. The primary difference is that immediate data mode does not wait for a message terminating character to send data to the designated host module. Data is sent to the designated host module automatically as soon as it is received by any port on the peripheral communications module.

Command reporting mode allows the host computer to send commands requesting messages or buffered data from the ports. These commands are summarized in *Section 15.2.4*.

Each message or data block sent to the host computer in immediate or command mode can be preceded by a port identification code consisting of either the unit number, a colon, the module number, a comma, and the port number or the device name of the port that received the message. In numeric form, the Port ID can range from 01:01,1 (for Unit 1, Module 1, Port 1) to 30:16,4 (for Unit 30, Module

16, Port 4). If time tag is enabled, the month, day, year, hour, minute, and second the message or block of data was recorded are sent in addition to the port identification code.

There are six commands supported by the serial port modules. Two of these commands can be issued regardless of the operation mode. These are the **\$CONFIG<cr>** and **CBn<cr>** commands. The **\$CONFIG<cr>** command instructs the module to go into configuration mode as described in *Section 16*.

The **CBn<cr>** command clears the buffer of Port n (n = 1 to 4 or 0 for all ports), where <cr> is *Carriage Return*. You must select the 4-port serial module from the host module in order to issue the clear buffer command. This is done by sending the port select code, the appropriate Unit Number followed by a colon (1: to 30: - only if using cascaded units), the module number (2 to 16), and *Carriage Return* or *Line Feed*. You can issue the clear buffer command for multiple ports by separating the port numbers with a comma. For example, to clear the receive buffer for Ports 1 through 3 of the selected module, send **CB1,2,3<cr>**. The other four supported commands can be issued in command reporting mode only (see *Section 15.2.3*).

15.2.1 OPERATING IN FULL DUPLEX MODE

In full duplex mode, the V50/V73/V74/V75/V76/V86/V87 module provides full duplex communication between the host module and the selected port. The host module and the selected port remains connected until a different port is selected or until the host module disconnects from the module by sending the port select code followed by *Carriage Return*. Data received by non-selected peripheral devices is stored in the buffer and sent to the host device when the port is selected. The serial port module does not start loading data from the new port into the host module until the new module number, port number and terminating character are received.

NOTE: The port select sequence has a ten second timer. The timer starts when the first character of the port select sequence is received. Any incomplete sequence received ten seconds or more after the first character has been received is treated as normal data and is sent to the current selected port.

15.2.2 OPERATING IN IMMEDIATE MESSAGE MODE

Immediate message mode provides automatic message multiplexing between the designated host module and all ports on the V50/V73/V74/V75/V76/V86/V87 module. Messages are sent automatically to the designated host computer in a round-robin fashion a message at a time. For example, if two V74 modules installed as Module 2 and Module 3 are sending messages from all ports to the same designated host module, a message from Module 2 Port 1 is sent to the designated host module followed by a message from Module 3 Port 1 followed by a message from Module 2 Port 2 followed by a message from Module 3 Port 2, and so on.

NOTE: The designated host computer can select and transmit data to any serial port while simultaneously receiving messages from all ports. A terminal connected to a non-designated host module can select and send data to any port. However, messages are sent to the

designated host terminal only. If a connection exists between a host module and the desired port, the requesting host module is sent a busy message.

If a designated V71 is currently receiving messages and the host computer selects a port on a V50/V73/V74/V75/V76/V86/V87 operating in immediate or command mode, the messages continue to be sent to the host computer. If the host computer selects a port on a module operating in full duplex mode while receiving messages, the messages stop until the host computer disconnects. If the host computer selects a module operating in command mode while receiving messages, messages continue to be sent until the host issues a data command (not CBN<cr>). The messages do not resume until the host disconnects from the module.

The V71 host module can make a full duplex connection to a serial port when the peripheral module is operating in full duplex, immediate message, or immediate data mode by sending the port select code, the peripheral module number, a comma, the peripheral port number, Capital "F", and Carriage Return or Line Feed.

For example, if the default port select code is used (\$BT) and the peripheral module is installed as Module 2, peripheral port 1 is selected for full duplex communication by sending **\$BT2,F<cr>** or **\$BT2,1F<lf>** where <cr> is *Carriage Return* and <lf> is *Line Feed*.

The V71 host module remains in full duplex communication with Module 2, Port 1, until a disconnect is sent (\$BT<cr>) or a different port is selected. When a disconnect command is sent, the peripheral module reverts back to the previous mode of operation.

15.2.3 OPERATING IN IMMEDIATE DATA MODE

Immediate data mode is similar to immediate mode as described in Section 15.2.2 above. The primary difference is that the immediate data mode does not wait for a message terminating character to send data to the designated host module. Data is sent to the designated host module automatically as soon as it is received by any port on the peripheral communications module.

If you type "7" from the main configuration menu of a peripheral communications module (Set Mode of Operation), the module will respond with the following menu:

```
MODE OF OPERATION
Full Duplex Mode.....1
Immediate Message Mode.....2
Command Mode.....3
Immediate Data Mode.....4

Current Mode of Operation is.....Full Duplex
Enter Mode of Operation 1-4 :
```

Type "4" from this menu to select immediate data mode.

NOTE: If immediate data mode is selected, the time tag will not be appended to the data if Time Tagging is enabled. (see Section 15.1.7 Time Tag)

15.2.4 OPERATING IN COMMAND MODE

Command mode provides multiplexing to a host module of messages or buffered data from individual ports or all ports upon request from the host computer via data commands. The host computer can request single messages, all messages, or all current buffered data for individual ports. V50/V73/V74/V75/V76/V86/V87 data commands are sent through a host module using the following procedure:

1. Select the 4-port serial module from the host module by sending the port select code (\$BT - default), the appropriate Unit Number followed by a colon (1: to 30: - only if using cascaded units), the desired module number (2 to 16), and a terminating character of *Carriage Return* or *Line Feed*. For example, to select a V74 installed on a non-cascaded unit as Module 2 using the default port select code, send **\$BT2<cr>**.
2. Once the 4-port serial module is selected, it is placed into command mode and allows you to send data commands. Data

commands consist of two capital letters designating the specific command, the desired port number(s), and a *Carriage Return*. If you have a requirement to send the same command to multiple channels simultaneously, you can use one of the following formats as shown for the **CBn<cr>** (clear buffer) command:

CB1,2,3,4,5,6,7,8<cr>	Clear the buffer for Ports 1-8
CB0<cr>	Clear the buffer for Ports 1-8
CB1,2,4,5<cr>	Clear the buffer for Ports 1, 2, 4, and 5

Section 15.2.3.1 through *Section 15.2.3.6* provide detailed information on the functionality of each supported data command. *Appendix A* provides these same commands in a condensed version for quick reference.

15.2.4.1 CLEAR BUFFER (CB) COMMAND

The Clear Buffer (CB) command deletes all present messages or data in the buffer for the specified port(s) in any of the reporting modes. This command has the following format: **CBn<cr>** where *n* is the desired port number (1 to 4 or 0 for all).

15.2.4.2 REPORT ALL BUFFERED MESSAGES (RA) COMMAND

The Report All Buffered Messages (RA) command instructs the module to send all messages currently stored in the buffer for the specified port(s) starting with the lowest numbered port. This command has the following format: **RAn<cr>** where *n* is the desired port number (1 to 4 or 0 for all). If there are no messages, the module responds with *Carriage Return* and *Line Feed*.

NOTE: If you issue an RA command and start receiving messages, the module ignores subsequent RA commands until all messages from the current port(s) have been sent to the requesting host module or the Stop Report (SR) command is received (see *Section 15.2.3.5*).

15.2.4.3 REPORT ALL BUFFERED DATA (RB) COMMAND

The Report All Buffered Data (RB) command instructs the module to send all data currently stored in the buffer for the specified port(s) whether or not it is a "message" as defined on page 87. Data from the lowest numbered port specified is sent first. This command has the following format: **RBn<cr>** where *n* is the desired port number (1 to 4 or 0 for all). If there is no data in the buffer for the specified port(s), the module responds with *Carriage Return* and *Line Feed*.

15.2.4.4 REPORT SINGLE MESSAGE (RS) COMMAND

The Report Single Message (RS) command instructs the V50/V73/V74/V75/V76/V86/V87 module to send a single message currently stored in the buffer of the specified port(s). The message sent is the oldest message in the buffer. This command has the following format: **RSn<cr>** where *n* is the desired port number (1 to 4 or 0 for all). If there are no messages in the buffer for the specified port(s), the module responds with *Carriage Return* and *Line Feed*.

15.2.4.5 STOP REPORT (SR) COMMAND

The Stop Report (SR) command instructs the V50/V73/V74/V75/V76/V86/V87 module to stop sending messages or data after an RA or RB command has been issued. You can instruct the module to resume sending messages or data by issuing the desired request for messages or data command (RA, RB, or RS). This command has the following format: **SRn<cr>** where *n* is the desired port number (1 to 4 or 0 for all).

15.2.4.6 PORT ID STATUS (ID) COMMAND

The Port ID Status (ID) command instructs the V50/V73/V74/V75/V76/V86/V87 to report its current Port ID status for the selected module. This command has the following format:

ID<cr>. When a user sends the ID command, a status message similar to the following is sent:

```
Unit 01, Module 02 Port I.D  
Port 1=01:02,1  
Port 2=01:02,2  
Port 3=01:02,3  
Port 4=01:02,4
```

This message is sent for an I/O module installed in Unit 1 as Module 2 using the default Port ID settings.

15.2.5 BROADCAST MODE

The 4-port peripheral communications modules (e.g., V74) supports a "broadcast" mode where any data received by the V71 host module is sent out all four ports of the selected module(s) simultaneously. A 4-port serial module is placed into broadcast mode by sending the port select code (default - \$BT), capital "B", the desired module number(s), and *Carriage Return* to the V71 host module. To place all peripheral communications modules into broadcast mode, send \$BTB<cr>.

If you wish to place multiple 4-port serial modules into broadcast mode, each module number should be separated by a comma. For example, to place three V74 modules installed as Module 2, Module 3, and Module 4 into broadcast mode using the default port select code, send the command **\$BTB2,3,4<cr>** to the V71 host module where <cr> is *Carriage Return*. The 4-port serial module remains in broadcast mode until the V71 host module issues a disconnect command consisting of the port select code followed by *Carriage Return* (e.g., **\$BT<cr>**).

If a peripheral communications module is configured to operate in immediate reporting mode (see Section 15.2.2) and the destination V71 places that module into broadcast mode, the destination V71 can receive data or messages from the peripheral ports while simultaneously broadcasting data out to the ports.

While in broadcast mode, other V71 host modules can connect to the I/O module(s) and issue data commands if the module(s) are in command reporting mode. The clear buffer command can be issued to any 4-port serial module in broadcast mode by another V71 host module regardless of the programmed reporting mode.

15.2.6 DATA/MESSAGE PRESENTATION

Data presentation varies slightly in format depending on the reporting mode you are using. In full duplex mode, data is presented to the host computer and selected peripheral exactly as it is transmitted and/or received (i.e., the V50/V73/V74/V75/V76/V86/V87 module does not add any extra characters).

In immediate reporting mode, messages are sent to the designated host computer with an optional port identification code preceding the actual message. For example, suppose the 4-port serial module is installed in Unit 1 as Module 2, Port ID is enabled, *Line Feed* (0A Hex) is the programmed message terminate character, and time tag is enabled. The 4-port serial module sends complete messages to the designated host computer which appears similar to the following:

```
01:02,1 06/16/94 15:55:30 MESSAGE FROM PORT 1<cr><lf>
01:02,2 06/16/94 15:55:30 MESSAGE FROM PORT 2<cr><lf>
01:02,3 06/16/94 15:55:30 MESSAGE FROM PORT 3<cr><lf>
01:02,4 06/16/94 15:55:30 MESSAGE FROM PORT 4<cr><lf>
```

where **01:02,x** represents Unit 1/Module 2/Port x, **06/16/94 15:55:30** is the time tag indicating that the message was recorded on June 16, 1994 at 3:55:30 pm, and **MESSAGE FROM PORT x<cr><lf>** is the actual message (x = 1 to 4). If you are in command reporting mode and request a single message or all messages from Port x, you will receive a single message or all messages that appear in a format similar to that shown above. The Port ID can also consist of the device name of the port.

If you are operating in command reporting mode and issue the **RBn<cr>** command, the I/O module sends all buffered data from the requested port(s) with each data block preceded by the Unit#:Module#,Port# or device name. Only data buffered at the time the **RBn<cr>** command is issued is sent to the host computer. Data received after the **RBn<cr>** command has been issued is buffered and requires another command to be sent to the host computer.

16 V50/V73/V74/V75/V76/V86/V87 CONFIGURATION

Configuration changes for the V50/V73/V74/V75/V76/V86/V87 module are made through any host module, the service port, or the front panel. To access the configuration mode of a 4-port serial module from any host module, use the following procedure:

1. Configure the host terminal's serial parameters to match those of the host module. From the factory, the host module is set at 9600 baud, 8 bit word size, 1 stop bit, no parity, and XON/XOFF disabled. If you do not have a dumb terminal or a terminal emulation program, BayTech supplies a utility diskette which includes software to put an IBM PC or compatible into a terminal mode (TERM.EXE).
2. Connect to the serial port module by sending the port select code, the appropriate Unit Number followed by a colon (1: to 30: - only if using cascaded units), the desired module number (1 to 16), and *Carriage Return* or *Line Feed*. For example, if the module is installed in a unit as Module 2 and you are using the default port select code (\$BT), send **\$BT2<cr>** from the host device where <cr> is *Carriage Return*.
3. Access configuration mode by sending **\$CONFIG<cr>**.
IMPORTANT: No characters should be typed between \$BT<cr> and \$CONFIG<cr>. If this happens, the entire configuration sequence is discarded and you will have to send the configuration sequence again.

NOTE: The procedure to access configuration mode for the module from the service port is the same as described above except connect your terminal to the service port which has a fixed serial configuration of 9600 bps, 8 bit word size, 1 stop bit, and no parity. You must send **\$BTX<cr>** (\$BAYTECHX<cr> with M4 and M8 DAC) to select the module as described in Step 2 where X = 1 to 16, then continue with Step 3.

16.1 V50/V73/V74/V75/V76/V86/V87 MAIN CONFIGURATION MENU

The V50/V73/V74/V75/V76/V86/V87 module responds to the receiving of \$CONFIG<cr> with an identification block and a menu of the available configuration options, similar to the following:

```
Copyright(C) Bay Technical Associates 199X-199X
Model V73/V74/V76 etc. High Speed Serial 4C
Revision F.X.XX
Unit: 1, Module: 2
```

```
Status.....1
Serial Port Configuration.....2
Port Device Name.....3
Port I.D.....4
Designate Host Port location.....5
Message Terminate Character.....6
Mode of Operation.....7
Time Tag Mode.....8
Connect Port ID Echo.....9
Port EIA Driver.....A
Exit.....X
```

Enter Request :

NOTE: Menu selection is case sensitive. It is recommended that your keyboard be in the CAPS LOCK position. Item "A" (Port EIA Driver) applies to the V86 isolated EIA-485/422 module only.

IMPORTANT: If you change the Message Terminate Character or Mode of Operation, when you type "X" from the above menu (Exit), the module will respond with:

```
Mode Of Operation or Terminate Character has been Changed!
Press Any Key To Reset This Unit...
```

Typing any key results in the M Series base unit and all installed modules resetting.

16.2 V50/V73/V74/V75/V76/V86/V87 STATUS

By responding to the *Enter Request*: Message at the end of the main configuration menu (see *Section 16.1*) with "1" (Status), you can review the current configuration status. The module will respond with:

Current Terminate Character is.....0DH
Current Host Designation is Module.....1
Current Mode of Operation is.....1

Strike any Key to Continue, or X to Exit

Current Module 2 Serial Port Configuration :

Port	Device Name	Baud Rate	Word Size	Stop Bits	Parity	Xon / Xmit	Xoff / Recv
1	Device A	9600	8	1	None	Off	Off
2	Device B	9600	8	1	None	Off	Off
3	Device C	9600	8	1	None	Off	Off
4	Device D	9600	8	1	None	Off	Off

Strike any Key to Continue, or X to Exit

Current Module 2 Port I.D :

Port	Port I.D
1	01:02,1
2	01:02,2
3	01:02,3
4	01:02,4

Strike any Key to Continue, or X to Exit

Copyright(C) Bay Technical Associates 199X-199X
Model V73/V74/V76 etc. High Speed Serial 4C
Revision F. X.XX
Unit: 1, Module: 2

Status.....1
Serial Port Configuration.....2
Port Device Name.....3
Port I.D.....4
Designate Host Port location.....5
Message Terminate Character.....6
Mode of Operation.....7
Time Tag Mode.....8
Connect Port ID Echo.....9
Port EIA Driver.....A
Exit.....X

Enter Request :

You can make whatever changes are necessary by responding to the above menu. The Exit function returns you to Operations Mode.

16.3 V50/V73/V74/V75/V76/V86/V87 SET SERIAL PORT CONFIGURATION

By responding to the *Enter Request:* message at the end of the main configuration menu (see *Section 16.1*) with "2" (Set Serial Port Configuration), you can change the serial configuration for each port of the V50/V73/V74/V75/V76/V86/V87 module (i.e., baud rate, word size, stop bits, parity, and XON/XOFF handshaking). The module translates between devices of different configurations without the need to reconfigure the devices. The module will respond with:

```
Enter Serial Port Number (? = Help, ENTER = Exit) :?
```

Type the port number of the selected module that you wish to reconfigure followed by <ENTER>. If you wish to review the status of the selected module, type "?". For example, if you enter "4", the module responds with the current status for Port 4 and a list of available options as follows:

```
Current Module 2 Serial Port Configuration :
+-----+-----+-----+-----+-----+-----+-----+
| Port | Device Name | Baud | Word | Stop | Parity | Xon / Xoff |
|      |             | Rate | Size | Bits |        | Xmit  | Recv  |
+-----+-----+-----+-----+-----+-----+-----+
|   4  | Device D   | 9600 |  8   |  1  | None  | Off   | Off   |
+-----+-----+-----+-----+-----+-----+
Exit/Save.....1  Set Stop Bits.....4
Set Baud Rate..2  Set Parity.....5
Set Word Size..3  Set Xon/Xoff.....6
```

```
Enter Request:
```

You can now reconfigure Port 4 by selecting the appropriate option from the menu (1 to 6). For example, to change the baud rate to 115.2K baud, send "2" (Set baud rate). The module will respond with this menu:

```
1 For 300
2 For 600
3 For 1200
4 For 2400
5 For 4800
6 For 9600
7 For 19200
8 For 38400
9 For 76.8K
A For 115.2K
```

```
Enter Request :
```

Send "A" for 115.2K baud rate, and the module will respond with the reconfigured status of the port, the option menu, and the prompt:

```
Current Module 1 Serial Port Configuration :
+-----+-----+-----+-----+-----+-----+-----+-----+
| Port | Device Name | Baud Rate | Word Size | Stop Bits | Parity | Xon / Xoff |
+-----+-----+-----+-----+-----+-----+-----+-----+
| 4 | Device D | 115.2K | 8 | 1 | None | Off | Off |
+-----+-----+-----+-----+-----+-----+-----+-----+
Exit/Save.....1 Set Stop Bits.....4
Set Baud Rate..2 Set Parity.....5
Set Word Size..3 Set Xon/Xoff.....6
```

Enter Request:

You can now select other options from the menu to reconfigure Port 4. For example, to enable Xon/Xoff handshaking in the receive data direction only, send "6" (Set Xon/Xoff Xmit) in response to the prompt. The module will respond with:

```
Output Flow Control (Xmit) - Xon/Xoff is ( OFF )
Stop/Restart Output Upon Receiving of Xoff/Xon ? (Y/N) :
```

You should then enter "Y" to enable XON/XOFF on transmit or "N" to disable XON/XOFF on transmit. Following our example, enter "N" and the module will respond with:

```
Input Flow Control (Recv) - Xon/Xoff is ( Off )
Xoff/Xon sent based on Buffer - Full/Empty condition ? (Y/N) :
```

You should then enter "Y" to enable XON/XOFF on receive or "N" to disable XON/XOFF on receive. Following our example, enter "Y" and the module will respond with the reconfigured status for Port 4 as follows:

```
Current Module 1 Serial Port Configuration :
+-----+-----+-----+-----+-----+-----+-----+-----+
| Port | Device Name | Baud Rate | Word Size | Stop Bits | Parity | Xon / Xoff |
+-----+-----+-----+-----+-----+-----+-----+-----+
| 4 | Device D | 115.2K | 8 | 1 | None | Off | On |
+-----+-----+-----+-----+-----+-----+-----+-----+
Exit/Save.....1 Set Stop Bits.....4
Set Baud Rate..2 Set Parity.....5
Set Word Size..3 Set Xon/Xoff.....6
```

Enter Request:

If there are no other changes for this port, send "1" (Exit/Save) and the module will respond with:

Save Changes Permanently ? (Y/N) :

If you type "Y", the new configuration for the selected port is stored permanently in non-volatile memory and the module will subsequently power up at the new configuration. If you type "N", the new configuration is stored in RAM and lost once power is removed from the unit. After you type the desired response to the save changes prompt, the module will respond with:

Enter Serial Port Number (? = Help, ENTER = Exit) :

Enter the number of any other port you wish to reconfigure. If there are no other ports, type <ENTER> and the module will return to the main configuration menu (see *Section 16.1*).

16.4 V50/V73/V74/V75/V76/V86/V87 CHANGE PORT DEVICE NAME

By responding to the *Enter Request:* message at the end of the main configuration menu (see *Section 16.1*) with "3" (Change Port Device Name), you can enter a logical or identifying name for each port of to the module. If you are programming the serial port configuration from the control panel (see *Section 16.11*), individual ports for the selected module are identified by device name. The module will respond with:

Enter Port Number (? = Help, ENTER = Exit) :

Type the port number that you wish to reconfigure followed by <ENTER>. If you wish to review the device name status for all ports of the module, type "?". For example, if you enter "4", the module will respond with:

```
Current Module 1 Serial Port Configuration :
+-----+-----+-----+-----+-----+-----+-----+
| Port | Device Name | Baud | Word | Stop | Parity | Xon / Xoff |
|      |             | Rate | Size | Bits |        | Xmit  | Recv  |
+-----+-----+-----+-----+-----+-----+-----+
|   4  | Device D   | 115.2K | 8   | 1   | None  | Off   | On   |
+-----+-----+-----+-----+-----+-----+
Enter Port Device Name (Max. 16 characters)
or ENTER for no change .....
```

Enter the desired port device name up to 16 characters. For example, if you enter "Port 4", the module will respond with:

```
Current Module 1 Serial Port Configuration :
+-----+-----+-----+-----+-----+-----+-----+
| Port | Device Name | Baud | Word | Stop | Parity | Xon / Xoff |
| Rate | Size | Bits | | Xmit | Recv |
+-----+-----+-----+-----+-----+-----+-----+
| 4 | PORT 4 | 115.2K | 8 | 1 | None | Off | On |
+-----+-----+-----+-----+-----+-----+-----+
Enter Port Device Name (Max. 16 characters)
or ENTER for no change .....
```

If the port device name is satisfactory, type <ENTER> and the will respond with:

```
Enter Port Number (? = Help, ENTER = Exit) :
```

Enter the number of any other port you wish to reconfigure. If there are no other ports, type <ENTER> and the module will return the main configuration menu (see *Section 16.1*).

16.5 V50/V73/V74/V75/V76/V86/V87 PORT ID

By responding to the Enter Request: message at the end of the main configuration menu (see *Section 16.1*) with "4" (Port ID), you can program the format of the port identification code that precedes messages or data sent to the host computer while operating in immediate or command reporting modes. This format can either UU:MM,PP or the device name of the I/O port that received the message where UU is the Unit Number, MM is the Module Number, and PP is the Port Number. The module will respond with:

```
Enter Port Number (? = Help, ENTER = Exit) :
```

Type the desired port number followed by <ENTER> or <ENTER> to exit back to the main configuration menu. For example, if you type "1" followed by <ENTER> for Port 1, the I/O module responds with:

```
Current Module 3 Port I.D :
+-----+-----+
| Port | Port I.D |
+-----+-----+
| 1 | 01:03,1 |
+-----+-----+
Disable Port I.D.....1
Use Unit,Module,Port number.....2
Use Device Name.....3
```

```
Select Port I.D (ENTER = no change):
```

Type "1" to disable the Port ID feature, "2" to send the selected port's Unit Number:Module Number,Port Number as the Port ID, or "3" to send the selected port's device name as the Port ID.

16.6 V50/V73/V74/V75/V76/V86/V87 DESIGNATE HOST MODULE LOCATION

By responding to the Enter Request: message at the end of the configuration menu (see *Section 16.1*) with "5" (Designate Host Module Location), you can program the unit number, module number, and port number of the host module to which the module sends completed messages in immediate reporting mode. This option is typically used when multiple host modules are installed in the base unit and/or when using cascaded units. The module will respond with:

```
Current Host Designation is Module.....1:1,1
Enter New Host Unit Number (1-30):
```

Type the desired unit number followed by <ENTER>. The module will respond with:

```
Enter New Host Module Number (1 to 16):
```

Type the desired module number followed by <ENTER>.

NOTE: If you type "0" from this menu, all completed messages are sent to the base unit (i.e., the service port or service modem).

The module will respond with:

```
Enter New Host Port Number (1 - 4):
```

Type the desired port number followed by <ENTER>.

NOTE: If a V71 is the designated host module, the host port number is "1" (default). If the base unit is the designated host module, the host port number is "1" for the service port or "2" for the service modem.

All completed messages received while operating in immediate reporting mode are sent to the designated host port.

16.7 V50/V73/V74/V75/V76/V86/V87 CHANGE MESSAGE TERMINATE CHARACTER

By responding to the Enter Request: message at the end of the configuration menu (see *Section 16.1*) with "6" (Change Message Terminate Character), you can program the message terminating character. The module will respond with:

```
Current Terminate Character is.....0DH
Enter Terminate Character in Hex
or ENTER for no change .....
```

Enter the desired message terminating character in the form of a two-digit hexadecimal character from 00 Hex to 7F Hex. For example, if you enter "0A" (Line Feed), the module will respond with:

```
Current Terminate Character is.....0AH
Enter Terminate Character in Hex
or ENTER for no change .....
```

If the displayed terminate character is satisfactory, type <ENTER> and the module will now return to the main configuration menu (see *Section 16.1*).

16.8 V50/V73/V74/V75/V76/V86/V87 CHANGE MODE OF OPERATION

By responding to the Enter Request: message at the end of the main configuration menu (see *Section 16.1*) with "7" (Change Mode of Operation), you can change the current mode of operation. The module will respond with:

```
MODE OF OPERATION
Full Duplex Mode.....1
Immediate Message Mode.....2
Command Mode.....3
Immediate Data Mode.....4

Current Mode of Operation is..... 1
Enter Mode of Operation :
```

You can now enter the mode of operation that you wish. The module will then return to the main configuration menu (see *Section 16.1*).

16.9 V50/V73/V74/V75/V76/V86/V87 TIME TAG MODE

By responding to the Enter Request: message at the end of the main configuration menu (see *Section 16.1*) with "8" (Time Tag Mode), you can enable or disable time tag. The module will respond with:

```
Current Time Tag Mode is .....Disabled
Enable.....1
Disable.....2
Exit.....X

Enter Selection:
```

Type the appropriate number to enable or disable time tag or "X" for no change. The module will then return to the main configuration menu (see *Section 16.1*).

16.10 V50/V73/V74/V75/V76/V86/V87 CONNECT PORT ID ECHO

The V50/V73/V74/V75/V76/V86/V87 has the Connect Port ID Echo feature. This feature can be enabled or disabled (default). Connect Port ID Echo is enabled or disabled by accessing configuration mode and typing "9" from the main configuration menu. The peripheral module will respond with:

```
Connect Port ID Echo is.....Disabled
Change it? (Y/N) :
```

Type 'Y' to change the current setting or N: to exit back to the main configuration menu.

If Connect Port ID Echo is enabled, the programmed Port ID will be sent to the host computer whenever a Serial port is selected. See *Section 15.1.4* for more information on the Port ID.

Note: Connect Port ID Echo is not functional if the peripheral module is operating in command mode.

16.11 PORT EIA DRIVER PORT ID DRIVER

This item applies to the V86 isolated EIA-484/422 module only. The Port EIA Driver feature is used to select between EIA-485 and EIA-422 serial interface. This configuration change is required in addition to changing the jumper settings on the V86 board to 485 (for EIA-485) or 422 (for EIA-422). The default serial interface for the V86 is EIA-485.

If you type "A" from the main configuration menu (Port EIA Driver), the V86 peripheral module will respond with:

```
Enter Port Number (? = Help, ENTER = Exit) :
```

Type the desired port number (1 to 4) followed by <ENTER>. The V86 will respond with the current state of the selected port's EIA driver and a prompt to change it as follows:

```
Current EIA Line Driver is :RS485
Change it ? (Y/N) :
```

Type "Y" to change the current state of the EIA driver or "N" to retain the current setting.

IMPORTANT: Make sure the EIA Line Driver jumper setting for the selected port match those in the menu. Follow the instructions given in Section 14.4.1(V87), except note the difference in the number of jumpers, the jumper locations and markings.

For example, if you change the serial interface of a selected port from "RS485" to "RS422" in configuration mode as described above, after you exit configuration mode, you must physically remove the V86 module from the M-Series chassis and change the corresponding jumper on the V86 board to 422.

16.12 V50/V73/V74/V75/V76/V86/V87 EXIT

By responding to the Enter Request: message at the end of the configuration menu (see *Section 16.1*) with "X" (Exit), the module will exit configuration and return to operations mode. Send the port select code followed by *Carriage Return* to disconnect from the module.

16.13 CONTROL PANEL CONFIGURATION

NOTE: This section does not apply to units equipped with LEDs.



You can configure the serial parameters for individual ports, mode of operation, terminate character, and host module location from the control panel. To access configuration mode for the module from the control panel, highlight the appropriate module number using the

arrow keys and then press the *SELECT* key. The following menu will appear on the LCD display for a V74 installed as Module X (X = 1 to 16):

```
-----  
• M16-V74 MODULE X •  
• Display Config •  
• Serial Port Config •  
• Mode Of Operation •
```

If you push the  key, the LCD display will respond with:

```
-----  
• Terminate Character •  
• Host Module ID •  
• Exit To Main Menu •  
• •
```

Use the arrow keys ( and ) to highlight the desired feature and then press the *SELECT* key. The "Display Config" selection displays the current configuration. If you select "Serial Port Config", the LCD display will respond with:

```
-----  
• SELECT PORT •  
• Device A •  
• Device B •  
• Device C •
```

NOTE: The names shown here are the same as the device names configured from the host module or service port as described in *Section 16.4*. Use the arrow keys to highlight the desired port and then press the *SELECT* key. The LCD display will respond with:

```
-----  
• BAUD RATE : 9600 •  
• Press SELECT to Save •  
• Press Arrow Keys to •  
• Change Value •
```

If the value of the displayed baud rate is correct, press the *SELECT* key. If not, use the arrow keys to highlight the desired baud rate and then press the *SELECT* key. The front panel follows with menus for parity, stop bits, word size, XON/XOFF handshaking in the receive

direction, XON/XOFF handshaking in the transmit direction, and then back to the "SELECT PORT" menu shown on the previous page. Make any necessary changes for the remaining ports or select "Exit To Main Menu".

IMPORTANT: Be sure to reconfigure the peripheral equipment to match the new configuration of the module.

Changes for other parameters in the main menu are made in a similar manner as serial port configuration. When you are finished, select "Exit To Main Menu" and the module returns to operation mode.

If you change the Message Terminate Character or Mode of Operation from the front panel, the module will respond with:

```
•Mode Of Operation or•  
•Terminate Character •  
•Changed ! Press Any •  
•Key To Reset Unit...•
```

Typing any key results in the M Series base unit and all installed modules resetting.

17 MAINTENANCE

Since there are no adjustments and no moving parts in the M Series, preventative maintenance is unnecessary.

17.1 RETURNS TO THE FACTORY

If you find it necessary to return any component of the M Series system to the factory for warranty work or factory-set changes, follow the procedure listed under *Section 17.2* for repacking. Before you ship your unit, please call BayTech to get a Return Authorization number. BayTech cannot accept warranty or no-charge returns without this number. Ship your unit to the address listed in *Section 18*, - Technical Support.

17.2 REPACKING FOR SHIPPING

If you need to repack your unit for shipping, please choose a heavy cardboard box for packing. Surround your unit with sufficient insulation (a minimum of 2-inches) to withstand the rigors of transport. Be sure to seal the box securely with strapping or packing tape. Masking tape or cellophane tape is not recommended. Please put the Return Authorization number on the outside of the cardboard box.

18 TECHNICAL SUPPORT

In the event that you have problems with the M Series unit, BayTech has a staff of applications engineers on duty to assist you from 7 am to 6 pm (CST or CDT), Monday through Friday.

When you call BayTech Tech Support, please have the following information available to help the applications engineers answer your questions more efficiently:

1. Identify which modules you are using and have the serial number handy (located on the back of the unit).
2. Identify what host device and peripheral devices you have connected to the M Series unit.
3. Determine the type of application you are using (e.g., the reporting and/or sampling method you are using).
4. Identify what cables/adapters you are using, the lengths of the cable and who sold you the cables/adapters.
5. Identify any special options you may have ordered.
6. If possible, have a print-out of the unit's configuration status ready when you call.

Always call BayTech before dismantling your equipment or before returning the M Series unit to BayTech for repair.

**Bay Technical Associates, Inc.
P.O. Box 387, 200 N. Second Street**

Bay Saint Louis, Mississippi 39520 U.S.A.
Phone: 228-467-8231 or 800-523-2702
Web Site: www.baytechdcd.com
Fax: 228-467-4551

19 **FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFACE STATEMENT***

NOTE: This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this manual may cause interference to radio communications. The equipment has been type tested and found to comply within the limits for a Class A digital device pursuant to Subpart J of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user, at his own expense, will be required to take whatever measures may be required to correct the interference.

The user may not under any circumstances other than specified in the manual, under installation and maintenance sections, attempt any service, adjustments, or repairs on this unit. It must be returned to the factory or authorized service agency for all such work.

APPENDIX A

COMMAND SUMMARY

The table below summarizes the various commands supported by the base unit and V50/V73/V74/V75/V76/V86/V87 I/O module(s):

V50/V73/V74/V75/V76/V86/V87 DAC DATA COMMAND SUMMARY	
Command	Description
\$CONFIG<cr>	Full menu configuration command.
\$BTn<cr> (n=1 to 16)	Broadcast. This command puts module n into broadcast mode where data received by the host module is sent to all V74/V75/V76/V87 ports simultaneously.
CBn<cr> (n=1 to 4, 0=all)	Clear Buffer. This command clears all buffered messages from the specified ports.
ID<cr>	Port ID Status. This command reports the current Port ID status for the ports of the selected module. The Port ID can have the format of either UU:MM,PP (Unit:Module, Port) or the device name of the port.
RAn<cr> (n=1 to 4, 0=all)	Report All Buffered Messages. This command reports all messages in the buffer at the time the command was sent. If there are no messages, <lf> is sent to the host controller.
RBn<cr> (n=1 to 4, 0=all)	Report All Buffered Data. This command reports all data in the buffer at the time which the command was received with no regard for messages. If there is no data, <lf> is sent to the host controller.
* RESET<cr>	Reset. This command instructs the entire M Series system to do a software reset.
RSn<cr> (n=1 to 4, 0=all)	Report Single Message. This command reports a single buffered message. If there is no message, <lf> is sent to the host controller.
RT<cr>	Read Time. This command requests the base unit to send the current date and time.
SRn<cr> (n=1 to 4, 0=all)	Stop Report. This command stops data flow from an RBn or RAn command.
ST HH:MM:SS,MM/DD/YY<cr>	Set Time. This command programs the date and time of the base unit's time-of-day clock.
<p>NOTE: Multiple V74/V75/V76/V87 ports are selected using 2 formats. Examples: RA1,2,3,4<cr> and RA0<cr>. * The RESET<cr> command <u>must</u> be issued from the service port or service modem.</p>	

APPENDIX B

EPROM UPGRADES AND MEMORY EXPANSION

B.1 V71 EPROM UPGRADE

You will receive one EPROM (chip with label) for each module to be upgraded.

The materials you will need to supply are:

- Phillips-head screwdriver
- IC DIP extractor or a pair of curved needle-nose pliers

1. **IMPORTANT:** Remove power from the unit by depressing the power switch on the front of the unit to OFF. Also remove power cord from the AC outlet.
2. Remove the appropriate module by loosening the 2 straight slot screws that attach the connector board I/O module to the chassis and then pulling the module out.
3. Refer to *Appendix D.1 (V71 Mechanical Layout)* and locate socket *U2*.
4. Remove existing EPROM from socket *U2* with IC extractor or needle-nose pliers. Gradually loosen each side of the chip, alternating pliers from side to side, so as not to bend chip pins. Pull loosened EPROM all the way out.
5. Install the new EPROM into socket *U2*. The EPROM is notched; the notch on the EPROM should line up with the notch on the socket. Be careful not to bend any of the pins. Make sure none of the pins miss their sockets.
6. Re-install the V71 and apply power to the unit. The upgrade is now complete. Before you begin operations, check the configuration status to make certain it matches your application. See *Section 11* for complete instructions.

B.2 V50/V73/V74/V75/V76/V86/V87 EPROM UPGRADE

You will receive one EPROM (chip with label) for each module to be upgraded. The materials you will need to supply are:

Phillips-head screwdriver

IC DIP extractor or a pair of curved needle-nose pliers

1. **IMPORTANT:** Remove power from the unit by depressing the power switch on the front of the unit to OFF. Also remove power cord from the AC outlet.
2. Remove the appropriate module by loosening the 2 straight slot screws that attach the connector board I/O module to the chassis and then pulling the module out.
3. Refer to the high speed module mechanical layout (see *Appendix D.2*) and locate socket U3. Remove existing EPROM from the appropriate socket with IC extractor or needle-nose pliers. Gradually loosen each side of the chip, alternating pliers from side to side, so as not to bend chip pins. Pull loosened EPROM all the way out.
4. Install new EPROM into the appropriate socket. (Make certain you are installing the correct EPROM into the correct module by referring to the label on the EPROM). The EPROM is notched; the notch on the EPROM should line up with the notch on the socket. When installing the new chips, be careful not to bend any of the pins.
5. Re-install the module(s) and apply power to the unit. The upgrade is now complete.

Before you begin operations, check the configuration status to make certain it matches your application. If configuration changes (baud rates, handshaking, etc.) are required, you must make these changes in the configuration mode. See *Section 16* for complete instructions.

B.3 M03 MEMORY MODULE EPROM UPGRADE

You will receive one EPROM (chip with label) to upgrade the M03 memory module. The materials you will need to supply are:

Phillips-head screwdriver

IC DIP extractor or a pair of curved needle-nose pliers

1. **IMPORTANT:** Remove power from the unit by depressing the power switch on the front of the unit to OFF. Also remove power cord from the AC outlet.
2. Remove the M03 module by loosening the 2 straight slot screws that attach the connector board of the module to the chassis and then pulling the module out.
3. Refer to the memory module mechanical layout (see *Appendix D.3*) and locate socket *U2*.
4. Remove the existing EPROM from *U2* with IC extractor or needle-nose pliers. Gradually loosen each side of the chip, alternating pliers from side to side, so as not to bend chip pins. Pull loosened the EPROM all the way out. Install the new EPROM into *U2*. The EPROM is notched; the notch on the EPROM should line up with the notch on the socket. When installing the new chips, be careful not to bend any of the pins. Make sure none of the pins miss their sockets.
6. Re-install the module(s) and apply power to the unit. The upgrade is now complete.

B.4 M03 MEMORY MODULE BUFFER EXPANSION SIMM INSTALLATION

Each memory expansion upgrade kit provided by BayTech includes either a 1MB x 8 or 4MB x 8 SIMM (single in-line memory module). You may also use third party SIMMs. The total buffer size can range from 0MB to 16MB with a minimum of 1MB required for operation. Please use the following instructions when installing memory expansion SIMMs.

You will need the following equipment:

1 x phillips-head screwdriver.

1. **IMPORTANT:** Remove power from the unit by depressing the power switch on the front of the unit to OFF. Also remove power cord from the AC outlet.
2. Remove the M03 module (if already installed) by loosening the two straight-slot screws that secure it to the unit chassis and pulling the module out.
3. The memory board has four sockets for memory expansion. These straight-line sockets are marked *U15*, *U16*, *U17* and *U18* (refer to *Appendix D.3*). Note that one or more of these sockets can already have a memory module installed.
4. *U15* must always be occupied by either a 1MB or 4MB SIMM. Any new memory expansion module(s) can be installed in any of the remaining sockets (i.e., *U16*, *U17*, or *U18*) and need not be installed in any specific order.

5. Hold the memory expansion module in your hand so the card edge connector is facing down.

IMPORTANT: Pin 1 of the memory module is marked and should be positioned to the left of the module as referenced in *Appendix D.3*.

WARNING: If module is plugged in backwards, it will be damaged and become inoperable.

6. Line up the connector of the memory expansion module with the socket. Push down on the memory expansion module until it is firmly seated in the socket.
7. If a memory expansion module needs to be removed, pull straight up and away from the socket.
8. Once memory expansion has been completed, you can install the M03 memory module into the unit chassis. Apply power to the unit. The upgrade is now complete.
9. To verify memory upgrade, enter the configuration mode of a V71 host module. The installed memory is displayed in the main configuration menu.

APPENDIX C


V71 LINE INTERFACE JUMPER SETTING INSTRUCTIONS

The V71 supports EIA-232, EIA-422, and current loop line interface. Line interface is programmed by accessing the configuration mode (see *Section 11*). From the factory, the DB-25 port and the *EIA-232* RJ-45 port are the communication ports when EIA-232 line interface is selected. The DB-25 port is the communication port if current loop line interface is selected. The *EIA-422/485* RJ-45 port is the communication port when EIA-422 line interface is selected. You can change the DB-25 port to support EIA-422 line interface by changing a jumper setting on the V71 board. If you wish to change the jumper setting to allow the DB-25 port to support EIA-422 line interface, use the following procedure:

1. **IMPORTANT:** If the V71 is installed in the M Series chassis, remove power from the unit by positioning the on/off switch to the off position and removing the power cord from the AC outlet. Unscrew the two straight slot screws securing the V71 to the back panel and pull the module out.
2. Refer to *Appendix D.1* and locate jumper *JP4*. The board is marked *232* for EIA-232 line interface and *422* EIA-422 line interface. *JP4* has six pins and a dual shunt jumper. The center two pins are common pins. To change the existing jumper setting to support the desired line interface, position the dual shunt jumper so that it connects the two common pins and the two *232* pins or the two *422* pins.
3. Install the V71 by sliding it along the card edges along the grooves in the module slot. The V71 has a card-edge connector that fits into a receptacle inside the M Series chassis. Apply a moderate amount of pressure to the connector board until you feel the card edge connector slip into the receptacle inside. Tighten the two straight slot screws to secure the V71 to the unit chassis.


APPENDIX D MECHANICAL LAYOUTS

D.1 V71 MECHANICAL LAYOUT

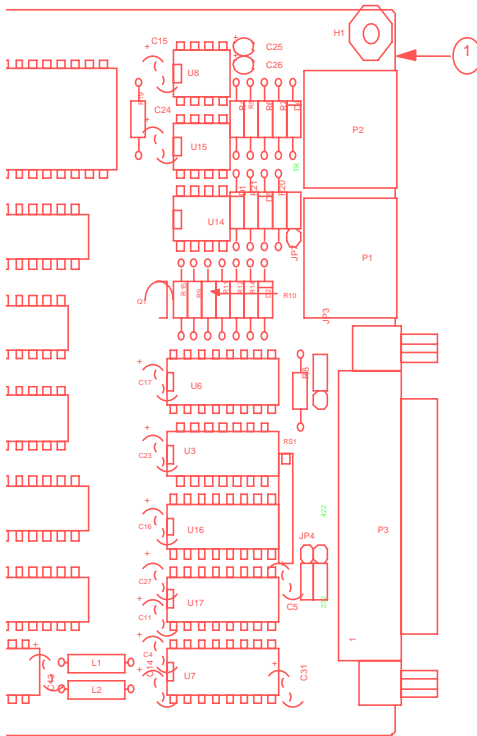

D.2 SERIAL MODULE MECHANICAL LAYOUT (V75)

D.3 M03 MEMORY MODULE

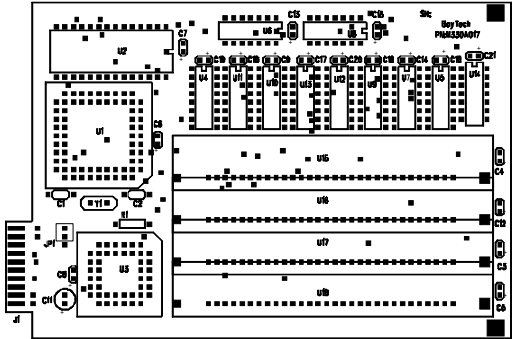

APPENDIX E

INDEX

4-wire cabling 53

A _____

Active channels 8-10

Active receive 54, 55, 80, 81

Active transmit 53-55, 80

Adapters 2, 3, 28, 29, 48, 69, 77, 113

ADM-1 3, 8-12, 14, 30

Analog-to-digital 3, 8, 30

ASCII 14, 44, 56, 61, 68

Asynchronous 24, 44, 50, 68, 72

B _____

Basic operation 32, 35, 57

Baud rate 6, 7, 13, 39, 43, 44, 56, 58, 62, 63, 65, 67, 68, 86,
102-104, 111

Bipolar 9, 10

BNC 30

Broadcast mode 21, 97, 98, 115

Buffer 14, 16, 19-21, 66, 68, 87, 90, 92, 94-96, 104, 115, 119

Buffer expansion 119

Busy message 93

C _____

Cabling 2, 1-3, 27, 43, 45, 46, 48, 51-53, 55, 69, 70, 73, 75, 76, 79, 80, 82, 83, 84

Calibrate 14

Case sensitive 59, 100

CDT 113

Channel 1, 4, 8, 9, 14-16, 18, 19, 22-24

Clear 14, 16, 17, 19, 21, 28, 73, 87, 90, 94, 97, 115

Clear buffer command 87, 90, 97

Commands 1, 5, 10, 13-17, 19-21, 33, 42, 43, 56-58, 90, 93, 94, 95, 96, 115

Configuration 2, 1, 5-13, 22, 24, 25, 32-45, 51, 56-65, 67, 85, 86, 90, 99-111, 113, 115-117, 120, 121

Configuration 3, 28, 44, 45, 48, 50, 68, 69, 72, 76, 78

Contact 2, 4, 17, 26, 27

Control panel 1, 25, 65, 67, 105, 110

CRM-1 4, 10, 15, 16, 30

CST 113

CTS 28, 44, 46, 48, 68, 70, 73

Current loop 1, 22, 30, 43-45, 53-55, 63, 66, 68, 80, 121

D _____

DAC 1, 2, 1, 7, 8, 10, 11, 21, 22, 27, 43, 46, 59, 60, 66, 113

Data commands 1, 13, 14, 33, 43, 56-58, 93, 94, 95-96

Data format 9, 14

Data message 8, 9

Data presentation 13-15, 17, 35, 98

Data Terminal Ready 28, 73

Data transfer 66

Data transfer 7, 13-15, 34, 36-38, 40-42, 115

DB-25 2-4, 28, 30, 43-49, 51-55, 69, 70, 76, 121

DB-25 5

DCD 28

DCE 46, 47

DE-9 2, 3, 28, 48, 49, 69, 70, 76

De-energize 11, 16, 57

Debounce delay 12, 17

Decimal 9, 14
Default 3, 6, 13, 21, 23, 25, 34, 39, 42, 44-46, 51, 56, 57, 59,
67, 74, 80, 82, 83, 86, 87, 89, 94, 97, 99, 107
Designated host 9, 12-14, 32, 38, 67, 86, 88, 92, 93, 98, 107,
108
Device name 67, 68, 85, 86, 88, 90, 98-106, 115
Differential 3, 4, 9, 10, 44, 68
Dimensions 24, 44, 68
Disable 10, 11, 28, 46, 48, 51, 52, 67, 72, 75, 82, 86, 104,
106, 109
Disconnect 13, 41, 58, 96, 109
Diskette 26, 58, 99
DOS 26
DSR 28, 70
DTE 3, 46, 47
DTR 28, 44, 46, 48, 68, 70, 73
Dumb Terminal 58, 99
Duration counter 17
Dynamic configuration 8, 10-12, 33, 42

E _____

EIA-232 1, 3, 6, 12, 20, 22, 24, 28, 30, 36, 39, 40, 43-46, 48,
56, 60, 62, 63, 66, 68, 70, 71, 73, 74, 75-77, 121
EIA-422 30, 43-45, 51-53, 63, 66, 68, 73-75, 77, 82, 83, 85,
121
Emulation 26, 58, 99
Enable 8, 10, 11, 28, 46, 48, 51-53, 67, 70, 73, 82, 86, 103,
104, 109
Energize 11, 16, 57
Enter 6-12, 26, 39-41, 59-64, 100-109, 120
Environment 23, 114
Eprom upgrade 116-118
Event counter 17-19, 30
Event duration time 17
Expansion slots 22, 23, 32
External power 27, 73, 74

F _____

Factory default 45, 56, 74, 86, 87
FAX 113
FCC 114
Format 9, 14, 34, 42, 86, 94-98, 106, 115
Front panel 5, 22, 27, 32, 34-37, 43, 44, 56, 58, 64, 65, 85, 99,
111
Full duplex communication 13, 20, 66, 92

G,H _____

Handshaking 13, 43, 44, 52, 53, 56, 58, 62, 65, 68, 86, 102,
103, 111, 117
Hex 13, 57, 67, 68, 87, 89, 98, 108
Host device 3, 42, 87-89, 92, 99, 113
Host module 1, 5-7, 9, 12-14, 21, 25, 30, 32, 34-36, 38, 39, 41,
58, 61, 66-68, 85-93, 94-99, 107, 110, 115, 120
Host port 100, 102, 107, 108
Humidity 23

I_____

IBM 2, 28, 49, 58, 89, 99
IC 116-118
Identification block 59, 100
Input Flow Control 104
Installation 2, 22, 26, 30, 31, 48, 69, 114, 119
Interface 1, 3, 7, 22, 27, 30, 43-46, 48-56, 60, 62, 63, 65, 68,
69-77, 82, 83, 85, 114, 121
Isolated input 11

J,K,L_____

Jumper 45, 52, 74, 80-83, 121
Laserjet 2
Latch buffer 19
Latch polarity 12, 17
LCD display 32, 65, 110, 111
LED 27, 32, 35, 36
Line interface 7, 43-46, 48, 51-56, 62, 63, 65, 121
Logical name 12, 13

M_____

M Series 1, 2, 1, 5, 6, 22, 26, 30-34, 38, 40, 43, 56, 57, 60, 64,
66, 86-88, 101, 111-113, 115, 121
Main configuration menu 59-64, 100-102, 104-106, 108, 109,
120
Main unit 1, 5-7, 32, 37, 88
Maintenance 112, 114
MB 1, 22
Mechanical layouts 122
Memory module 1, 22, 30, 31, 59, 118-120, 124
Menu 1, 5, 7-12, 22, 33, 37, 38, 40, 41, 44, 56, 57, 59-65, 85,
100-111, 115, 120
Message terminating character 12, 85, 87-89, 108
Mode 6-13, 20, 21, 33, 35-41, 45, 51, 56-60, 63-68, 85-92, 94-
102, 107-111, 115, 117, 120, 121
Mode of operation 12, 13, 66-68, 87, 89, 100-102, 109-111

Modular connectors 3, 28, 48, 50, 69, 72, 80
Module installation 30
Module number 6, 13, 21, 35, 57, 58, 65, 67, 68, 86, 89-93,
96, 99, 105, 107, 110
Mounting 24
Multiplexing 2, 13, 20, 66, 88, 89, 91, 93

N,O,P _____

Non-verbose mode 57
Non-volatile memory 25, 44, 61, 67, 104
Non-volatile storage 23
Normally closed 4, 15
Normally open 4, 15
Number of samples to average 8
Operation 1, 12, 13, 20, 32, 35, 56, 57, 66-68, 85, 87-100 98-
102, 109-111, 114, 119
Optional 1, 22, 24, 27, 32, 66, 68, 95
Output flow control 104
Parity 6, 13, 24, 39, 43, 44, 56, 58-60, 62, 63, 65, 67, 68, 86,
98-105, 111
Passive Receive 53-55, 80, 81
PDI-1 5, 11, 12, 17-19, 30
PDI-2 5, 11, 12, 17-19, 30
Peripheral device 20, 66, 87, 89
Peripheral port 88
Pinout 70, 73, 82
Port identification number 20
Port logical name 12, 13
Port select code 6, 7, 13, 21, 34, 39, 42-44, 56-61, 64, 89, 90,
91-99, 109
Port select sequence 87, 89, 92
Power cord 27, 31, 74, 83, 116-119, 121
Power switch 27, 31, 116-119
Protective Ground 46, 52

Q,R _____

Rack-mount 24
RAM 102
Read time 33, 34, 115
Readme 26
Receive buffer 90
Relay status 15, 16
Report interval 9
Report start time 9
Reporting method 9, 13, 17, 20, 66
Reporting setup 8-12
Reset 17, 19, 33, 34, 101, 111, 115
Reset command 34
Return authorization 112
RJ-45 adapters 48
RJ-45 cabling 46, 48, 51
RTS 28, 46, 48, 70

S _____

Sample interval 8
Sample rate 8
Sample start time 8
Sampling method 8, 113
Sampling setup 8, 11, 12, 14
Schedule 8-11, 13, 15, 17, 18
Select code 6, 7, 13, 21, 34, 39, 42-44, 56-61, 64, 89-99, 109
SELECT key 37, 65, 110, 111
Select sequence 13, 56, 57, 87, 89, 92
Serial interface 43, 69, 73-77, 82, 83, 85
Serial number 113
Serial port configuration 7, 12, 13, 56, 59, 60, 62-65, 67, 85,
86, 99-105, 111
Service modem 1, 22, 25, 27, 32-36, 39-41, 107, 115

Service port 1, 2, 5-7, 22, 24, 25, 27-29, 32-36, 39-41, 56, 58,
59, 61, 64, 67, 85, 98-100, 107, 109, 115
Set host address 9

Setup 8-12, 14
Signal ground 28, 46, 48, 51, 52, 70, 73, 82
Single channel bus speed 23
Single-ended 3, 4, 10
Specifications 23, 44, 56, 67
Start 8, 9, 11, 17, 91, 95
Status 1, 7, 8, 10-12, 15, 16, 19, 32, 35, 59, 60, 62-65, 96,
99-105, 113-117
Stop bits 13, 43, 44, 56, 62, 63, 65, 67, 68, 86, 101-104, 111
Storage 23
Switch 1, 5, 11, 22, 27, 30-32, 66, 74, 83, 116-119, 121

T_____

Technical Support 26, 112, 113
Telex 113
Temperature 23
Term 17, 26, 58, 99
Terminal 1, 3, 6, 22, 26, 28, 39, 40, 43, 45, 46, 49, 51, 56, 58,
59, 70, 73, 89, 92-100
Terminal emulation program 26, 58, 99
Terminating character 9, 12, 13, 20, 57, 66, 67, 85, 87-89, 91,
93, 107
Time tag 9, 12-16, 18, 19, 66-68, 85, 88, 90, 98, 100, 102, 109
Tran-x 2, 73, 74
Transition 17

U,V_____

Unipolar 9, 10

Unit number 7, 25, 32, 35, 37, 38, 40, 41, 57, 58, 60, 67, 68,
86, 89, 90, 93, 99, 106, 107

Upgrade 31, 81, 116-120

User-programmable 25, 32, 44, 56, 68, 85

VAC 23, 27

Verbose mode 57

Voltage 10, 14

Voltage range 10

Volts 10, 28, 46

W_____

Warranty 24, 112

Weight 24

Wiper 4

Word size 6, 7, 13, 39, 43, 44, 56, 58, 59, 62, 63, 67, 68, 86,
99, 100, 102-104, 111

X,Y,Z_____

XON/XOFF handshaking 13, 43, 52, 53, 56, 58, 62, 65, 86,
102, 103, 111

NOTES

NOTES