



Modular Power Units

Caution: any devices connected to the power strip will be affected.


LCD Network Controller

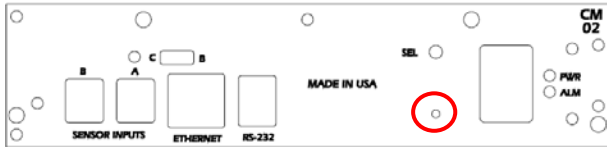


LCD Serial Controller

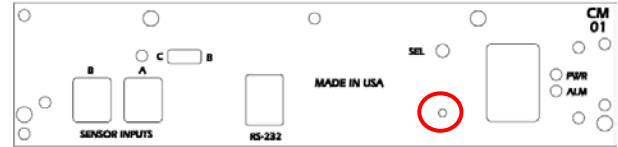

LED Network Controller

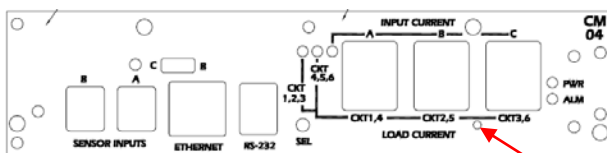

LED Serial Controller

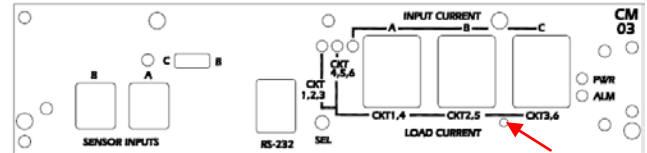

The above controllers have a small hole, Red circle or arrow, in the faceplate to insert a paperclip or other small probe to press a micro switch.

As indicated by a red circle or red arrow, perform the following steps.

1. Insert a paper clip; press and hold; remove power from unit for 10 seconds.
2. Continue pressing switch and restore power to unit. There may be a short beep and the LEDs may blink off for several seconds than back on.
3. Remove the paper clip. If neither of the beep or LED blink in step two, wait 10 seconds and remove paper clip
4. Connect to the serial port. A good reset will not have a login prompt.
5. If unit ask for a username, type (root) without the brackets, press 'Enter'. For password type (baytech) without the brackets, press 'Enter'. Default username and password are both lower case.

Universal RPC login: root

Password: baytech (Password will not echo character)

Caution: any devices connected to the power strip will be affected.