

Reset Procedure

On the front panel is a small hole next to the LED. Perform the following steps:

- Insert paper-clip or similar object into the hole
- Press the micro-switch and hold until the last step.
- Remove power from the unit and wait 15 seconds.
- Restore power to the unit and wait 15 seconds.
- Remove paperclip. Unit is at factory default settings.