

DS72 Factory reset Procedure

1. Remove the module from the chassis (with the unit powered down).
2. Hold the module with the chip side up and the faceplate towards you.
3. Locate jumper JP1.
4. Move the jumper from pins 1 and 2 to pins 2 and 3.
5. Put the module back in the chassis and power up for 15 seconds.
6. Take the module back out and replace the jumper to the original position.

The module will now be reset to factory default.

