

F Series

There are two pieces on the F-RPC that you can reset to default. The first is the F host module itself. There are separate host modules that can retain usernames and passwords that may need to be reset. These modules are the F62, F72 and F74.

F62 and F72

1. Remove the module from the chassis (with the unit powered down).
2. Hold the module with the chip side up and the faceplate towards you.
3. Locate a 3-pin jumper, called JP1 on the F72 module or JMP5 on the F62 module.
4. Move the jumper from pins 1 and 2 to pins 2 and 3.
5. Put the module back in the chassis and power up for 10 seconds.
6. Take the module back out and replace the jumper to the original position.

The module will now be reset to factory default.

F74

1. Remove the module from the chassis (with the unit powered down).
2. Hold the module with the chip side up and the faceplate towards you.
3. Locate jumper JP10 (this is a two-pin jumper.)
4. Place "a" jumper on the two pins.
5. Put the module back in the chassis and power up for 10 seconds.
6. Turn the power off and remove the jumper.
7. Turn the power back on.

The module will now be reset to factory default.

F-RPC Chassis

The next step to resetting the F-RPC unit to factory default is to reset the power side of the box. Use the following instructions:

1. Remove the top lid of the F-RPC chassis.
2. Locate jumper JP1 in the center of the main module board (this is a two-pin jumper).
3. Place "a" jumper on the two pins and power the unit up for 10 seconds.
4. Turn the power off and remove the jumper.
5. Turn the power back on.

The module will now be reset to factory default.

Any questions or concerns arising from this procedure should be directed to the BayTech support team at:

support@baytech.net

Bay Technical Associates

200 North Second St.

Bay St. Louis, MS 39520

Domestic: 800.523.2702

International: 228.467.8231