


RPC 3, RPC 5

To reset the unit to factory default:

1. Turn off the power to the RPC3
2. Remove the lid
3. Locate JP1 on the Ethernet board (as shown in the picture)
4. The jumper is placed on pins 1 and 2, move it to 2 and 3
5. On jumper JMP9 on the controller board, place a jumper on the 2 pins
6. Turn power on for 10 seconds
7. Turn power off
8. Return JP1 to its original position and remove jumper on JMP9.

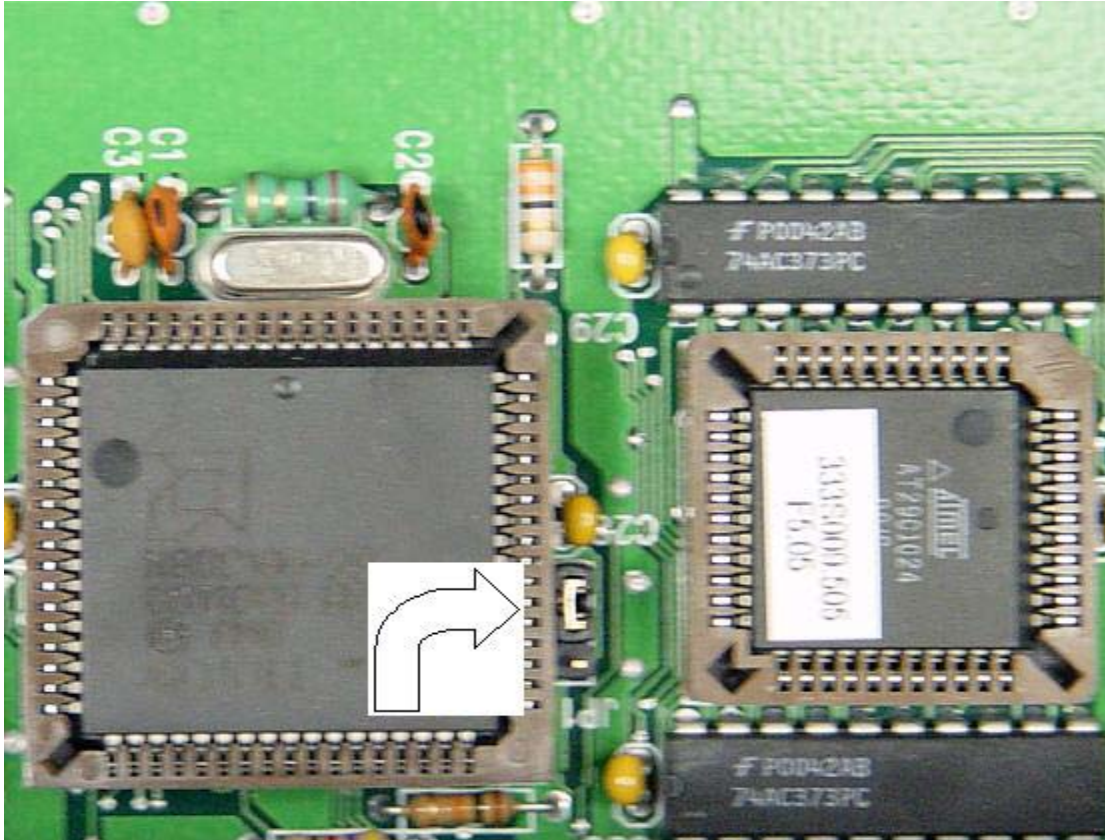

RPC 4

To reset the password on the RPC-4 you will have to reset the unit to factory default. You can do that by using the following Instructions...

1. Turn off the power to the RPC4
2. Remove the lid
3. Locate JP9 or JP1 the jumper directly to the right of the RPC-4 FW chip
4. Place a jumper on the two pins
5. Turn power on for 10 seconds
6. Turn power off
7. Remove the jumper

The unit will not be reset to factory default.

Any questions or concerns arising from this procedure should be directed to the BayTech support team at:

support@baytech.net

Bay Technical Associates

200 North Second St.

Bay St. Louis, MS 39520

Domestic: 800.523.2702

International: 228.467.8231